

# ***STANDARD HORIZON***

*Nothing takes to water like Standard Horizon*

## **HX870E**

6 Watt VHF/FM

Floating Class D DSC Marine Transceiver with GPS

---

## **Owner's Manual**



# TABLE OF CONTENTS


Quick Reference Guide.....	4	9.4 ALL SHIPS CALL.....	41
Introduction.....	5	9.4.1 Transmitting an All Ships Call.....	41
<b>1 GENERAL INFORMATION.....</b>	<b>6</b>	9.4.2 Receiving an All Ships Call.....	42
<b>2 PACKING LIST.....</b>	<b>6</b>	<b>9.5 INDIVIDUAL CALL.....</b>	<b>43</b>
<b>3 OPTIONAL ACCESSORIES.....</b>	<b>7</b>	9.5.1 Setting up the Individual / Position Call Directory.....	43
<b>4 ABOUT THIS RADIO.....</b>	<b>8</b>	9.5.2 Setting up the Individual Call Reply.....	44
4.1 ABOUT VHF RADIO.....	8	9.5.3 Enabling the Individual Call Acknowledgment.....	45
4.2 DISTRESS AND HAILING (CHANNEL 16).....	8	9.5.4 Transmitting an Individual Call.....	45
4.3 CALLING ANOTHER VESSEL (CHANNEL 16 OR 9).....	9	9.5.5 Receiving an Individual Call.....	47
4.4 MAKING TELEPHONE CALLS.....	10	9.5.6 Setting up the Individual Call Ringer.....	49
4.5 BRIDGE CHANNELS 13 AND 67.....	10	<b>9.6 GROUP CALL.....</b>	<b>50</b>
<b>5 GETTING STARTED.....</b>	<b>11</b>	9.6.1 Setting up a Group Call.....	50
5.1 BATTERIES AND CHARGERS.....	11	9.6.2 Transmitting a Group Call.....	52
5.1.1 Battery Safety.....	11	9.6.3 Receiving a Group Call.....	54
5.1.2 Rechargeable Battery Installation/Removal.....	13	9.6.4 Setting up the Group Call Ringer.....	55
5.1.3 Battery Life Information.....	13	<b>9.7 POSITION REQUEST.....</b>	<b>56</b>
5.1.4 Using the SBH-12 Charger Cradle.....	14	9.7.1 Transmitting a Position Request to Another Vessel.....	56
5.1.5 Installation of the SBT-13 Battery Case.....	15	9.7.2 Receiving a Position Request.....	58
5.2 BELT CLIP INSTALLATION / REMOVAL.....	16	9.7.3 Manual Input of Position Information.....	59
5.3 ATTACHING AN ANTENNA.....	16	9.7.4 SETTING UP POSITION REPLY.....	59
5.4 CHECKING GPS SIGNAL (GPS STATUS DISPLAY).....	17	9.7.5 Setting up a Position Request Ringer.....	60
5.5 CHANGING THE GPS TIME.....	18	<b>9.8 POSITION REPORT.....</b>	<b>61</b>
5.6 CHANGING THE TIME LOCATION.....	19	9.8.1 Transmitting a DSC Position Report Call.....	61
5.7 CHANGING THE TIME FORMAT.....	19	9.8.2 Receiving a DSC Position Report Call.....	63
<b>6 CONTROLS AND INDICATORS.....</b>	<b>20</b>	9.8.3 Navigating to the Reported Position.....	63
<b>7 BASIC OPERATION.....</b>	<b>23</b>	9.8.4 Saving the Reported Position as a Waypoint.....	64
7.1 TURNING ON AND OFF THE TRANSCEIVER.....	23	9.8.5 Setting up a Position Report Ringer.....	64
7.2 RECEPTION.....	23	<b>9.9 POLLING CALL.....</b>	<b>65</b>
7.3 TRANSMISSION.....	23	9.9.1 Transmitting a Polling Call to a Vessel.....	65
7.3.1 Transmit Power.....	24	9.9.2 Receiving a Polling Call.....	66
7.4 TRANSMIT TIME-OUT TIMER (TOT).....	24	<b>9.10 AUTO POS POLLING.....</b>	<b>67</b>
7.5 SIMPLEX/DUPLEX CHANNEL USE.....	25	9.10.1 Setting up the Polling Operation.....	67
7.6 INTERNATIONAL, USA, AND CANADA MODE.....	25	9.10.2 Setting up the Polling Time Interval.....	67
7.7 MULTI WATCH (TO PRIORITY CHANNEL).....	26	9.10.3 Selecting Vessels to be Automatically Polled.....	68
7.7.1 Setting up the Multi Watch Operation.....	26	9.10.4 Enabling/Disabling Auto POS Polling.....	69
7.7.2 Starting the Dual Watch.....	26	<b>9.11 DSC TEST.....</b>	<b>70</b>
7.8 SCANNING.....	27	9.11.1 Programming MMSI into Individual Directory.....	70
7.8.1 Selecting the Scan Type.....	27	9.11.2 Transmitting a DSC Test to Another Vessel.....	70
7.8.2 Programming Scan Memory.....	28	9.11.3 Receiving a DSC Test Call.....	71
7.8.3 Memory Scanning (M-SCAN).....	28	<b>9.12 DSC LOG OPERATION.....</b>	<b>72</b>
7.8.4 Priority Scanning (P-SCAN).....	29	9.12.1 Reviewing and Resending a Transmitted Logged Call.....	72
7.9 PRESET CHANNELS: INSTANT ACCESS.....	29	9.12.2 Reviewing a Logged DSC Distress Call.....	73
7.9.1 Programming.....	29	9.12.3 Reviewing Other Logged Calls.....	73
7.9.2 Operation.....	30	9.12.4 Deleting Logged Calls from the DSC Log Directory.....	74
7.9.3 Deletion.....	30	<b>9.13 DSC LOOP BACK OPERATION.....</b>	<b>75</b>
7.10 MOB OPERATION.....	31	<b>10 NAVIGATION.....</b>	<b>76</b>
7.11 VOX OPERATION.....	31	<b>10.1 WAYPOINT OPERATION.....</b>	<b>76</b>
7.12 OPERATION MENU.....	32	10.1.1 Starting and Stopping Navigation.....	76
<b>8 GPS OPERATION.....</b>	<b>33</b>	10.1.2 Setting Up Waypoint Directory.....	78
8.1 DISPLAYING POSITION INFORMATION.....	33	10.1.3 Selecting the Display Range.....	82
8.1.1 GPS Information Compass Display.....	33	10.1.4 Selecting the Arrival Range.....	82
8.1.2 GPS Information Numerical Display.....	33	<b>10.2 ROUTING OPERATION.....</b>	<b>83</b>
8.2 CHECKING GPS STATUS.....	34	10.2.1 Setting Up Routing Directory.....	83
8.3 GPS LOGGER OPERATION.....	34	10.2.2 Starting and Stopping Route Navigation.....	85
<b>9 DIGITAL SELECTIVE CALLING (DSC).....</b>	<b>35</b>	10.2.3 Changing the Destination.....	86
9.1 GENERAL.....	35	10.2.4 Selecting Automatic or Manual Routing.....	86
9.2 MARITIME MOBILE SERVICE IDENTITY (MMSI).....	35	<b>11 GM OPERATION.....</b>	<b>87</b>
9.2.1 What is an MMSI?.....	35	<b>11.1 SETTING UP GM OPERATION.....</b>	<b>87</b>
9.2.2 Programming the MMSI.....	36	11.1.1 Setting Up Group Directory.....	87
9.3 DSC DISTRESS CALL.....	37	11.1.2 Setting Up the Polling Time Interval.....	88
9.3.1 Transmitting a DSC Distress Call.....	37	11.1.3 Enabling/Disabling Transmission during GM Operation.....	89
9.3.2 Receiving a DSC Distress Call.....	39	<b>11.2 STARTING GM OPERATION.....</b>	<b>89</b>

# TABLE OF CONTENTS

11.2.1 Transmitting a DSC Call to a Group Member .....	90	16.2 ATIS CH GROUP .....	118
11.2.2 Starting Navigation to a Group Member .....	90	<b>17 MAINTENANCE</b> .....	<b>119</b>
<b>12 CONFIGURATION SETUP</b> .....	<b>91</b>	17.1 REPLACEMENT PARTS .....	119
12.1 DIMMER ADJUSTMENT .....	91	17.2 FACTORY SERVICE .....	119
12.2 LAMP .....	91	17.3 TROUBLESHOOTING CHART .....	120
12.3 DISPLAY CONTRAST .....	92	<b>18 CHANNEL ASSIGNMENTS</b> .....	<b>121</b>
12.4 KEY BEEP .....	92	<b>19 WARRANTY</b> .....	<b>123</b>
12.5 BATTERY SAVER .....	93	<b>20 CONNECTING A USB DATA TERMINAL TO THE PC</b> .....	<b>125</b>
12.6 STROBE LED .....	93	<b>21 SPECIFICATIONS</b> .....	<b>126</b>
12.6.1 Emergency LED .....	93	21.1 GENERAL .....	126
12.6.2 Water Hazard LED .....	94	21.2 TRANSMITTER .....	126
12.7 SOFT KEYS .....	95	21.3 RECEIVER (for Voice and DSC) .....	127
12.7.1 Key Assignment .....	95	21.4 GPS .....	127
12.7.2 Key Timer .....	96	21.5 NMEA OUTPUT .....	127
12.8 RESET .....	96	SYMBOL PLACED ON THE EQUIPMENT .....	127
12.9 SUMMARY OF THE CONFIGURATION SETUP .....	97		
<b>13 CHANNEL FUNCTION SETUP</b> .....	<b>98</b>		
13.1 CHANNEL GROUP .....	98		
13.2 SCAN MEMORY .....	98		
13.3 SCAN TYPE .....	98		
13.4 SCAN RESUME .....	99		
13.5 WATCH TYPE .....	99		
13.6 PRIORITY CHANNEL .....	99		
13.7 SUB CHANNEL .....	100		
13.8 CHANNEL NAME .....	101		
13.9 NOISE CANCELLATION .....	102		
13.10 VOX OPERATION .....	102		
13.10.1 Enabling the VOX Operation .....	102		
13.10.2 Setting the VOX Level .....	103		
13.10.3 Setting the VOX Delay Time .....	103		
13.11 AUDIO FILTER OPERATION .....	104		
13.12 SUMMARY OF THE CANNEL FUNCTION SETUP .....	105		
<b>14 DSC SETUP</b> .....	<b>106</b>		
14.1 INDIVIDUAL DIRECTORY .....	106		
14.2 INDIVIDUAL REPLY .....	106		
14.3 INDIVIDUAL ACKNOWLEDGMENT .....	106		
14.4 INDIVIDUAL RINGER .....	106		
14.5 GROUP DIRECTORY .....	106		
14.6 AUTO POS POLLING .....	107		
14.7 AUTO POS INTERVAL .....	107		
14.8 CHANNEL SWITCH TIMER .....	107		
14.9 NO ACT (ACTION) TIMER .....	108		
14.10 WAIT TIME FOR POSITION FIX .....	108		
14.11 DSC BEEP .....	109		
14.12 SUMMARY OF THE DSC SETUP MENU .....	109		
<b>15 GPS SETUP</b> .....	<b>110</b>		
15.1 GPS ON/OFF .....	110		
15.2 POWER SAVE .....	110		
15.3 DISPLAY DIRECTION .....	111		
15.4 LOCATION FORMAT .....	112		
15.5 TIME OFFSET .....	112		
15.6 TIME AREA .....	112		
15.7 TIME FORMAT .....	112		
15.8 UNITS OF MEASURE .....	113		
15.9 PINNING .....	113		
15.10 SBAS (Satellite Based Augmentation System) .....	114		
15.11 OUTPUT SENTENCES .....	114		
15.12 LOGGER INTERVAL .....	115		
15.13 LOG ERASE .....	115		
15.14 SUMMARY OF THE GPS SETUP .....	116		
<b>16 ATIS SETUP</b> .....	<b>117</b>		
16.1 ATIS CODE PROGRAMMING .....	117		

# QUICK REFERENCE GUIDE

The **HX870E** is equipped with the E2O (Easy-To-Operate) menu system. Basic operation may be accomplished by following the procedure below:

- ① : Press and hold to turn on/off the transceiver.
- ② **PTT** (Push-To-Talk): Activates the transmitter when pressed.
- ③ **SQL**: Press to display the SQL level setting screen, then press the **CH▲** key to squelch or press the **CH▼** to un-squelch the radio.
- ④ **MIC**: Speak slowly and clearly into the **MIC** hole having it about 1.2 to 2.5 cm away from your mouth while pressing the **PTT** key.
- ⑤ **◀/▶**: Press to toggle the on-screen menus to right/left.
- ⑥ **CLR**: Press to cancel a function or menu selection.
- ⑦ **MENU**: Press to access MENU.
- ⑧ **DISTRESS**: Activates a DSC distress call. Lift the red cover, press the **DISTRESS** once, then press and hold until the radio alarms.
- ⑨ **Soft keys**: These three programmable keys can be customized through the setup menu mode. By pressing one of these keys briefly, display the key functions at the bottom of the display.
- ⑩ **Strobe Light**: Blinks the internationally-recognized Morse Code "S.O.S" message by pressing the **[STROBE]** soft key.
- ⑪ **CH▼/CH▲**: Press to change the operating channel.
- ⑫ **On**: Press and hold to lock and unlock the keypad.
- ⑬ **16/S**: Press to recall channel 16. Press and hold to recall the sub channel.
- ⑭ **VOL-/VOL+**: Press to adjust the speaker audio volume.



# INTRODUCTION

---

Congratulations on your purchase of the **HX870E**! Whether this is your first portable marine VHF transceiver, or if you have other STANDARD HORIZON equipment, the STANDARD HORIZON organization is committed to ensuring your enjoyment of this high performance transceiver, which should provide you with many years of satisfying communications even in the harshest of environments. STANDARD HORIZON technical support personnel stand behind every product sold, and we invite you to contact us should you require technical advice or assistance.

We appreciate your purchase of the **HX870E**, and encourage you to read this manual thoroughly, so as to learn and fully understand the capabilities of the **HX870E**. Technical support information and assistance can be obtained in Europe from our Website [www.standardhorizon.co.uk](http://www.standardhorizon.co.uk)

## RADIO CARE

Before using the radio:

1. It is recommended to fully charge the battery. See section “**5.1.4 Using the SBH-12 Charger Cradle**” for details.
2. Be sure that the speaker microphone cap, antenna and battery are in place and firmly tightened.
3. Care must be taken if the radio was dropped and a close inspection may be needed to insure the radio case and gaskets are in adequate condition.

### NOTE

To keep the LCD, keypad and speaker grill clean and in top operating condition after exposure to water: Clean the radio with fresh water after exposure to salt water by rinsing the radio under a sink faucet or by dunking the radio in a bucket of fresh water. After washing, use a soft cloth and thoroughly dry all parts of the radio.

## 1 GENERAL INFORMATION

The STANDARD HORIZON **HX870E** Portable Marine transceiver is designed to be used in International, USA, and Canadian Marine bands. The **HX870E** can be operated from 11 to 16 VDC and has a switchable RF output power of 1 watt, 2 watts or 6 watts.

The **HX870E** is capable of DSC (Digital Selective Calling) ITU-R M.493 Class D operation. Class D operation allows continuous receiving of Digital Selective Calling functions on channel 70 even if the radio is receiving a call. The **HX870E** operates on all currently-allocated marine channels which are switchable for use with International, USA, or Canadian regulations. Emergency channel 16 can be immediately selected from any channel by pressing the red **16/S** key. With the internal high-performance 66 Channel GPS receiver, WAAS and QZSS satellites can be received.

## 2 PACKING LIST

When the package containing the transceiver is first opened, please check it for the following contents:


- **HX870E** Transceiver
- **CAT460** Antenna
- **SBR-13LI** 7.4V 1800mAh Li-ion Battery Pack
- **SBH-12** Charger Cradle for **HX870E**
- **SAD-11C**\* or **SAD-11U**\* 230VAC Wall Charger for **SBH-12**
- **E-DC-19A** DC Cable with 12 V Cigarette Lighter Plug for **SBH-12**
- **SBT-13** Alkaline Battery Case for AAA x 5
- **Clip-22** Belt Clip
- **YS-05-01** Hand Strap
- **T9101606** USB Cable (Type USB "A" plug to Type USB mini "B" plug)
- Ferrite Core
- Owner's Manual

※: "**C**" suffix is for use with 230 VAC (Type-C plug), and "**U**" suffix is for use with 230 VAC (Type-BF plug).

### 3 OPTIONAL ACCESSORIES

- ① **MH-73A4B** ..... Submersible Speaker/Microphone
- ② **MH-57A4B** ..... Mini Speaker/Microphone
- ③ **SSM-14A** ..... Submersible Speaker/Microphone with Earphone Jack
- ④ **SEP-10** ..... Earphone for SSM-14A
- ⑤ **VC-24** ..... VOX Headset
- ⑥ **SSM-55A** ..... Earpiece/Microphone
- ⑦ **CN-3** ..... Radio-to-Ship's-Antenna Adapter
- ⑧ **SBR-13 LI** ..... 7.4V 1800mAh Li-ion Battery Pack
- ⑨ **SBT-13** ..... Alkaline Battery Case (AAA x 5 pcs)
- ⑩ **SBH-12** ..... Charger Cradle
- ⑪ **E-DC-19A** ..... DC Cable with 12 V Cigarette Lighter Plug
- ⑫ **SAD-11C\*** or **U\*** ..... Wall Charger for the **SBH-12**
- ⑬ **E-DC-6** ..... DC Cable; plug and wire only

※: "C" suffix is for use with 230 VAC (Type-C plug), and "U" suffix is for use with 230 VAC (Type-BF plug).

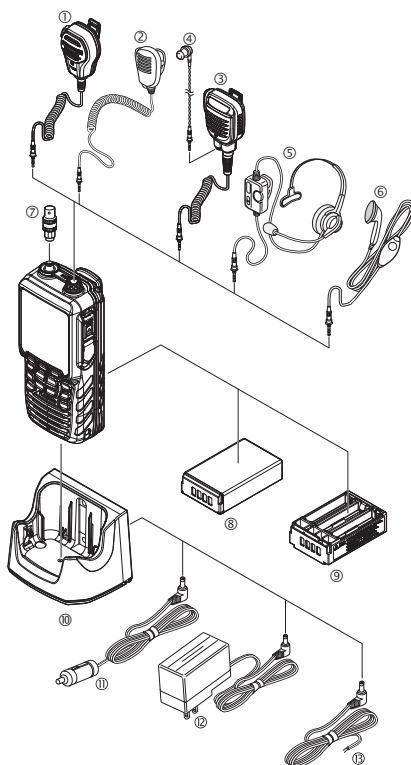

## 4 ABOUT THIS RADIO

### 4.1 ABOUT VHF RADIO

The radio frequencies used in the VHF marine band lie between 156 and 158 MHz with some shore stations available between 161 and 163 MHz. The marine VHF band provides communications over distances that are essentially “line of sight” (VHF signals do not travel well through objects such as buildings, hills or trees). Actual transmission range depends much more on antenna type, gain and height than on the power output of the transmitter. On a fixed mount 25W radio transmission expected distances can be greater than 25 km, for a portable 6W radio transmission the expected distance can be greater than 8 km in “line of sight”.

The user of a Marine VHF radio is subject to severe fine if the radio is used on land. The reasoning for this is you may be near an inland waterway, or propagation anomalies may cause your transmission to be heard in a waterway. If this occurs, depending upon the marine VHF channel on which you are transmitting, you could interfere with a search and rescue case, or contribute to a collision between passing ships. For VHF Marine channel assignments refer to page 121 section 18.

### 4.2 DISTRESS AND HAILING (CHANNEL 16)

Channel 16 is known as the Hail and Distress Channel. An emergency may be defined as a threat to life or property. In such instances, be sure the transceiver is on and set to CHANNEL 16. Then use the following procedure:

1. Press the **PTT** (Push-To-Talk) button and say “**Mayday, Mayday, Mayday.** This is \_\_\_\_\_, \_\_\_\_\_, \_\_\_\_\_” (your vessel's name).
2. Then repeat once: “**Mayday, \_\_\_\_\_**” (your vessel's name).
3. Now report your position in latitude/longitude, or by giving a true or magnetic bearing (state which) to a well-known landmark such as a navigation aid or geographic feature such as an island or harbor entry.
4. Explain the nature of your distress (sinking, collision, aground, fire, heart attack, life-threatening injury, etc.).
5. State the kind of assistance your desire (pumps, medical aid, etc.).
6. Report the number of persons aboard and condition of any injured.
7. Estimate the present seaworthiness and condition of your vessel.
8. Give your vessel's description: length, design (power or sail), color and other distinguishing marks. The total transmission should not exceed 1 minute.
9. End the message by saying “**OVER**”. Release the **PTT** button and listen.
10. If there is no answer, repeat the above procedure. If there is still no response, try another channel.



## NOTE

The **HX870E** has the DSC Distress calling, that can transmit a distress call digitally to all ships with compatible DSC radios. Refer to section **“9 DIGITAL SELECTIVE CALLING (DSC)”**.

### 4.3 CALLING ANOTHER VESSEL (CHANNEL 16 OR 9)

Channel 16 may be used for initial contact (hailing) with another vessel. However, its most important use is for emergency messages. This channel must be monitored at all times except when actually using another channel.

It is monitored by the U.S. and Canadian Coast Guards and by other vessels.

**Use of channel 16 for hailing must be limited to initial contact only.** Calling should not exceed 30 seconds, but may be repeated 3 times at 2-minute intervals. In areas of heavy radio traffic, congestion on channel 16 resulting from its use as a hailing channel can be reduced significantly in U.S. waters by using **channel 9** as the initial contact (hailing) channel for non-emergency communications. Here, also, calling time should not exceed 30 seconds but may be repeated 3 times at 2-minute intervals.

Prior to making contact with another vessel, refer to the channel charts in this manual, and select an appropriate channel for communications after initial contact. For example, Channels 68 and 69 of the U.S. VHF Charts are some of the channels available to non-commercial (recreational) boaters. Monitor your desired channel in advance to make sure you will not be interrupting other traffic, and then go back to either channel 16 or 9 for your initial contact.

When the hailing channel (16 or 9) is clear, press the **PTT** button and state the name of the other vessel you wish to call and then **“this is”** followed by the name of your vessel and your Station License (Call Sign) then release the **PTT** button. When the other vessel returns your call, immediately request another channel by pressing the **PTT** button and saying **“go to”**, the number of the other channel, say **“over”** and release the **PTT** button. Then switch to the new channel. When the new channel is not busy, call the other vessel.

After a transmission, say **“over”**, and release the **PTT** button. When all communication with the other vessel is completed, end the last transmission by stating your Call Sign and the word **“out”**. Note that it is not necessary to state your Call Sign with each transmission, only at the beginning and end of the contact.

Remember to return to Channel 16 when not using another channel. Some radios automatically monitor Channel 16 even when set to other channels or when scanning.

## 4.4 MAKING TELEPHONE CALLS

To make a radiotelephone call, use a channel designated for this purpose. The fastest way to learn which channels are used for radiotelephone traffic is to ask at a local marina. Channels available for such traffic are designated **Public Correspondence** channels on the channel charts in this manual. Some examples for USA use are Channels 24, 25, 26, 27, 28, 84, 85, 86, and 87. Call the marine operator and identify yourself by your vessel's name. The marine operator will then ask you how you will pay for the call (telephone credit card, collect, etc.) and then link your radio transmission to the telephone lines.

The marine telephone company managing the VHF channel you are using may charge a link-up fee in addition to the cost of the call.

## 4.5 BRIDGE CHANNELS 13 AND 67

Channel 13 is used at docks, bridges and by vessels maneuvering in port. Messages on this channel must concern navigation only, such as meeting and passing in restricted waters.

Channel 67 is used for navigational traffic between vessels.

By regulation, power is normally limited to 1 Watt on these channels. Your radio is programmed to automatically reduce power to this limit on these channels. However, in certain situations it may be necessary to temporarily use a higher power. See Page 24 for means to temporarily override the low-power limit on these two channels.

## 5 GETTING STARTED

### NOTE

Water resistance of the transceiver is assured only when the battery cover is attached to the transceiver, **DATA** jack cover is locked and **MIC/SP** cap is installed in the **MIC/SP** jack.

### 5.1 BATTERIES AND CHARGERS

If the radio has never been used, or its charge is depleted, it may be charged by connecting the **SBH-12** Charger Cradle with the **SAD-11C/U** battery charger, as shown in the illustration. If 12V DC power is available, the **E-DC-19A** DC Cable with 12 V Cigarette Lighter Plug or the optional **E-DC-6** DC Cable may be used for charging the battery. The **SAD-11C/U**, **E-DC-19A** and **E-DC-6** will charge a completely discharged **SBR-13LI** battery pack in about 3 hours.

The **SBR-13LI** is a high performance Li-ion battery providing high capacity in a compact package.

#### SBR-13LI Rechargeable Battery Pack

Capacity	1800 mAh			
Nominal Voltage	7.4 V			
Temperature Range	Minimum		Maximum	
	°C	°F	°C	°F
Charge	5	41	35	95
Discharge	-20	-4	60	140
Storage	-10	14	35	95

### CAUTION

To avoid risk of explosion and injury, **SBR-13LI** battery pack should only be removed, charged or recharged in non-hazardous environments.

#### 5.1.1 Battery Safety

Battery packs for your transceiver contain Li-ion batteries. This type of battery stores a charge powerful enough to be dangerous if misused or abused, especially when removed from the transceiver. Please observe the following precautions:

**DO NOT SHORT BATTERY PACK TERMINALS:** Shorting the terminals that power the transceiver can cause sparks, severe overheating, burns, and battery cell damage. If the short is of sufficient duration, it is possible to melt battery components. Do not place a loose battery pack on or near metal surfaces or

objects such as paper clips, keys, tools, etc. When the battery pack is installed on the transceiver, the terminals that transfer current to the transceiver are not exposed. The terminals that are exposed on the battery pack when it is mounted on the transceiver are charging terminals only and do not constitute a hazard.

**DO NOT INCINERATE:** Do not dispose of any battery in a fire or incinerator. The heat of fire may cause battery cells to explode and/or release dangerous gases.

### Battery Maintenance

For safe and proper battery use, please observe the following:

- Battery packs should be charged only in non-hazardous environments.
- Use only STANDARD HORIZON-approved batteries.
- Use only a STANDARD HORIZON-approved charger. The use of any other charger may cause permanent damage to the battery.
- Follow charging instructions provided with the chargers.
- Keep the battery contacts clean.

### Battery Storage

Store the batteries in a cool place to maximize storage life. Since batteries are subject to self-discharge, avoid high storage temperatures that cause large self-discharge rates. After extended storage, a full recharge is recommended.

### Battery Recycling

**DO NOT PLACE USED BATTERIES IN YOUR REGULAR TRASH!  
LI-ION BATTERIES MUST BE COLLECTED, RECYCLED OR DISPOSED  
OF IN AN ENVIRONMENTALLY SOUND MANNER.**

The incineration, land filling or mixing of Li-ion batteries with the municipal solid waste stream is PROHIBITED BY LAW in most areas.

Return batteries to an approved Li-ion battery recycler. This may be where you purchased the battery.


Contact your local waste management officials for other information regarding the environmentally sound collection, recycling and disposal of Li-ion batteries.




**Li-ion**

## 5.1.2 Rechargeable Battery Installation/Removal

1. Turn the transceiver off.
2. Slide the battery cover lock switch to the “**UNLOCK**” position, then press “**PUSH**” to open the battery cover.

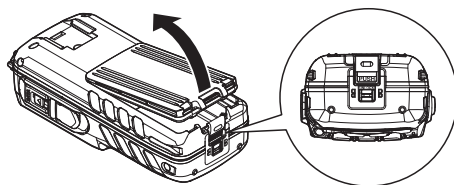

3. Install the **SBR-13LI** battery pack into the battery rest aligning it to the battery contacts until it clicks.
4. Attach the battery cover, then slide the battery cover lock switch to the “**LOCK**” position.


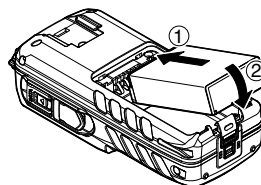



To remove the battery pack, turn the transceiver off, open the battery cover, then push and lift up the bottom end of the battery pack.






### NOTE

The battery lock must be set to “**LOCK**” position to ensure water integrity and keep the battery from coming loose.
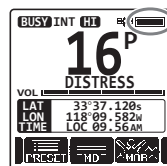
## 5.1.3 Battery Life Information

When the battery charge is almost depleted, a “” icon will appear on the display. When the “” icon appears, it is recommended that you charge the battery soon.




	: Full battery power
	: Enough battery power
	: Low battery power
	: Poor battery power
	: Charge (or replace) the battery

### 5.1.4 Using the SBH-12 Charger Cradle


1. Insert the DC plug from the **SAD-11C/U** or **E-DC-19A** into the DC jack at the bottom of the **SBH-12**. Put the wire of the **SAD-11C/U** or **E-DC-19A** into either of the left or right hook at the bottom of the **SBH-12**.

Wind one turn of the DC cable around the supplied ferrite core, and snap its two halves together to the DC cable per the illustration.

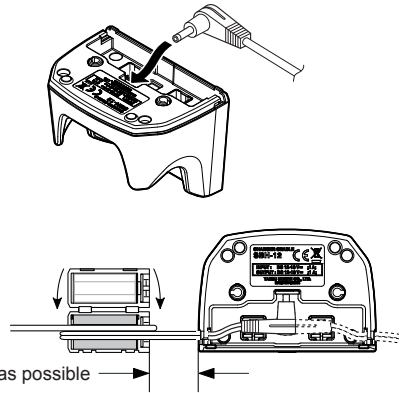

2. Plug the **SAD-11C/U** into the AC line outlet.
3. Insert the **HX870E** (with the battery pack) into the **SBH-12**; the antenna should be at the left side when viewing the charger from the front.

If the **HX870E** is inserted correctly, the **HX870E**'s LCD display will show the battery charging icon. A fully-discharged pack will be charged completely in approximately 3 hours.

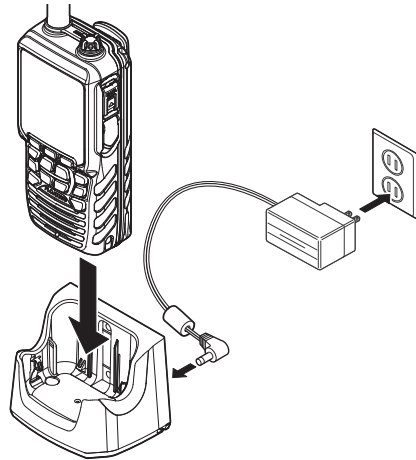

When charging is completed, the battery charging icon will disappear.

#### CAUTION

The **SBH-12** is NOT designed to be waterproof. Charge the radio in a dry location.

#### NOTE


The **SBH-12** is only designed for the charging of the **HX870E**'s battery, and is not suitable for other purposes. The **SBH-12** may contribute noise to TV and radio reception in the immediate vicinity, so we do not recommend its use adjacent to such devices.

### 5.1.5 Installation of the SBT-13 Battery Case


The **SBT-13** is a battery case that holds five “AAA” size Alkaline batteries and is used with the **HX870E** transceiver. The Alkaline batteries can be used for reception and transmission in an emergency, and battery life will be shortened dramatically.

1. Turn the transceiver off.
2. Slide the five “AAA” size Alkaline batteries into the **SBT-13** with the Negative (–) side of the batteries touching the spring connections inside the **SBT-13**.


Put three batteries into the compartment on the front side and two on the back side.

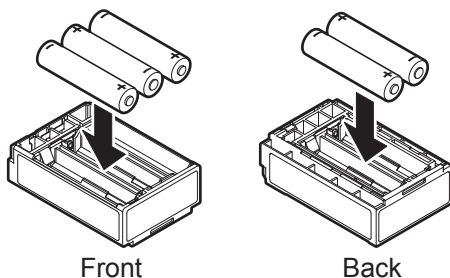

3. Slide the battery cover lock switch to the “**UNLOCK**” position, then press “**PUSH**” to open the battery cover.

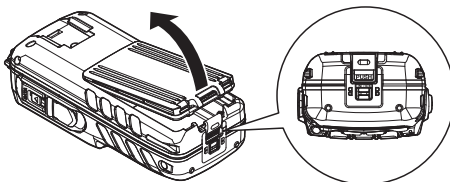

4. Install the **SBT-13** into the battery rest aligning it to the battery contacts until it clicks.

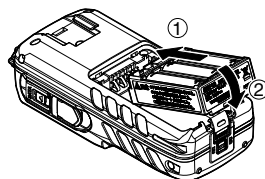

5. Attach the battery cover, then slide the battery cover lock switch to the “**LOCK**” position.


To remove the battery case, turn the transceiver off, open the battery cover, then push and lift up the bottom end of the battery case.

#### NOTE

- When the **SBT-13** Alkaline Battery Case is used, the **HX870E** transmit output is fixed to 1 W.
- The **HX870E** will float with the **SBT-13** attached.


## 5.2 BELT CLIP INSTALLATION / REMOVAL

1. To install, align the Belt Clip **Clip-22** to the groove of the Battery pack, then press the Belt Clip downward until it locks in place with a “Click”.
2. To remove, pull the **Clip-22** tab away from the battery pack to unlock the **Clip-22**, then slide the **Clip-22** upward to remove it.

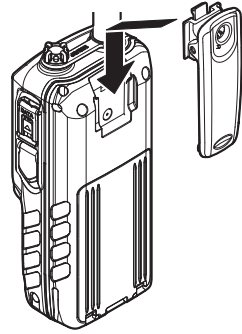


## 5.3 ATTACHING AN ANTENNA

Insert the **CAT460** antenna into the **ANT** jack at the top panel, hold the bottom end of the antenna, then screw it onto the mating connector on the transceiver until it is snug. Do not over-tighten.

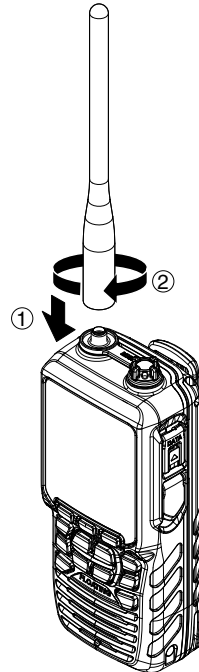




## 5.4 CHECKING GPS SIGNAL (GPS STATUS DISPLAY)



When the **HX870E** receives the GPS signal, a small satellite icon “” will appear on the display and your current location (latitude/longitude) is shown on the display.

The **HX870E** has a GPS status display which shows the satellites currently being received, along with a graphical (bar-graph) representation of the relative signal strengths from the satellites.

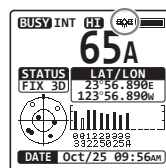

(GPS STATUS DISPLAY MODE)

1. Press and hold the **POWER** key on the left side of the transceiver to turn it on.
2. Press the **MENU** key to display “MENU”, then select “GPS” with the **CH▼/CH▲/◀/▶** key.
3. Press the **[SELECT]** soft key, then select “GPS STATUS” with the **CH▼/CH▲** key.
4. Press the **[ENTER]** soft key to display the GPS status currently being received.
5. Press the **CLR** key to return to radio operation.

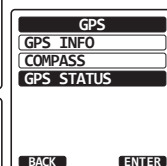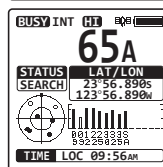


### NOTE

- When the **HX870E** is first turned on, it may take several minutes to compute a fix of your position. This is normal, as the **HX870E** is downloading “almanac” information from the GPS satellites.
- When using the **HX870E** inside of a cabin where GPS reception is limited, choose a place where GPS satellite reception is good enough referring to the GPS status display.


## 5.5 CHANGING THE GPS TIME

From the factory the **HX870E** shows GPS satellite time or UTC (Universal Time Coordinated) time. A time offset is needed to show the local time in your area. The time offset must be changed in order for the radio to display the current time in your area. See the Offset Time Table below.

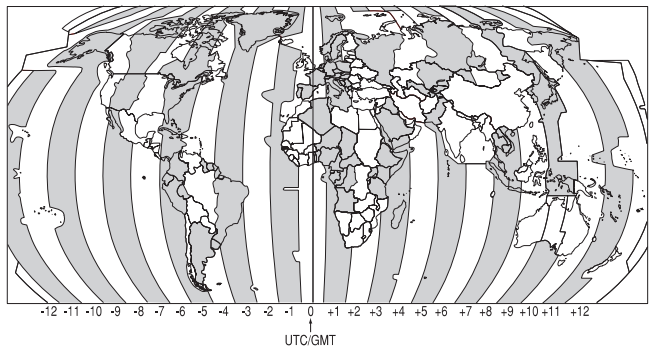

**OFFSET TIME TABLE**


1. Press the **MENU** key to display “MENU”, then select “SETUP” with the **CH▼/CH▲/◀/▶** key.
2. Select “GPS SETUP” with the **CH▼/CH▲** key.
3. Press the **[SELECT]** soft key, then select “TIME OFFSET” with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select time offset of your location. See illustration above to find your offset time. If “00:00” is assigned, the time is the same as UTC or GPS satellite time.
5. Press the **[ENTER]** soft key to store the time offset.
6. Press the **CLR** key to return to radio operation.

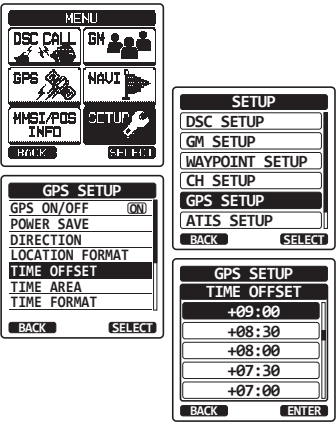

## 5.6 CHANGING THE TIME LOCATION

This menu selection allows the radio to show UTC time or local time with offset.


1. Press the **MENU** key to display “MENU”, then select “SETUP” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then select “GPS SETUP” with the **CH▼/CH▲** key.
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to “TIME AREA”.
4. Press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “UTC” or “LOCAL”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

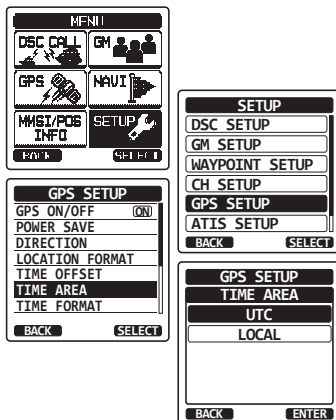

## 5.7 CHANGING THE TIME FORMAT


This menu selection allows the radio to setup to show time in 12-hour or 24-hour format.

1. Press the **MENU** key to display “MENU”, then select “SETUP” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then select “GPS SETUP” with the **CH▼/CH▲** key.
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “TIME FORMAT”.
4. Press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “12hour” or “24hour”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

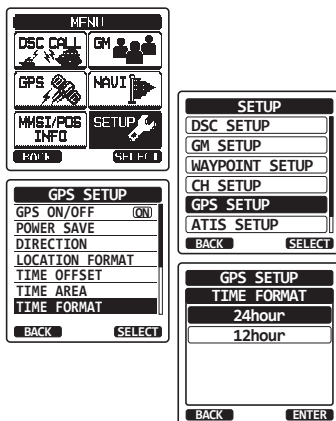

## 6 CONTROLS AND INDICATORS

This section defines each control of the transceiver. See illustration below for location of controls. For detailed operating instructions refer to chapter 8 of this manual.

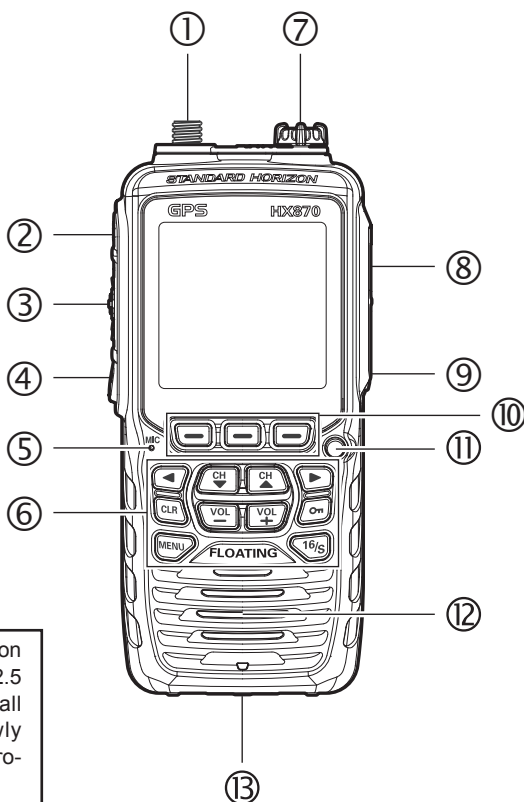

### NOTE

When transmitting, position your mouth about 1.2 ~ 2.5 cm away from the small mic hole. Speak slowly and clearly into the microphone.

#### ① **ANT** jack (Top side)

The supplied **CAT460** flexible antenna is attached here.

#### ② **⏻** (Power) switch (Left side)

Press and hold to toggle the radio on or off.

#### ③ **PTT** (Push-To-Talk) button (Left side)

When pushed activates the transmitter.

④ **SQL** switch (Left side)

Press this key to activate the squelch adjusting mode. Press the **CH▲** or **CH▼** key to adjust the squelch threshold level.

Press and hold the squelch key for 3 seconds to open the squelch, allowing you to monitor the operating channel. Press this key to resume normal (quiet) monitoring.

⑤ **MIC** hole

The internal microphone is located here.

**NOTE**

When transmitting, position your mouth about 1.2 to 2.5 cm away from the small mic hole. Speak slowly and clearly into the microphone.

⑥ Keypad

**MENU** key

Press to access MENU.

**CH▲** key

This key is used to change the operating channel and squelch threshold level.

Press the key momentarily, the channel (or level) increases one step. Holding the key, the channel (or level) increases continuously.

**CH▼** key

This key is used to change the operating channel and squelch threshold level.

Press the key momentarily, the channel (or level) decreases one step. Holding the key, the channel (or level) decreases continuously.

**On** key

Hold down this key to lock the keypad so that they are not accidentally changed. “**LOCK**” will appear on the entire screen, to indicate that the functions are locked. Hold down this key until “**UNLOCK**” appears to unlock the radio.

**◀/▶** key

Press to toggle the on-screen menus to right/left.

**VOL+** key

Press to increase the speaker audio volume level.

## **VOL-** key

Press to decrease the speaker audio volume level.

## **16/S** key

Pressing this key immediately recalls channel 16 from any channel location. Holding down this key recalls the SUB channel (The default setting is channel 9). Pressing this key again reverts to the previous selected working channel.

## **CLR** key

Press this key to cancel a menu selection and/or keypad entry.

## ⑦ **MIC/SP** jack (Top side)

The jack accepts the optional **MH-73A4B** Submersible Speaker/Microphone, **MH-57A4B** Mini Speaker/Microphone, **VC-24** VOX Headset, **SSM-10** Submersible Speaker/Microphone, or **SSM-55A** Earpiece/Microphone. When this jack is used, the internal speaker and microphone are disabled.

## ⑧ **DATA** jack (Right side)

Use the USB mini type B jack to output the NMEA data, configure the transceiver settings and download the GPS logger data.

## ⑨ **DISTRESS** key (Right side)

Used to send a DSC Distress Call. To send the distress call, refer to section “**9.3.1 Transmitting a DSC Distress Call**”.

## ⑩ Soft keys

The 3 programmable soft keys can be customized by the Setup Menu mode described in section “**12.7 SOFT KEYS**”. When one of the soft keys is pressed briefly, the functions will appear above each key on the display.

## ⑪ Strobe light indicator

When the Emergency feature is activated, this indicator blinks the internationally-recognized Morse Code “S.O.S” message.

When the Water Hazard feature is activated, this indicator illuminates if the transceiver is submerged.

## ⑫ Speaker

The internal speaker is located here.

## ⑬ Battery pack lock (Bottom side)



Turn the Battery Pack Lock to the “**UNLOCK**” position for battery removal.

## 7 BASIC OPERATION

### NOTE


Before operating the **HX870E** for the first time, it is recommended that you fully charge the battery. See section “**5.1.4 Using the SBH-12 Charger Cradle**” for details.

### 7.1 TURNING ON AND OFF THE TRANSCEIVER

1. Press and hold the  key on the left side of the radio to turn the radio on.
2. Press and hold the  key again to turn the radio off.

### 7.2 RECEPTION

1. Press the **SQL** key, then press the **CH▼** key until noise is heard from the speaker. This state is known as “squelch off”.
2. Press the **VOL- /VOL+** key until noise or audio from the speaker is at a comfortable level.
3. Press the **SQL** key, then press the **CH▲** key until the random noise disappears. This state is known as the “squelch threshold”.
4. Press the **CH▼/CH▲** key to select the desired channel. Refer to the channel chart on Pages 121 to 122 for available channels.
5. When a message is received, adjust the volume to the desired listening level. The “[**BUSY**]” indicator on the display indicates that communications are being received.

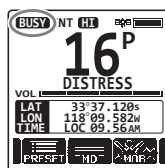


### 7.3 TRANSMISSION

1. Perform steps 1 through 4 of RECEPTION.
2. Before transmitting, monitor the channel to ensure it is clear.

**THIS IS AN FCC REQUIREMENT!**

3. Press the **PTT** (push-to-talk) button. The “[**TX**]” indicator on the LCD is displayed.
4. Speak slowly and clearly into the **MIC** hole.
5. When the transmission is finished, release the **PTT** button.

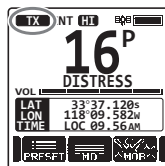


### 7.3.1 Transmit Power

The TX output power of the **HX870E** is set to high level (6W) in factory default, and the “[HI]” indicator is displayed on the top part of the screen.

To switch the TX output power:

1. Press ◀/▶ key repeatedly until the [HI], [MD], or [LOW] soft key is displayed at the bottom of the screen.
2. Press the [HI], [MD], or [LOW] soft key to switch between HI (6W), MD (2W), or LO (1W) output power.

**Note:** Soft Key displays the next Power Level to be selected when pressed. The actual TX Power Level is always shown in the icon on the top line of the display.

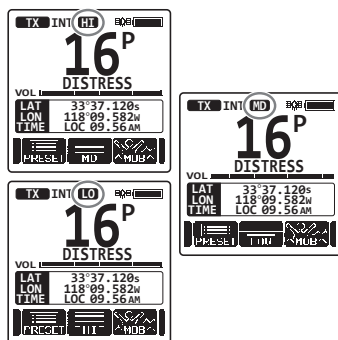

#### NOTE

- When the **SBT-13** Alkaline Battery Case is used, only the low power (1W) can be set.
- Depending on the remaining power of the **SBR-13LI** Battery Pack, the **HX870E** may transmit with the medium or low power even though the “[HI]” indicator is displayed.

### 7.4 TRANSMIT TIME-OUT TIMER (TOT)

When the **PTT** button is held down, transmit time is limited to 5 minutes. This limits unintentional transmissions due to a stuck microphone. About 10 seconds before automatic transmitter shutdown, a warning beep will be heard from the speaker(s). The transceiver will automatically go to receive mode, even if the **PTT** button is continually held down. Before transmitting again, the **PTT** button must first be released and then pressed again.

#### NOTE

Once the transmitter is shut down by the TOT, transmission to the last channel is only allowed 10 seconds after the shutdown.



## 7.5 SIMPLEX/DUPLEX CHANNEL USE

Refer to the VHF MARINE CHANNEL CHART (Pages 121 to 122) for instructions on use of simplex and duplex channels.


### NOTE

All channels are factory-programmed in accordance with FCC (USA), Industry Canada (Canada), and International regulations. Mode of operation cannot be altered from simplex to duplex or vice-versa.

## 7.6 INTERNATIONAL, USA, AND CANADA MODE

To change the channel group from International to USA or Canada:

1. Press the **MENU** key to display "MENU", then select "SETUP" with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select "CH SETUP".
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select "CH GROUP".
4. Press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select desired channel group "INTL", "USA", or "CAN".
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

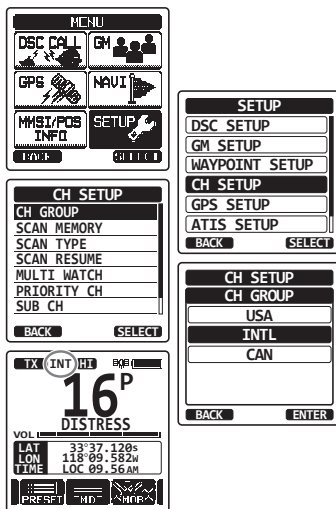

## 7.7 MULTI WATCH (TO PRIORITY CHANNEL)


Multi watch is used to scan two or three channels for communications.

- In Dual Watch, a normal VHF channel and the priority channel are scanned alternately.
- In Triple Watch, a normal VHF channel, the priority channel, and the sub channel are scanned alternately.

When a signal is received on the normal channel the radio briefly switches between the normal channel and the priority channel to look for a transmission. If the radio receives communications on the priority channel the radio stops and listens to priority channel until communication ends and then starts dual or triple watch scan again.

### 7.7.1 Setting up the Multi Watch Operation

1. Press the **MENU** key to display “MENU”, then select “SETUP” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲/◀/▶** key to select “CH SETUP”.
3. Press the **[SELECT]** soft key, then select “MULTI WATCH” with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “DUAL” or “TRIPLE”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

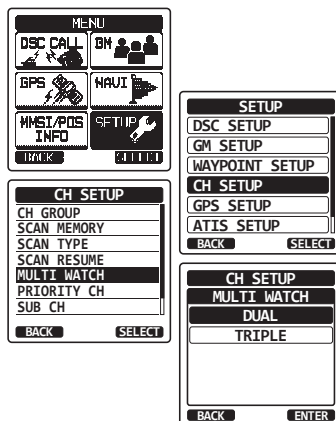


### 7.7.2 Starting the Dual Watch

1. Press the **SQL** key, then press the **CH▼/CH▲** key until the background noise disappears.
2. Press the **CH▼/CH▲** key to select a channel you wish to watch.
3. Press **◀/▶** key repeatedly until the [Dual Watch] soft key is displayed at the bottom of the screen, press the **[DUAL WATCH]** soft key.

The radio will monitor the priority channel and the channel that was selected in step 2.

If a signal is received on the channel selected in step 2, the **HX870E** will dual watch to priority channel.

4. To stop dual watch, press one of the soft keys, then press the **[DUAL WATCH]** soft key again.

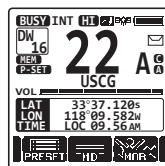

When selecting “TRIPLE” in the SETUP menu, [TRIPLE WATCH] will be displayed as the soft key instead of [DUAL WATCH].

## NOTE

The priority channel may be changed from CH16 (default) to another channel. Refer to section “13.6 PRIORITY CHANNEL”.



## 7.8 SCANNING

The **HX870E** will automatically scan channels programmed into the preset channel memory and also the scan channel memory, and the last selected weather channel.


When an incoming signal is detected on one of the channels during scan, the radio will pause on that channel, allowing you to listen to the incoming transmission. The radio will automatically start scanning again after the transmission stops.

### 7.8.1 Selecting the Scan Type

1. Press the **MENU** key to display “MENU”, then select “SETUP” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲/◀/▶** key to select “CH SETUP”.
3. Press the **[SELECT]** soft key, then select “SCAN TYPE” with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “PRIORITY” or “MEMORY”.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

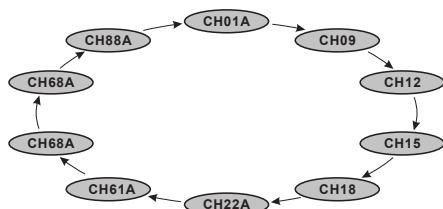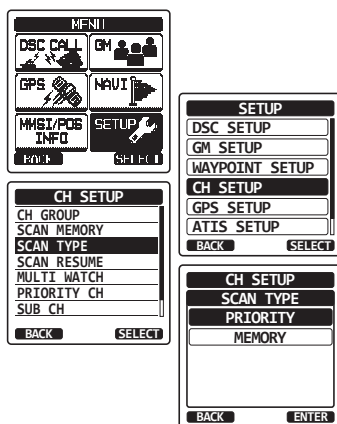


MEMORY SCAN (M-SCAN)

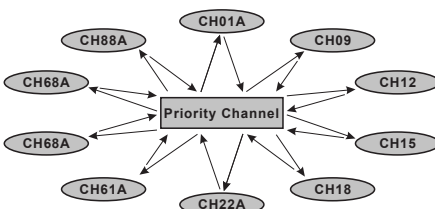

PRIORITY SCAN (P-SCAN)

## 7.8.2 Programming Scan Memory

1. Press the **MENU** key to display "MENU", then select "SETUP" with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲/◀/▶** key to select "CH SETUP".
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select "SCAN MEMORY".
4. Press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select a desired channel to be scanned, then press the **[MEM]** soft keys. "ON" icon will appear at the right side of the selected channel.
6. Repeat step 5 for all the desired channels to be scanned.
7. To REMOVE a channel from the list, select the channel then press the **[MEM]** soft key. "ON" icon of the selected channel will disappear.
8. When you have completed your selection, press the **CLR** key to return to radio operation.


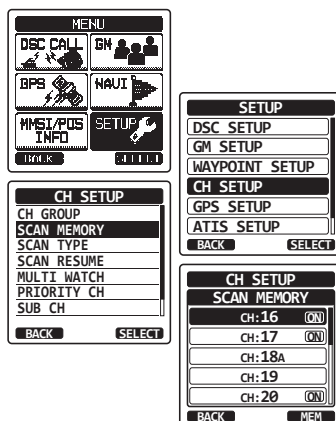


To check channels to be scanned, press the **CH▼/CH▲** key repeatedly. The **"[MEM]"** icon will appear when the memory channel is displayed.

**Note:** When "SCAN MEMORY" is assigned to the soft key, the memory function switches between on and off every time you press the **[MEM]** soft key.


## 7.8.3 Memory Scanning (M-SCAN)

1. Set the scan type to "MEMORY" in the SETUP menu (refer to "7.8.1 Selecting the Scan Type").
2. Press the **SQL** key, then press the **CH▼/CH▲** key until background noise disappears.
3. Press the **◀/▶** key repeatedly, then press the **[SCAN]** soft key. "MEM SCAN" appears on the display. Scanning will proceed from the lowest to the highest programmed channel number and preset channel (described in the next section) and will stop on a channel when a transmission is received.  
The channel number will blink during reception.
4. To stop scanning, press the **16/S** or **CLR** key.

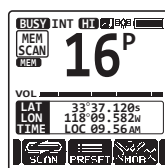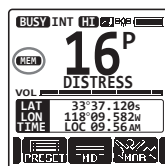

## 7.8.4 Priority Scanning (P-SCAN)

1. Set the scan type to “PRIORITY” in the SETUP menu (refer to “7.8.1 Selecting the Scan Type”).
2. Press the **SQL** key, then press the **CH▼/CH▲** key until background noise disappears.
3. Press the **◀/▶** key repeatedly, then press the **[SCAN]** soft key. “PRI SCAN” appears on the display. Scanning will proceed between the memorized channels and preset channel (described in next section) and the priority channel. The priority channel will be scanned after each programmed channel.
4. To stop scanning, press the **16/S** or **CLR** key.

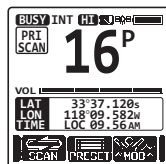

### NOTE

In the default setting, Channel 16 is set as the priority channel. You may change the priority channel to the desired channel from Channel 16 on the SETUP menu. Refer to section “13.6 PRIORITY CHANNEL”.




## 7.9 PRESET CHANNELS: INSTANT ACCESS

10 preset channels can be programmed for instant access. Press the **◀/▶** key repeatedly, then press the **[PRESET]** soft key. Pressing the **[PRESET]** key activates the user assigned channel bank. If the **[PRESET]** soft key is pressed and no channels have been assigned, an alert beep will be emitted from the speaker.

Before beginning the Instant Access operation, assign the “PRESET” command into one of the programmable keys, refer to section “12.7 SOFT KEYS”.

### 7.9.1 Programming



1. Press the **CH▼/CH▲** key to select the channel to be programmed.
2. Press the **◀/▶** key repeatedly to indicate the function on the display, then press and hold the **[PRESET]** soft key until the “P-SET” icon and channel number are blinking.
3. Press the **[ADD]** soft key to program the channel into the preset channel memory. “P-SET” icon will appear.

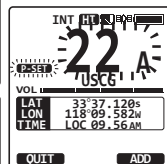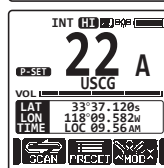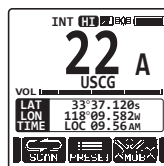

- Repeat steps 1 through 4 to program the desired channels into the preset channels. Up to 10 channels can be registered. If you attempt to register the 11th channel, error beep will sound.



## 7.9.2 Operation

- Press the ◀/▶ key repeatedly, then press the **[PRESET]** soft key to recall the preset channel. The “[P-SET]” icon will appear on the display.
- Press the **CH▼/CH▲** key to select the desired preset channel.
- Press one of soft keys, then press the **[PRESET]** soft key to return to the last selected channel. The “[P-SET]” icon will disappear from the display.

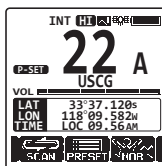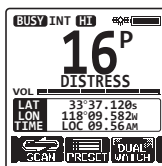

## 7.9.3 Deletion

- Press the ◀/▶ key repeatedly, then press the **[PRESET]** soft key to recall the preset channel.
- Press the **CH▼/CH▲** key to select the preset channel to be deleted.
- Press one of soft keys, then press and hold the **[PRESET]** soft key until the “[P-SET]” icon and channel number are blinking.
- Press the **[DELETE]** soft key to delete the channel from the preset channel memory.
- Repeat steps 2 through 4 to delete the desired channels from preset channels.
- To exit from deleting the preset channels, press the **[QUIT]** soft key.

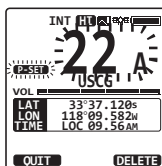
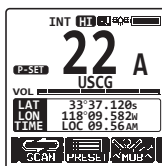


## 7.10 MOB OPERATION

The **HX870E** provides a feature to memorize the position information instantly in case of MOB (Man Over-Board).

1. Press the ◀/▶ key repeatedly, then press the **[MOB]** soft key.
2. Press the **[TO WPT]** soft key to start the navigation to the displayed position. For details about the navigation, see section “11 NAVIGATION”.

To modify the displayed position information, press the **[POS/TM]** soft key. For details about the modification, see section “10.1.2 Editing a Waypoint”.

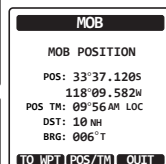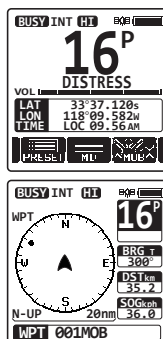

3. To transmit a DSC distress message, lift the red spring loaded DISTRESS cover on the right side of the transceiver, then press and hold the **DISTRESS** key (see section “9.3.1 Transmitting a DSC Distress Call” for details). The nature of the distress call is automatically set to “MOB”.

## 7.11 VOX OPERATION

The **HX870E** has the VOX (voice-actuated transmit/receive switching) feature, which allows you to transmit and receive hands free by utilizing the optional VOX headset **VC-24** or those delivered from third-party vendors.


Insert the plug of the VOX headset into the **MIC/SP** jack of the **HX870E**, then speak to the microphone of the headset to start VOX operation.

The **VC-24** is optimized for the use with the **HX870E**, so that you may use it without detailed settings.

When you use a third-party VOX headset, set up the VOX operation of the **HX870E** via the SETUP menu. Refer to section “13.10 VOX OPERATION” for details.

## 7.12 OPERATION MENU

The **HX870E** provides advanced features below, via the “MENU” screen displayed by pressing the **MENU** key on the front panel.

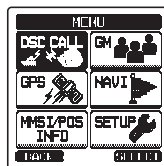

### DSC CALL

The following seven types of DSC (Digital Selective Calling) are available: Individual, Group, All Ships, Position Request, Position Report, Polling, and Auto Position Polling.

This menu also provides convenient functions for DSC as below.

- Sets the nature of Distress Call (DIST ALERT MSG)
- Review previously received DSC calls (DSC LOG)
- Transmits a test call (DSC TEST)
- Test the transceiver (DSC LOOP BACK)

### GM

The GM (Group Monitor) feature performs group polling and position display of the group members at the same time.

### GPS

Your current location, course, and speed can be displayed in a numerical or compass style. You can also check the position and signal strength of captured GPS satellites.

### NAVI

You can start navigation to a memorized or temporarily input waypoint.

### MMSI/POS INFO

Input your MMSI (Maritime Mobile Service Identity) before you use DSC.

### SETUP

This menu allows certain aspects of your transceiver's configuration to be customized for your personal operating conditions.



## 8 GPS OPERATION

The **HX870E** has an internal GPS antenna to receive and display the position information. Your position information as well as recieved positions can be memorized and utilized later for navigation.


### NOTE

The GPS unit may be turned off, or set to power save mode to increase the battery life, via the **SETUP** menu. Refer to section **“15 GPS SETUP”**.

## 8.1 DISPLAYING POSITION INFORMATION

### 8.1.1 GPS Information Compass Display


1. Press the **MENU** key to display “MENU”, then select “GPS” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then select “COMPASS” with the **CH▼/CH▲** key.
3. Press the **[ENTER]** soft key to display the compass display.
4. Press the **CLR** key to return to radio operation.

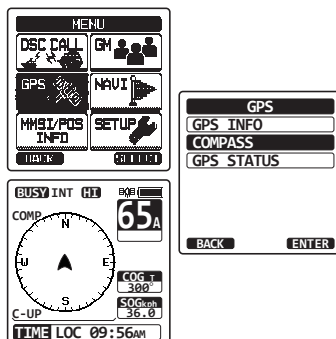

**Note:** Depending on the assignment of the soft keys you may switch the screen immediately from the basic display to the compass display by pressing the **[COMP]** soft key.


### 8.1.2 GPS Information Numerical Display

1. Press the **MENU** key to display “MENU”, then select “GPS” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then select “GPS INFO” with the **CH▼/CH▲** key.
3. Press the **[ENTER]** soft key to display the numerical display.
4. Press the **CLR** key to return to radio operation.

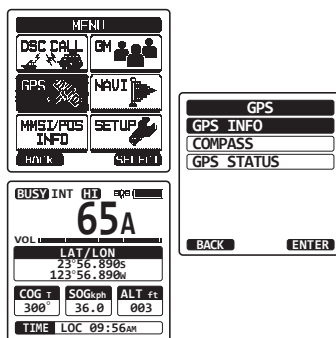

## 8.2 CHECKING GPS STATUS

1. Press the **MENU** key to display "MENU", then select "GPS" with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then select "GPS STATUS" with the **CH▼/CH▲** key.
3. Press the **[ENTER]** soft key to display the GPS status currently being received.
4. Press the **CLR** key to return to radio operation.

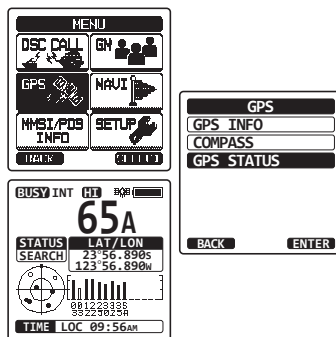


## 8.3 GPS LOGGER OPERATION

The **HX870E** includes a logger for position information that allows you to record your location at regular intervals.

1. Press the **[LOGGER]** soft key to turn the function on or off. The recording starts and the display returns to the previous screen with the **"L"** icon on the top of the display.
  - You may change the log interval time of recording via the **SETUP** menu.

### Notes:

- The power save operation of the GPS unit is disabled while the logger is activated.
- To utilize the records, connect the **HX870E** to a PC and download the log data from the radio by using the PC Programming Software. Refer to section **"20 CONNECTING A USB DATA TERMINAL TO THE PC"**.

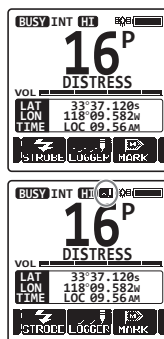

### Logger operation alert:

- When the memory for log data becomes full, three beeps will sound and a warning message will be displayed. Afterwards the logger does not operate until the log data in the memory are erased.
- When the logger cannot record for some reason, three beeps will sound and a warning message will be displayed. Afterwards the logger does not operate anymore.
- An error message will be displayed when the radio cannot erase the log data in the memory during the operation following the alert of memory full (see above) or in the **SETUP** menu (Refer to section **"15.13 LOG ERASE"**).

## **9 DIGITAL SELECTIVE CALLING (DSC)**

### **9.1 GENERAL**

#### **WARNING**

This **HX870E** is designed to generate a digital maritime distress and safety call to facilitate search and rescue. To be effective as a safety device, this equipment must be used only within communication range of a shore-based VHF marine channel 70 distress and safety watch system. The range of signal may vary but under normal conditions should be approximately 5 nautical miles.

Digital Selective Calling (DSC) is a semi-automated method of establishing a radio call, it has been designated by the International Maritime Organization (IMO) as an international standard for establishing VHF, MF and HF radio calls. It has also been designated as part of the Global Maritime Distress and Safety System (GMDSS). It is planned that DSC will eventually replace aural watches on distress frequencies and will be used to announce routine and urgent maritime safety information broadcasts.

This system allows mariners to instantly send a distress call with GPS position (when connected to the transceiver) to the Coast Guard and other vessels within range of the transmission. DSC will also allow mariners to initiate or receive Distress, Urgency, Safety, Routine, Position Request, and Position Report, Automatic Position Polling, and Group calls to or from another vessel equipped with a DSC transceiver.

### **9.2 MARITIME MOBILE SERVICE IDENTITY (MMSI)**

#### **9.2.1 What is an MMSI?**

An MMSI is a nine digit number used on marine transceivers capable of using Digital Selective Calling (DSC). This number is used like a telephone number to selectively call other vessels.

**THIS NUMBER MUST BE PROGRAMMED INTO THE RADIO TO OPERATE DSC FUNCTIONS.**

#### **How can I obtain an MMSI assignment?**

In the USA, visit the following websites to register:

<http://www.boatus.com/mmsi/>

<https://www.seatow.com/tools-and-education/mmsi>

[http://wireless.fcc.gov/services/index.htm?job=licensing&id=ship\\_stations](http://wireless.fcc.gov/services/index.htm?job=licensing&id=ship_stations)

In Canada, visit


<http://www.ic.gc.ca/epic/site/smt-gst.nsf/en/sf01032e.html>

## 9.2.2 Programming the MMSI

### WARNING

The MMSI can be inputted only once. Therefore **please be careful not to input the incorrect MMSI number**. If you need to change the MMSI number after it has been entered, the radio will have to be returned to Factory Service. Refer to the section “**17.2 FACTORY SERVICE**”.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “MMSI/POS INFO”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
3. Press the **[MMSI]** soft key.
4. Press the **CH▼/CH▲/◀/▶** key to select the first number of your MMSI, then press the **[SELECT]** soft key to step to the next number.
5. Repeat step 4 to set your MMSI number (9 digits).
6. If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 4.
7. When finished programming the MMSI number, press the **[FINISH]** soft key. The radio will ask you to input the MMSI number again. Perform steps 4 through 6 above.
8. After the second number has been input, press the **[FINISH]** soft key to store the MMSI.
9. Press the **[OK]** soft key to return to radio operation.

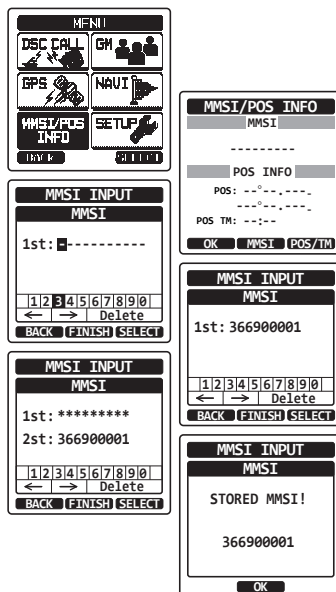

### NOTE

To view your MMSI after programming to ensure it is correct, perform steps 1 to 2. Look that the MMSI number shown on the display is correct.

## 9.3 DSC DISTRESS CALL

The **HX870E** is capable of transmitting and receiving DSC distress messages to all DSC radios. Distress calls from the **HX870E** include the latitude and longitude of the vessel when the internal GPS unit is activated.





### 9.3.1 Transmitting a DSC Distress Call

#### NOTE

To be able to transmit a DSC distress call an MMSI number must be programmed, refer to section “**9.2.2 Programming the MMSI**”.

#### Basic Operation

1. Lift the red spring loaded DISTRESS cover on the right side of the transceiver, and press then press and hold the **DISTRESS** key for 3 seconds. The radio display will count down (3-2-1) and then transmit the distress call. The backlight of the display and keypad flashes while the radios display is counting down.
2. When the distress signal is sent, the transceiver watches for a transmission on CH70 until an acknowledgment signal is received.
3. If no acknowledgment is received, the distress call is repeated in 4 minute intervals until a DSC acknowledgment is received.
4. When a DSC distress acknowledgment is received, a distress alarm sounds and Channel 16 is automatically selected. The display shows the MMSI of the ship responding to your distress.
5. Press the **PTT** button and state your name, vessel name, number of persons on board and the distress situation, then say “over” and wait for a reply from the acknowledging ship.
6. To turn off the distress alarm before the radio retransmits the distress call, press the **16/S** key or the **[QUIT]** soft key.

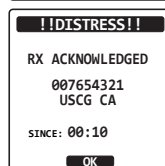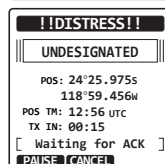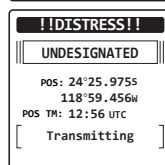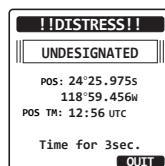

## Transmitting a DSC Distress Alert with Nature of Distress

The **HX870E** is capable of transmitting a DSC distress alert with the following “Nature of Distress” categories:

Undesignated, Fire, Flooding, Collision, Grounding, Capsizing, Sinking, Adrift, Abandoning, Piracy, MOB.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “DIST ALERT MSG”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
4. Press the **[NATURE]** soft key. The “NATURE OF” menu will appear on the display.
5. Press the **CH▼/CH▲** key to select the desired nature of distress category, then press the **[ENTER]** soft key.




6. Press and hold the **DISTRESS** key until a distress alert is transmitted.

## Transmitting a DSC Distress Alert by Manually Inputting Location and Time

In case the **HX870E** fails to get a GPS position fix, you may input your latitude and longitude, and time to transmit the distress alert.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “DSC CALL”, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “DIST ALERT MSG”, then press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
4. Press the **[POS/TM]** soft key.
5. Press the **CH▼/CH▲/◀/▶** key to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.

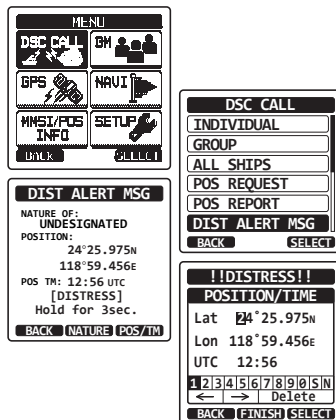



6. Repeat step 5 to set the position and time.  
If a mistake was made, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.

- When finished programming the position and time, press the **[FINISH]** soft key. The display will return to the previous screen.
- Press and hold the **DISTRESS** key until a distress alert is transmitted.

### Pausing a DSC Distress Call

After a DSC distress call is transmitted, the DSC distress call is repeated every 4 minutes until the call is canceled by the user or until the radio is turned off and on again. The **HX870E** has the capability to suspend (pause) the retransmitting of the distress call by the procedure below.

- After the distress call is transmitted, the radio will show the display as on the right. Looking at this display you will notice "TX IN: 0:15", this is the time when the radio will re-transmit the DSC distress call.
- To suspend re-transmitting the DSC call, press the **[PAUSE]** soft key.
- To resume counting down to transmit the DSC Distress call, press the **[RESUME]** soft key.

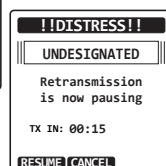
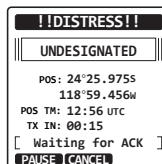


### Canceling a DSC Distress Call

If a DSC distress call was sent by error the **HX870E** allows you to send a message to other vessels to cancel the distress call that was made.


Press the **[CANCEL]** soft key, then press the **[YES]** soft key.

After the message for cancelling has been transmitted, press the **[OK]** soft key.

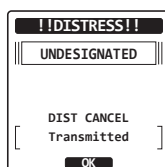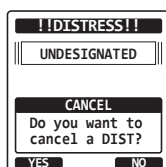

## 9.3.2 Receiving a DSC Distress Call

- When a DSC distress call is received, an emergency alarm sounds.
- Press any key to stop the alarm.
- Press the **CH▼** key several times to show information on the vessel in distress.

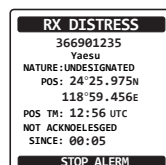

On the display you will notice 3 soft key selections. These selections are described below:

**[ACCEPT]:** Press this key to accept the DSC distress call and to switch to Channel 16.

**Note:** If a key is not pressed for 15 seconds or longer the radio will automatically select Channel 16. (Timer setting time is set in “CH SWITCH TIME” from “DSC SETUP”. The default setting is 15 sec.)

**[PAUSE]:** Press this key to temporarily disable automatic switching to Channel 16.

**[QUIT]:** Press this key to quit the automatic Channel 16 switching and revert to the last selected working channel.

4. After accepting the call, press the **[TO WPT]** soft key to set the vessel in distress as a destination for navigation.

**Note:** You may change the waypoint name.

5. Press the **CH▼/CH▲** key to select “SAVE & GO”, then press the **[SELECT]** soft key to replace the display to the waypoint screen. The display indicates the distance and direction of the distressed vessel, and also the compass indicates the distressed vessel by dot (●).
6. To stop navigating to a waypoint, press one of the soft keys, then press the **[STOP]** soft key. The radio is switched to the normal mode.


<b>RX DISTRESS</b>	
366901235	
Yaesu	
NATURE: UNDESIGNATED	
POS: 24°25.975N	
118°59.456E	
POS TM: 12:56 UTC	
NOT ACKNOWLEDGED	
SINCE: 00:05	
ACCEPT	PAUSE
QUIT	

<b>RX DISTRESS ACK</b>	
<b>DIST INFO</b>	
DIST: 366901235	
Horizon	
NATURE: UNDESIGNATED	
POS: 24°25.975N	
118°59.456E	
POS TM: 12:56 UTC	
DST: 10:00 NM	
BACK	TO WPT
QUIT	

<b>WAYPOINT</b>	
NAME:	
001MPT-----	
POSITION:	
34°25.975S	
118°59.456W	
SAVE	
SAVE & GOTO	
BACK	SELECT

BUSY INT	
H3 0.000	
<b>16</b>	
WPT	
N	
E	
S	
W	
BRG T	
300	
DST	
10.0	
SD GPH	
36.0	
N-UP	
20nm	
WPT 001MPT	

## NOTE

- You must continue monitoring Channel 16 as a coast station may require assistance in the rescue attempt.
- When there is an unread distress alert, “” icon will appear on the display. You may review the unread distress alert from the DSC log, refer to the section “9.12.2 Reviewing a Logged DSC Distress Call”.
- Not all DSC radios can receive a DSC distress relay call.



## 9.4 ALL SHIPS CALL

The all ships call function allows contact to be established with DSC equipped vessels without having their MMSI in the individual calling directory. Also, priority for the call can be designated as “Urgency” or “Safety”.

**URGENCY Call:** This type of call is used when a vessel may not truly be in distress, but have a potential problem that may lead to a distress situation. This call is the same as saying “PAN PAN, PAN PAN, PAN PAN” on Channel 16.

**SAFETY Call:** This type of call is used to transmit boating safety information to other vessels. This message usually contains information about an overdue boat, debris in the water, loss of a navigation aid or an important meteorological message. This call is the same as saying “Securite, Securite, Securite”.

### 9.4.1 Transmitting an All Ships Call

1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “All SHIPS”.
3. Press the **[SELECT]** soft key. (To cancel, press the **[BACK]** soft key.)
4. Press the **CH▼/CH▲** key to select the nature of call (“SAFETY” or “URGENCY”), then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the operating channel you want to communicate on, then press the **[SELECT]** soft key.
6. Press the **[YES]** soft key to transmit the selected type of all ships call.
7. After the all ships call is transmitted, the transceiver will switch to the selected channel.
8. Listen to the channel to make sure it is not busy, then key the microphone and say “PAN PAN, PAN PAN, PAN PAN” or “Securite, Securite, Securite” depending on the priority of the call.
9. Press the **[QUIT]** soft key to exit the all ships call menu.



## 9.4.2 Receiving an All Ships Call

1. When an all ships call is received, an emergency alarm will sound.

The display shows the MMSI of the vessel transmitting the all ships call and the radio will change to the requested channel after 15 seconds (the default setting of “CH SWITCH TIMER”).

2. Press any key to stop the alarm.
3. Monitor the requested channel until the all ships voice communication is completed.

On the display you will notice 3 soft key selections. These selections are described below:

**[ACCEPT]:** Press this key to accept the DSC all ships call and to switch to requested channel.




**Note:** If a key is not pressed for 15 seconds or longer the radio will automatically change to the requested channel (the default setting of “CH SWITCH TIMER”).

**[PAUSE]:** Press this key to temporarily disable automatic switching to the requested channel.


**Note:** In some cases automatically switching to a requested channel might disrupt important ongoing communications. This feature allows commercial users to suspend channel switching and stay on the working channel selected before the all ships call was received.

**[QUIT]:** Press this key to quit the automatic channel switching and revert to the last selected working channel.

4. Press the **[QUIT]** key to return to the channel display.

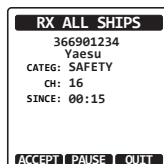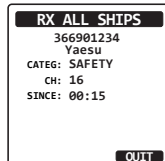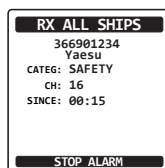

### NOTE

When there is an unread all ships call, “” icon will appear on the display. You may review the unread all ships call from the DSC log, refer to the section “9.12.3 Reviewing Other Logged Calls”.


## 9.5 INDIVIDUAL CALL

This feature allows the **HX870E** to contact another vessel with a DSC VHF radio and automatically switch the receiving radio to a desired communications channel. This feature is similar to calling a vessel on CH16 and requesting to go to another channel (switching to the channel is private between the two vessels). Up to 100 individual contacts may be programmed.

### 9.5.1 Setting up the Individual / Position Call Directory

The **HX870E** has a DSC directory that allows you to store a vessel or person's name and the associated MMSI number you wish to contact via individual calls, auto polling, position request, position report, and polling transmissions. To transmit an individual call you must program this directory with information of the persons you wish to call, similar to a cellular phones telephone directory.

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP".
3. Press the **[SELECT]** soft key, then select "DSC SETUP" with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select "INDIVIDUAL DIR." with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Select "ADD" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
7. Press the **CH▼/CH▲** key to scroll through the first letter of the name of the vessel or person you want to reference in the directory.
8. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
9. Repeat steps 7 and 8 until the name is complete. The name can consist of up to eleven characters, and if you do not use all eleven characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.  
If a mistake was made entering in the name, press the **CH▼/CH▲/◀/▶** key to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 7 and 8.
10. After the eleventh letter or space has been entered, press the **[FINISH]** soft key to advance to the MMSI number entry.

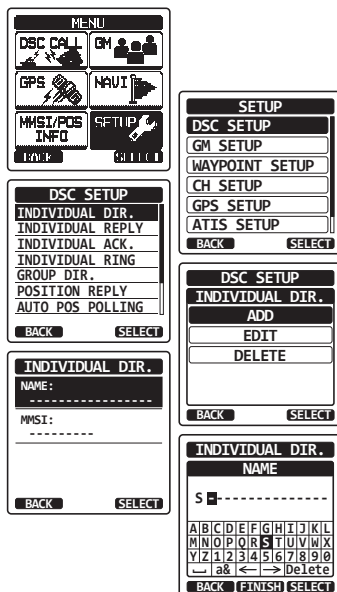

11. Press the **CH▼/CH▲** key to scroll through numbers, 0-9. To enter the desired number and move one space to the right by pressing the **[ENTER]** soft key. Repeat this procedure until all nine space of the MMSI number are entered.

If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 11.

12. After the ninth letter has been entered, press the **[FINISH]** soft key.

13. To store the entered data, press the **CH▼/CH▲/◀/▶** key to select “SAVE”, then press the **[SELECT]** soft key.

14. To enter another individual address, repeat steps 6 through 13.

INDIVIDUAL DIR.  
NAME: STANDARD-----  
MMSI: 987654321  
Saved  
BACK ENTER

15. Press the **CLR** key to return to radio operation.

## 9.5.2 Setting up the Individual Call Reply

This menu item sets up the radio to automatically (default setting) or manually respond to a DSC individual call requesting you to switch to a working channel for voice communications. When “Manual” is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “SETUP”.
3. Press the **[SELECT]** soft key, then select “DSC SETUP” with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select “INDIVIDUAL REPLY” with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select “AUTO” or “MANUAL”.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.

MENU  
DSC CALL CH  
BPS HAUT  
MMSI/POS INFO SETUP  
BACK ENTER

DSC SETUP  
INDIVIDUAL DIR.  
INDIVIDUAL REPLY  
INDIVIDUAL ACK.  
INDIVIDUAL RING  
GROUP DIR.  
POSITION REPLY  
AUTO POS POLLING  
BACK SELECT


SETUP  
DSC SETUP  
GM SETUP  
WAYPOINT SETUP  
CH SETUP  
GPS SETUP  
ATIS SETUP  
BACK SELECT

DSC SETUP  
INDIVIDUAL REPLY  
AUTO  
MANUAL  
BACK ENTER

### 9.5.3 Enabling the Individual Call Acknowledgment

The radio can select either reply message “Able” (default) or “Unable” when the individual reply setting (described in the previous section) is set to “AUTO-MATIC”.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “SETUP”.
3. Press the **[SELECT]** soft key, then select “DSC SETUP” with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select “INDIVIDUAL ACK.” with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select “ABLE” or “UNABLE”.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.

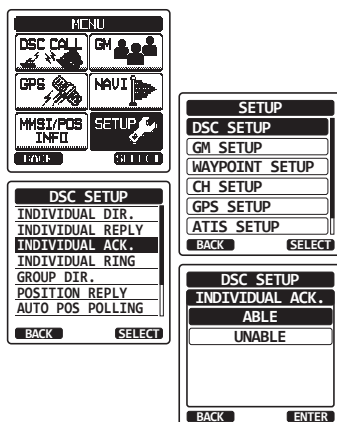


### 9.5.4 Transmitting an Individual Call

This feature allows the user to contact another vessel with a DSC radio. This feature is similar to calling a vessel on CH16 and requesting to go to another channel.

#### *Individual Call using the Individual/Position Directory*

1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “INDIVIDUAL”. (To cancel, press the **[BACK]** soft key.)
3. Press the **[SELECT]** soft key.

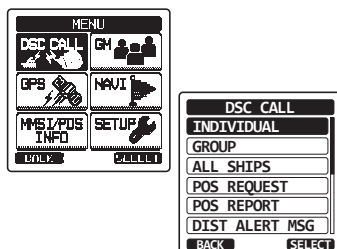

4. Press the **CH▼/CH▲** key to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select an individual you want to contact.
6. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select the operating channel you want to communicate on, then press the **[SELECT]** soft key.
7. Press the **[YES]** soft key to transmit the individual DSC signal.
8. When an individual call acknowledgment is received, the established channel is automatically changed to the channel which is selected on step 6 above and a ringing tone sounds.
9. Press the **[QUIT]** soft key to listen to the channel to make sure it is not busy, then press the **PTT** button and talk into the microphone to the other vessel.

INDIVIDUAL CALL  
HISTORY  
MEMORY  
NEW ID  
[BACK] [SELECT]

INDIVIDUAL CALL HISTORY  
KAREN  
808  
366901254  
Horizon-1  
Standard  
Horizon-2  
USCG  
[BACK] [SELECT]

INDIVIDUAL CALL  
987654321  
Horizon-1  
CATEG: ROUTINE  
CH: 26  
[Do you want to transmit a Call?]  
[YES] [NO]

INDIVIDUAL CALL  
987654321  
Horizon-1  
CATEG: ROUTINE  
CH: 26  
SINCE: 00:05  
[Waiting for ACK]  
[RESEND] [QUIT]

### Individual Call by Manually Entering a MMSI

You may enter an MMSI number manually to contact without storing it in the individual directory.

1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “INDIVIDUAL”. (To cancel, press the **[BACK]** soft key.)
3. Press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select “NEW ID”, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the first number of the MMSI which you want to contact, then press the **[SELECT]** soft key to step to the next number.

MENU  
DSC CALL CH [Icons]  
GPS NAUT [Icons]  
MMSI/POS INFO SETUP [Icons]  
[MENU] [QUIT]

INDIVIDUAL CALL  
HISTORY  
MEMORY  
NEW ID  
[BACK] [SELECT]

DSC CALL  
INDIVIDUAL  
GROUP  
ALL SHIPS  
POS REQUEST  
POS REPORT  
DIST ALERT MSG  
[BACK] [SELECT]

INDIVIDUAL CALL  
MMSI  
98765432  
[1][2][3][4][5][6][7][8][9][0]  
[←] [→] [Delete]  
[BACK] [FINISH] [SELECT]

- Repeat step 5 to set the MMSI number (nine digits).

If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.

- When finished entering the MMSI number, press the **[FINISH]** soft key.
- Press the **CH▼/CH▲** key to select the operating channel you want to communicate on, then press the **[SELECT]** soft key.

INDIVIDUAL CALL	
INTERSHIP CH	
CH:06	
CH:08	
CH:09	
CH:10	
CH:13	
BACK	MANUAL SELECT

INDIVIDUAL CALL	
987654321	
CATEG: ROUTINE	
CH: 67	
[ Transmitting ]	

INDIVIDUAL CALL	
987654321	
CATEG: ROUTINE	
CH: 67	
[ Do you want to transmit a Call? ]	
YES	NO

INDIVIDUAL CALL	
987654321	
CATEG: ROUTINE	
SINCE: 00:05	
[ Waiting for ACK ]	
RESEND	QUIT

- Press the **[YES]** soft key to transmit the individual DSC signal.
- When an individual call acknowledgment is received, the established channel is automatically changed to the channel which is selected on step 8 above and a ringing tone sounds.
- Press the **[QUIT]** soft key to listen to the channel to make sure it is not busy, then press the **PTT** button and talk into the microphone to the other vessel.

### 9.5.5 Receiving an Individual Call

When an individual DSC call is received, the radio will automatically respond (default setting) to the calling ship, and switch to the requested channel for voice communications. Refer to section “**9.5.2 Setting up the Individual Call Reply**” to change the reply to manual if you want to see who is calling before replying to the call.

#### Automatic reply:

- When an individual call is received, an individual call ringing alarm sounds.  
The radio automatically switches to the requested channel.  
The display shows the MMSI of the vessel calling.
- Press any key to stop the alarm.
- Monitor the requested channel until the message is completed.  
Press the **PTT** button and talk into the microphone to the called vessel.
- Press the **[QUIT]** soft key to return to radio operation.

RX INDIVIDUAL	
366901235	
Yaesu	
CATEG: ROUTINE	
CH: 06	
SINCE: 00:15	
[ Connected ]	
STOP ALARM	

RX INDIVIDUAL	
366901235	
Yaesu	
CATEG: ROUTINE	
CH: 06	
SINCE: 00:15	
[ Connected ]	
RESEND	QUIT

## Manual reply:

1. When an individual call is received, an individual call ringing alarm sounds.

The display shows the MMSI of the vessel transmitting the individual call.

2. Press any key to stop the alarm.
3. On the display you will notice 3 soft key selections. These selections are described below:

**[ACCEPT]:** Press this key to accept the DSC individual call and to switch to requested channel.

**[PAUSE]:** Press this key to temporarily disable automatic switching to the requested channel.

**Note:** In some cases automatically switching to a requested channel might disrupt important ongoing communications. This feature allows commercial users to suspend channel switching and stay on the working channel selected before the individual call was received.

**[QUIT]:** Press this key to quit the automatic channel switching and revert to the last selected working channel.

**Note:** If a key is not pressed for 30 seconds or longer the radio will automatically change to radio operation.

4. After accepting the call, press the **[ABLE]** soft key to switch to the requested channel. (To inform that you cannot respond, press the **[UNABLE]** soft key.)






5. Press the **[YES]** soft key to send an acknowledgement.

Press the **[CHG CH]** soft key to change the channel for communication from the requested one.


6. Monitor the requested or specified channel until the message is completed.

Press the **PTT** button and talk into the microphone to the called vessel.

7. Press the **[QUIT]** soft key to return to the channel display.

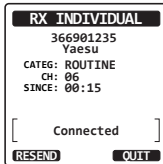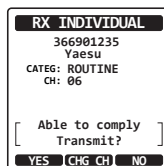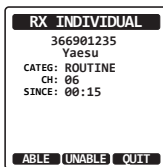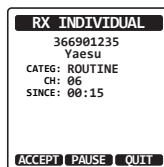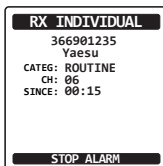

## NOTE


When there is an unread individual call, “” icon will appear on the display. You may review the unread individual call from the DSC log, refer to the section “9.12.3 Reviewing Other Logged Calls”.



## 9.5.6 Setting up the Individual Call Ringer


When an individual call is received the radio's default setting will produce a ringing sound for 2 minutes. This selection allows the individual call ringer time to be changed.

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "DSC SETUP" menu with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select "INDIVIDUAL RING" with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select ringing time of individual calls.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.

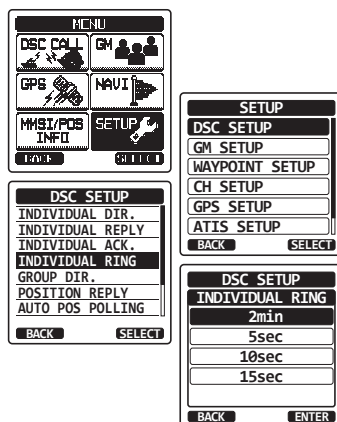

The **HX870E** has the capability to turn off the individual call ringer.

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "DSC SETUP" menu with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select "DSC BEEP" with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select "INDIVIDUAL", then press the **[SELECT]** soft key.
7. Press the **CH▼/CH▲** key to select "OFF".
8. Press the **[ENTER]** soft key to store the selected setting.
9. Press the **CLR** key to return to radio operation.

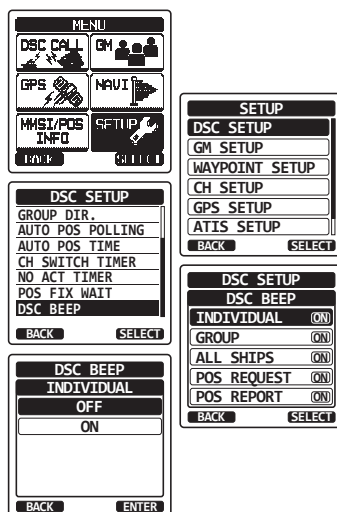

To re-enable the ringer tone, repeat the above procedure, pressing the **CH▼/CH▲** key to select "ON" in step 7 above.

## 9.6 GROUP CALL

This feature allows the user to contact a group of specific vessels (e.g. members of a yacht club) using DSC radios with the group call function to automatically switch to a desired channel for voice communications. This function is very useful for yacht clubs and vessels traveling together that want to collectively make announcements on a predetermined channel. Up to 20 group MMSIs may be programmed.

### 9.6.1 Setting up a Group Call

For this function to operate, the same group MMSI (Maritime Mobile Service Identity Number) must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature. To understand Group MMSI programming, first a ship MMSI has to be understood.






**Ship MMSI:** The first three digits called MID (Mobile Identity Group) of a ship MMSI denote the country where the ship's MMSI is registered. The last 6 digits are specific to the ship's ID.

*Ship MMSI Example:* If your MMSI is "366123456", "366" is MID which denotes the country and "123456" is your ship's MMSI.

#### **Group MMSI:**

- ☐ Group MMSI numbers are not assigned by the FCC or other organizations licensed to assign ship MMSI numbers.
- ☐ The first digit of a group MMSI is always set to "0" by International rules. All Standard Horizon radios are preset so when programming a group MMSI the first digit is set to "0".
- ☐ The USCG recommends programming the MID of a ship MMSI into the Second, Third and Fourth digits of the group MMSI as it denotes the area the ship is located in.
- ☐ The last 5 digits are decided upon by persons in the group. This is an important step as all radios in the group must contain the same group MMSI so they can be contacted by each other. There is a chance that another group of vessels may program in the same group MMSI. If this happens, simply change one or more of the last 5 digits of the group MMSI.

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "DSC SETUP" with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select "GROUP DIR." with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key, then select "ADD" with the **CH▼/CH▲** key.
6. Press the **[SELECT]** soft key.
7. Press the **CH▼/CH▲** key to scroll through the first letter of the name of the group you want to reference in the directory.
8. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
9. Repeat steps 7 and 8 until the name is complete. The name can consist of up to eleven characters, if you do not use all eleven characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.

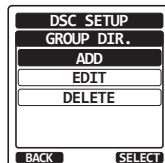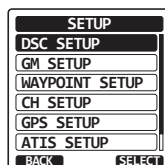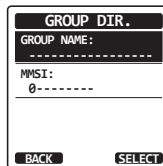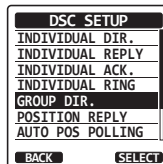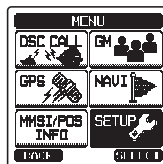


- If a mistake was made entering in the name, press the **CH▼/CH▲/◀/▶** key to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 7 and 8.
10. After the eleventh letter or space has been entered, press the **[FINISH]** soft key to advance to the group MMSI number entry.
  11. Press the **CH▼/CH▲** key to select the second number of the MMSI (nine digits: first digit permanently set to "0") which you want to contact, then press the **[SELECT]** soft key to step to the next number. Repeat this procedure until all eight spaces of the MMSI number are entered.  
If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 11.
  12. After the ninth letter has been entered, press the **[FINISH]** soft key to confirm.
  13. To store the data, select "SAVE", then press the **[SELECT]** soft key.
  14. To enter another group address, repeat steps 6 through 13.
  15. Press the **CLR** key to return to radio operation.

## 9.6.2 Transmitting a Group Call

### Group Call using the Group Directory


1. Press the **MENU** key to display "MENU", select "DSC CALL" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select "GROUP". (To cancel, press the **[BACK]** soft key.)
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select "HISTORY" or "MEMORY".
4. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select a group you want to contact.
5. Press the **[SELECT]** soft key, press the **CH▼/CH▲** key to select the operating channel you want to communicate on, then press the **[SELECT]** soft key.
6. Press the **[YES]** soft key to transmit the group call signal.
7. When the group call signal is sent, the display will be as shown in the illustration at the right.
8. After the group call is transmitted, all the radios in the group will switch to the designated channel.
9. Listen to the channel to make sure it is not busy, then press the **PTT** button and call the other vessel you desire to communicate with.

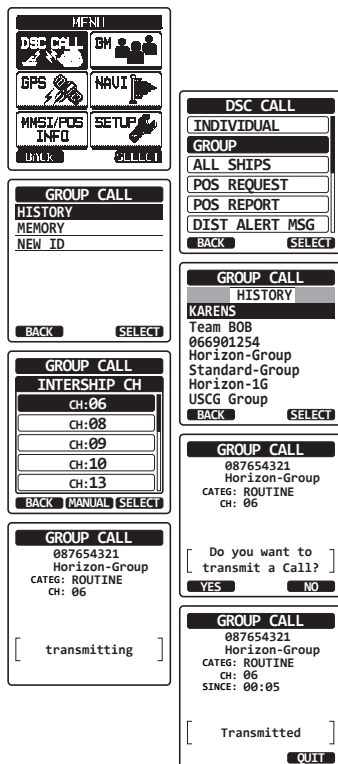

## Group Call by Manually Entering an MMSI

This feature allows you to contact a group of vessels by entering in their group MMSI manually.

1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “GROUP”. (To cancel, press the **[BACK]** soft key.)
3. Press the **[SELECT]** soft key.
4. Select “NEW ID” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the first number of the MMSI (nine digits: first digit permanently set to “0”) which you want to contact, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set the MMSI number.  
If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
7. When finished entering the MMSI number, press the **[FINISH]** soft key.
8. Press the **CH▼/CH▲** key to select the operating channel you want to communicate on, then press the **[SELECT]** soft key.
9. Press the **[YES]** soft key to transmit the group call signal.
10. After the group call is transmitted, all the radios in the group will switch to the designated channel.
11. Listen to the channel to make sure it is not busy, then press the **PTT** button and talk into the microphone to the group of vessels.

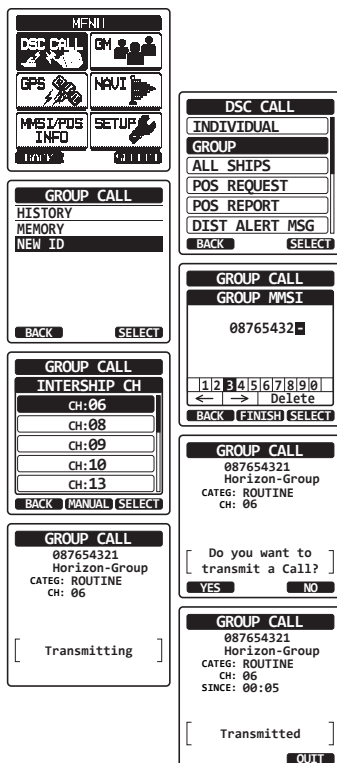

### 9.6.3 Receiving a Group Call

1. When a group call is received, the **HX870E** will produce a ringing alarm sound.
2. The display shows the group MMSI number.
3. Press any key to stop the alarm.
4. Monitor the channel for the person calling the group for a message.

On the display you will notice 3 soft key selections. These selections are described below:




**[ACCEPT]**: Press this key to accept the group call and to switch to requested channel.

**[PAUSE]**: Press this key to temporarily disable automatic switching to the requested channel.


**[QUIT]**: Press this key to quit the automatic channel switching and revert to the last selected working channel.

5. If you want to respond, monitor the channel to make sure it is clear, then press the **PTT** button and talk into the microphone to the group of vessels.
6. Press the **[QUIT]** soft key to return to radio operation.

**Note**: If a key is not pressed for 30 seconds or longer the radio will automatically change to radio operation.

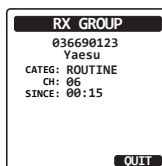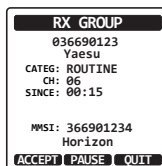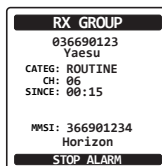


#### NOTE

When there is an unread group call, “” icon will appear on the display. You may review the unread group call from the DSC log, refer to the section “**9.12.3 Reviewing Other Logged Calls**”.

## 9.6.4 Setting up the Group Call Ringer

The **HX870E** has the capability to turn off the group call ringer.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “SETUP”, then press the **[SELECT]** soft key.
3. Select “DSC SETUP” menu with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select “DSC BEEP” with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select “GROUP”, then press the **[ENTER]** soft key.
7. Press the **CH▼/CH▲** key to select “OFF”.
8. Press the **[SELECT]** soft key to store the selected setting.
9. Press the **CLR** key to return to radio operation.

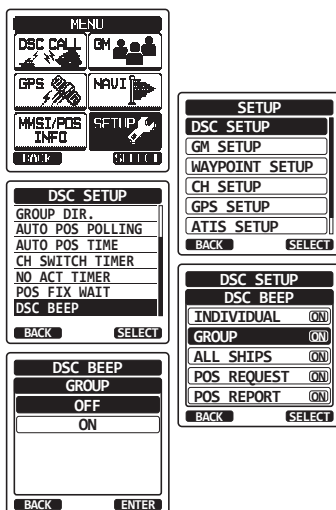

To re-enable the ringer tone, repeat the above procedure, pressing the **CH▼/CH▲** key to select “ON” in step 7 above.

## 9.7 POSITION REQUEST

Advancements in DSC have made it possible to poll the location of another vessel and show the position of that vessel on the display of the **HX870E**. This is a great feature for anyone wanting to know the position of another vessel. For example your buddy that is catching fish, or finding the location of a person you are cruising with.

### NOTE


The other vessel must have an operating GPS receiver connected to its DSC radio and must not have its radio set not to deny position requests.

### 9.7.1 Transmitting a Position Request to Another Vessel

#### *Position Request using the Individual/Position Directory*

Refer to section “**9.5 INDIVIDUAL CALL**” to enter information into the individual directory.

1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select “POS REQUEST”, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select a name that was stored in the individual/position directory.
5. Press the **[SELECT]** soft key, then press the **[YES]** soft key to transmit the position request DSC call.
6. When the **HX870E** receives the position from the polled vessel it is shown on the radio display.
7. Press the **[QUIT]** soft key to return to radio operation.

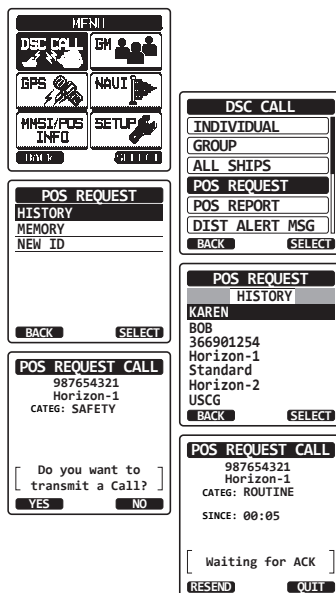

### NOTE


If the **HX870E** does not receive position data from the polled vessel, the display will show “NO POSITION DATA”.



## Position Request by Manually Entering an MMSI

This feature allows you to request the position of a vessel by manually entering the MMSI.

1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “POS REQUEST”.
3. Press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select “NEW ID”, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the first number of the MMSI (nine digits) which you want to contact, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set the MMSI number.  
If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
7. When finished entering the MMSI number, press the **[FINISH]** soft key.
8. Press the **[YES]** soft key to transmit the position request DSC call.
9. When the **HX870E** receives the position from the polled vessel it is shown on the radio display.
10. Press the **[QUIT]** soft key to return to radio operation.

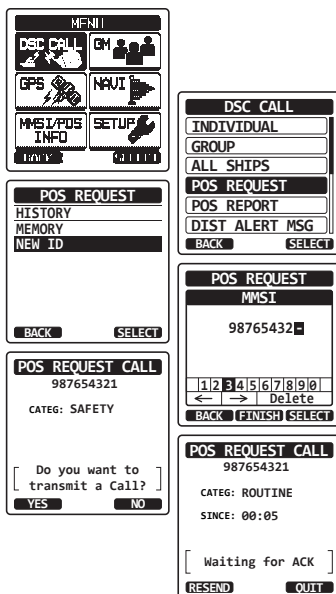

## NOTE


The received position from the polled vessel can be transferred to a GPS chart plotter via NMEA DSC and DSE sentences.

## 9.7.2 Receiving a Position Request

When a Position Request Call is received from another vessel and a ringing alarm will sound. Operation and transceiver function differs depending on “POSITION REPLY” menu in the “DSC SETUP” menu setting. Refer to section “9.7.4 SETTING UP POSITION REPLY”.


### Automatically reply:

1. When a position request call is received from another vessel, a ringing sound will be produced. Then requested position coordinates are transmitted automatically to the vessel requesting your vessels position.
2. To exit from Position Request display, press the **[QUIT]** soft key.

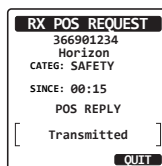


### Manually reply:

1. When a position request call is received from another vessel, a ringing sound will be produced, and the display will be as shown in the illustration at the right.
2. Press any key to stop the alarm.
3. To send your vessel's position to the requesting vessel, press the **[REPLY]** soft key. Or to exit from position request display, press the **[QUIT]** soft key.
4. Press the **[QUIT]** soft key to return to the channel display.

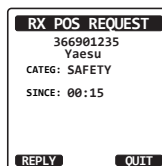


## NOTE

When there is an unread position request call, “” icon will appear on the display. You may review the unread individual call from the DSC log, refer to the section “9.12.3 Reviewing Other Logged Calls”.

### 9.7.3 Manual Input of Position Information

If the **HX870E** is located in an area where GPS reception is limited when you are going to reply to the received position request, you may manually input your location (latitude and longitude) and time to be sent.


1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "MMSI/POS INFO", then press the **[SELECT]** soft key.
3. Press the **[POS/TM]** soft key.
4. Press the **CH▼/CH▲/◀/▶** key to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.
5. Repeat step 4 to set the position and time.  
If a mistake was made, press the **CH▼/CH▲/◀/▶** key to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 4.
6. When finished programming the position and time, press the **[FINISH]** soft key. The display will return to the previous screen.
7. Press the **[OK]** soft key.
8. Press the **CLR** key to return to radio operation.

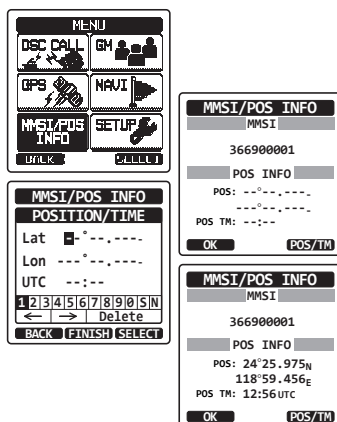



### 9.7.4 SETTING UP POSITION REPLY

The **HX870E** can be set up to "automatically" or "manually" send your position to another vessel. This selection is important if you are concerned about someone polling the position of your vessel that you may not want to. In the "Manual" mode you will see the MMSI or persons name shown on the display allowing you to choose to send your position to the requesting vessel.

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "DSC SETUP" with the **CH▼/CH▲** key.

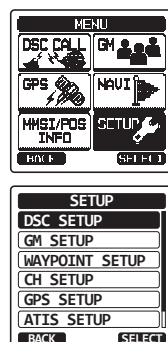






4. Press the **[SELECT]** soft key, then select “POSITION REPLY” with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “AUTO” or “MANUAL”. In “AUTO” mode, after a DSC POS Request is received, the radio will automatically transmit your vessels position. In “MANUAL” mode, the display of the radio will show who is requesting the position.
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

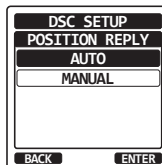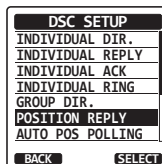

### 9.7.5 Setting up a Position Request Ringer

The **HX870E** has the capability to turn off the position request ringer.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “SETUP”, then press the **[SELECT]** soft key.
3. Select “DSC SETUP” with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select “DSC BEEP” with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key, then select “POS REQUEST” with the **CH▼/CH▲** key.
6. Press the **[SELECT]** soft key, then select “OFF” with the **CH▼/CH▲** key.
7. Press the **[ENTER]** soft key to store the selected setting.

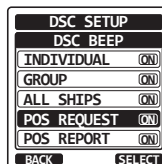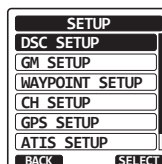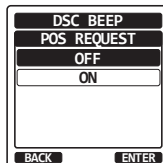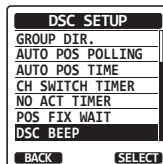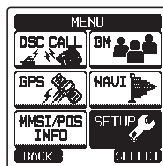

8. Press the **CLR** key to return to radio operation.

To re-enable the ringer tone, repeat the above procedure, pressing the **CH▼/CH▲** key to select “ON” in step 6 above.

## 9.8 POSITION REPORT


The feature is similar to position request, however instead of requesting a position of another vessel this function allows you to send your position to another vessel.

### 9.8.1 Transmitting a DSC Position Report Call

#### *DSC Position Report Call using the Individual/Position Directory*

Refer to section “9.5 INDIVIDUAL CALL” to enter information into the individual directory.


1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select “POS REPORT”. (To cancel, press the **[BACK]** soft key.)
3. Press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select “HISTORY” or “MEMORY”.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the name in the directory, then press the **[SELECT]** soft key.
7. Press the **[YES]** soft key to send your position to the selected vessel.
8. Press the **[QUIT]** soft key to return to radio operation.

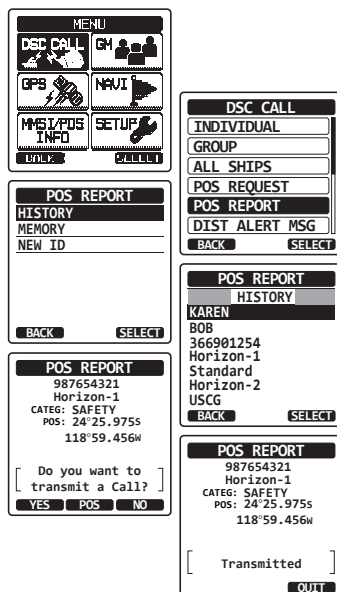

### DSC Position Report Call by Manually Entering an MMSI

This feature allows you to send your position to another vessel by manually entering the MMSI of the ship you want to send your position to.

1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select “POS REPORT”. (To cancel, press the **[BACK]** soft key.)
3. Press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select “NEW ID”, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the first number of the MMSI which you want to contact, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set the MMSI number. If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
7. When finished entering the MMSI number, press the **[FINISH]** soft key.
8. If you want to change the position displayed, press the **[POS/TM]** soft key to go to the position information input screen. After inputting new position information, press the **[FINISH]** soft key to confirm.
9. Press the **[YES]** soft key to send your position to the selected vessel.
10. Press the **[QUIT]** soft key to return to radio operation.

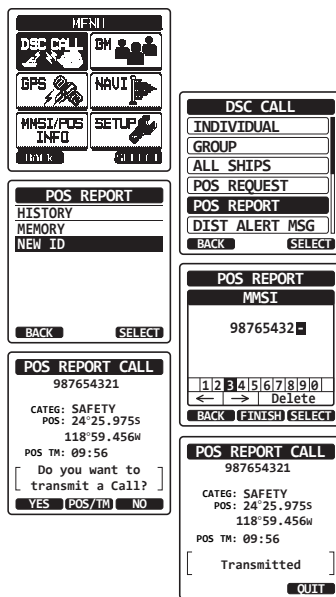



### DSC Position Report Call by Manually Input Location and Time

If the **HX870E** is located in an area where GPS reception is limited when you are going to transmit a position report call, you may manually input your location (latitude and longitude) and time to be sent. For details, refer to section “**9.7.3 Manual Input of Position Information**”.

## 9.8.2 Receiving a DSC Position Report Call

When another vessel transmits their vessels location to the **HX870E** the following will happen:

1. When a position report call is received from another vessel, a ringing sound will be produced.
2. Press any key to stop ringing.
3. Press the **[INFO]** soft key to see more detailed position information of the station.
4. To exit to radio mode, press the **[QUIT]** soft key.


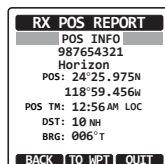
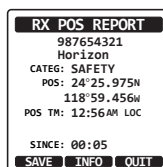


## 9.8.3 Navigating to the Reported Position

The **HX870E** has a feature that allows you to navigate to a received position report call by using the compass display. Navigating to the position of a position report call may be enabled by the procedure below.


1. After the position report call has been received, press the **[INFO]** soft key.
2. Press the **[TO WPT]** soft key.
3. To start navigation using the compass display, select "GOTO" with the **CH▼/CH▲** key, then press the **[ENTER]** soft key.

The display indicates the distance and direction of the received vessel, and also the compass indicates the received vessel with a dot (●).

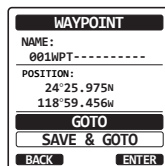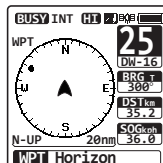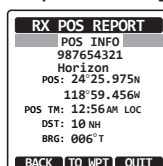

### Stopping Navigation to the Reported Position

1. Press one of the soft keys to show the key selections.
2. Press the **[STOP]** soft key. The radio will stop navigating to the waypoint and the normal VHF display will be shown.

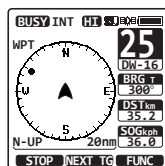

### 9.8.4 Saving the Reported Position as a Waypoint

The **HX870E** can save a position report call in the radio's memory as a waypoint.

1. After the position report call has been received, press the **[SAVE]** soft key.
2. If you want to change the name of the waypoint, press the **CH▼/CH▲** key to select "NAME", then press the **[SELECT]** soft key.
3. Enter the name of the waypoint you want to reference in the directory. For details, refer to "**9.5.1 Setting up the Individual / Position Call Directory**".
4. Press the **CH▼/CH▲** key to select "SAVE", then press the **[ENTER]** soft key to save the waypoint into memory.
5. Press the **[OK]** soft key to return to the position report display.

RX POS REPORT  
987654321  
Horizon  
CATEG: SAFETY  
POS: 24°25.975N  
118°59.456W  
POS TM: 12:56AM LOC  
SINCE: 00:05  
[SAVE] [INFO] [QUIT]

WAYPOINT DIR.  
NAME  
S-----  
A B C D E F G H I J K L  
M N O P Q R S T U V W X  
Y Z 1 2 3 4 5 6 7 8 9 0  
[a&] [←] [→] [Delete]  
[BACK] [FINISH] [SELECT]

RX POS REPORT  
987654321  
Horizon  
CATEG: SAFETY  
POS: 24°25.975N  
118°59.456W  
POS TM: 12:56AM LOC  
Saved  
[OK]

WAYPOINT DIR.  
NAME:  
001WPT-----  
POSITION:  
24°25.975N  
118°59.456W  
[SAVE]  
[BACK] [SELECT]

WAYPOINT DIR.  
NAME:  
Horizon-----  
POSITION:  
24°25.975N  
118°59.456W  
[SAVE]  
[BACK] [ENTER]

#### Navigating to a Saved Waypoint

Refer to section "**10.1 WAYPOINT OPERATION**" for details.

### 9.8.5 Setting up a Position Report Ringer

The **HX870E** has the capability to turn off the position report ringer.

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "DSC SETUP" menu with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select "DSC BEEP" with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key, then select "POS REPORT" with the **CH▼/CH▲** key.
6. Press the **[SELECT]** soft key, then select "OFF" with the **CH▼/CH▲** key.
7. Press the **[SELECT]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.

MENU  
DSC CALL [ON] [OFF] [GROUP] [INDIVIDUAL]  
GPS [ON] [OFF] [NAUT] [STAD]  
WIND POS [ON] [OFF] [INFO] [SETUP]  
[BACK] [ENTER]

DSC SETUP  
GROUP DIR.  
AUTO POS POLLING  
AUTO POS TIME  
CH SWITCH TIMER  
NO ACT TIMER  
POS FIX WAIT  
DSC BEEP  
[BACK] [SELECT]

DSC BEEP  
POS REPORT  
OFF  
ON  
[BACK] [ENTER]

SETUP  
DSC SETUP  
GM SETUP  
WAYPOINT SETUP  
CH SETUP  
GPS SETUP  
ATIS SETUP  
[BACK] [SELECT]

DSC SETUP  
DSC BEEP  
INDIVIDUAL (ON)  
GROUP (ON)  
ALL SHIPS (ON)  
POS REQUEST (ON)  
POS REPORT (ON)  
[BACK] [SELECT]

To re-enable the ringer tone, repeat the above procedure, pressing the **CH▼/CH▲** key to select "ON" in the step 6 above.




## 9.9 POLLING CALL

The **HX870E** has the capability to track another vessel.

### 9.9.1 Transmitting a Polling Call to a Vessel

*Polling Call using the Individual/Position Call Directory*


1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select “POLL-ING”, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “HISTO-RY” or “MEMORY”, then press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select a name that was stored in the individual/position call directory, then press the **[ENTER]** soft key.
5. Press the **[YES]** soft key to transmit the polling call.
6. After a polling call is transmitted, if the reply signal is not received, “Waiting for ACK” is shown on the display which means the **HX870E** is waiting for the vessel you called to send an acknowledgement.
7. To transmit the call again, press the **[RESEND]** soft key.
8. Press the **[QUIT]** soft key to return to radio operation.

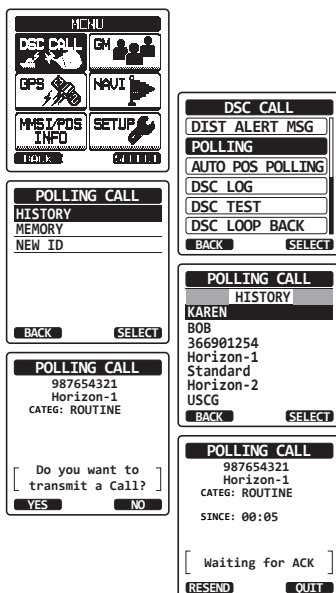

### Polling Call by Manually Entering an MMSI

This feature allows you to contact a vessel by manually entering the MMSI of the ship you want to track.


1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select “POLL-ING”, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “NEW ID” and press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select the first number in the MMSI and press the **[SELECT]** soft key.
5. Repeat step 4 until all the digits of the MMSI are shown on the display.
6. If a mistake was made entering in the MMSI number, press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the wrong character is selected, then perform step 5.
7. When finished entering the MMSI number, press the **[FINISH]** soft key.
8. Press the **[YES]** soft key to transmit the polling call.
9. Press the **[QUIT]** soft key to return to radio operation.

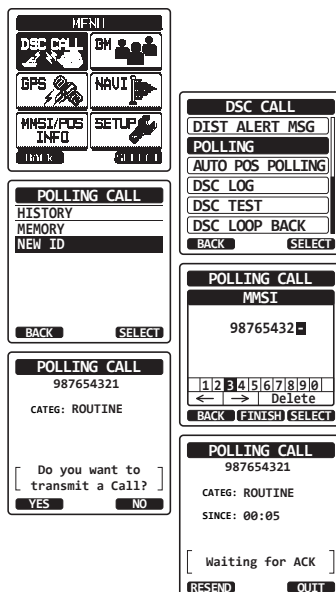

### 9.9.2 Receiving a Polling Call

When another vessel transmits a polling call to the **HX870E** the following will happen:

1. When a polling call is received, the radio will automatically respond to the calling vessel.
2. To exit from the polling call display, press the **[QUIT]** soft key.

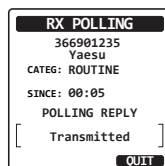


## 9.10 AUTO POS POLLING

The **HX870E** has the capability to automatically track seven vessels programmed into the individual directory, or to automatically send your position information to the programmed stations.


### 9.10.1 Setting up the Polling Operation

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "DSC SETUP" menu with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select "AUTO POS POLLING" with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the desired operation (AUTO POS REQUEST and AUTO POS REPORT), and press the **[ENTER]** soft key.
7. Press the **CLR** key to return to radio operation.

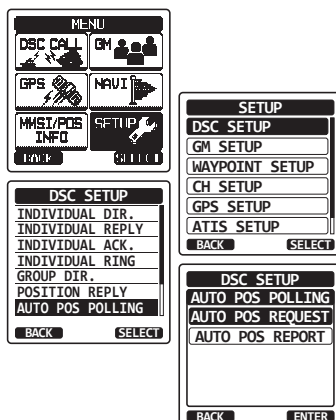

### 9.10.2 Setting up the Polling Time Interval

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "DSC SETUP" menu with the **CH▼/CH▲** key.
4. Press the **[SELECT]** soft key, then select "AUTO POS TIME" with the **CH▼/CH▲** key.
5. Press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the desired interval time (30 second, 1, 2, 3, and 5 minutes) and press the **[ENTER]** soft key.
7. Press the **CLR** key to return to radio operation.

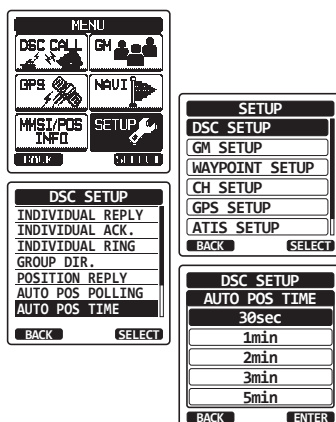


## 9.10.3 Selecting Vessels to be Automatically Polled

### NOTE



The radio uses the individual directory to select vessels to be automatically polled. Refer to section “9.5.1 Setting up the Individual / Position Call Directory” and to enter MMSI of vessels you want to poll before proceeding.

1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select “AUTO POS POLLING”, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select the “SELECT ID”, then press the **[SELECT]** soft key.
4. The radio will show a blank row highlighted when you select the vessel for the first time. Press the **[SELECT]** soft key.
5. The radio will show the vessels programmed in the individual directory. Press the **CH▼/CH▲** key to select the desired vessel and press the **[ENTER]** soft key.
6. For more entries, press the **CH▼/CH▲** key to select a blank row, press the **[SELECT]** soft key, then perform step 5.
7. When finished, press the **CLR** key to exit to the radio mode.

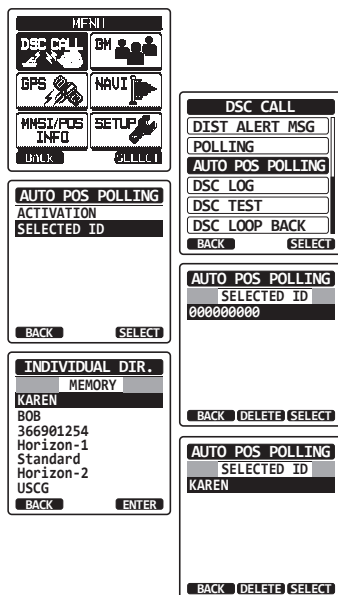

## 9.10.4 Enabling/Disabling Auto POS Polling

1. Press the **MENU** key to display "MENU", select "DSC CALL" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select "AUTO POS POLLING", then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select the "ACTIVATION", then press the **[SELECT]** soft key.
4. Select "START" to enable transmissions or "STOP" to disable.
5. Press the **[ENTER]** soft key.
6. Press the **CLR** key to return to radio operation.
7. Auto POS Polling starts and "A" icon will light up on the screen.

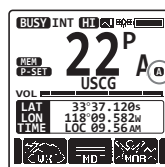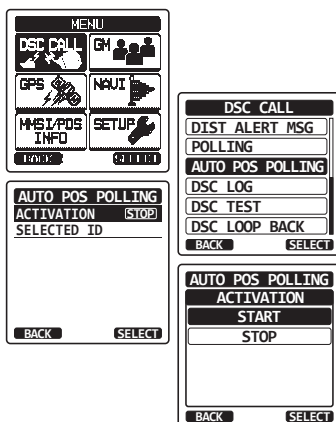

## 9.11 DSC TEST

This function is used to contact another DSC equipped vessel to ensure the DSC functions of the radio are operating.

### NOTE

To use this feature, the radio that will receive the test call also needs to have the DSC Test feature.

To perform the DSC test you will need to enter a MMSI of another vessel into the individual directory or manually enter in the MMSI using the procedure below.


### 9.11.1 Programming MMSI into Individual Directory

Refer to section “9.5.1 Setting up the Individual / Position Call Directory”.

### 9.11.2 Transmitting a DSC Test to Another Vessel


#### DSC Test call by using Individual/Position Directory

1. Press the **MENU** key to display “MENU”, select “DSC CALL” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select “DSC TEST”, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “HISTORY” or “MEMORY”, then press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select the ship name and press the **[SELECT]** soft key.
5. Press the **[YES]** soft key to transmit the DSC test call to the other vessel.
6. Press the **[QUIT]** soft key to return to radio operation.

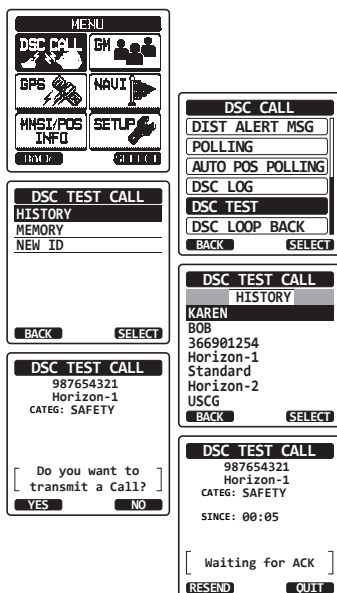

### DSC Test Call by Manually Entering an MMSI

1. Press the **MENU** key to display "MENU", select "DSC CALL" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
2. Press the **CH▼/CH▲** key to select "DSC TEST", then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select "NEW ID" and press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select the first digit in the MMSI and press the **[SELECT]** soft key.
5. Repeat step 4 until all the numbers of the MMSI are shown on the display.
6. Press the **[FINISH]** soft key to show the test call page.
7. Press the **[YES]** soft key to transmit the DSC test call to the other vessel.
8. Press the **[QUIT]** soft key to return to radio operation.

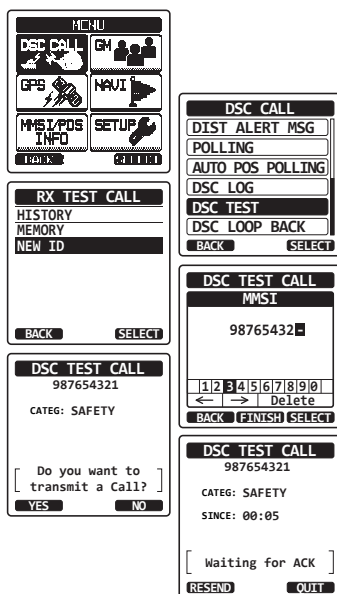


### **NOTE**

After the radio receives a test call reply from the vessel that was called, the radio will ring and show "RX TEST CALL" display, which confirms the radio you called has received the test call.


### **9.11.3 Receiving a DSC Test Call**

When another vessel transmits a DSC Test call to the **HX870E** the following will happen:

1. When a DSC Test call is received, the radio will automatically respond to the calling vessel.
2. To exit from the DSC Test call display, press the **[QUIT]** soft key.

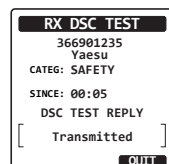

## 9.12 DSC LOG OPERATION

The **HX870E** logs transmitted calls, received DSC distress calls, and other calls (individual, group, all ships, etc.). The DSC log feature is similar to an answer machine where calls are recorded for review and a “” icon will appear on the radios display. The **HX870E** can store up to 24 transmitted calls, up to the latest 27 distress calls, and up to the latest 64 other calls (individual, group, all ships, position report, position request ack, test call ack, and polling calls).






### NOTE

When the “DSC LOG” menu is selected, the **HX870E** may display high-priority logged call automatically.

### 9.12.1 Reviewing and Resending a Transmitted Logged Call

The **HX870E** allows transmitted logged calls to be reviewed and to resend the call.


1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “DSC LOG”.
3. Press the **[SELECT]** soft key, then confirm “TRANSMITTED” is selected.
4. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select the station (name or MMSI number) you want to review and/or resend the call.
5. Press the **[SELECT]** soft key to review details for the selected station.
6. Press the **[CALL]** soft key to resend the call or press the **[BACK]** soft key to go back to the DSC transmitted call list.

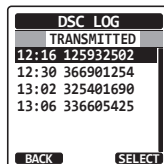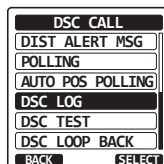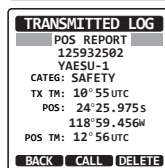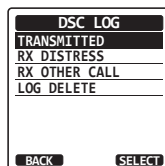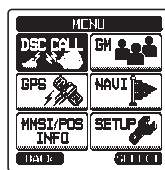





## 9.12.2 Reviewing a Logged DSC Distress Call


The **HX870E** allows logged DSC distress call to be reviewed.

1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “DSC LOG”.
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “RX DISTRESS”.
4. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select the station (name or MMSI number) you want to review and/or relay the distress call to other vessels.  
**Note:** When there is an unread received call, “” icon will appear at the head of the call’s row.
5. Press the **[SELECT]** soft key to review details for the selected station.
6. Press the **[INFO]** soft key to display more information or press the **[BACK]** soft key to go back to the received DSC distress call list.

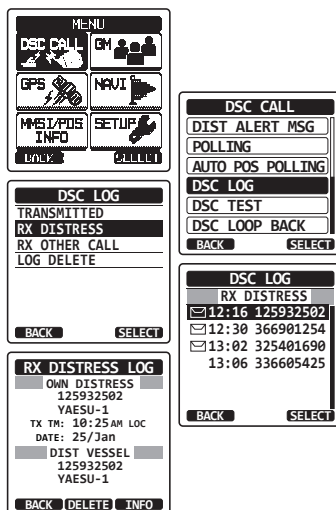


## 9.12.3 Reviewing Other Logged Calls

1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “DSC LOG”.
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “RX OTHER CALL”.
4. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select the station (name or MMSI number) you want to review and/or call back.  
**Note:** When there is an unread received call, “” icon will appear at the head of the call’s row.
5. Press the **[SELECT]** soft key to review details for the selected station.
6. Press the **[CALL]** soft key to reply to the call or press the **[BACK]** soft key to go back to the received call list.

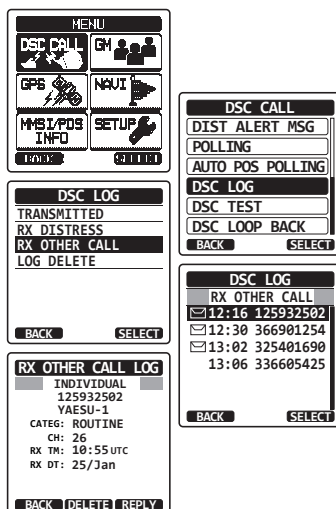

## 9.12.4 Deleting Logged Calls from the DSC Log Directory

1. Press the **MENU** key to display "MENU", then select "DSC CALL" with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select "DSC LOG".
3. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select "LOG DELETE" menu.
4. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select the category ("TRANSMITTED", "RX DISTRESS", "RX OTHER CALL" or "ALL LOG") to be deleted.
5. Press the **[SELECT]** soft key.  
The display will show "Do you want to delete the LOG?".
6. Press the **[YES]** soft key. (To cancel, press the **[NO]** soft key.)
7. Press the **CLR** key to return to radio operation.

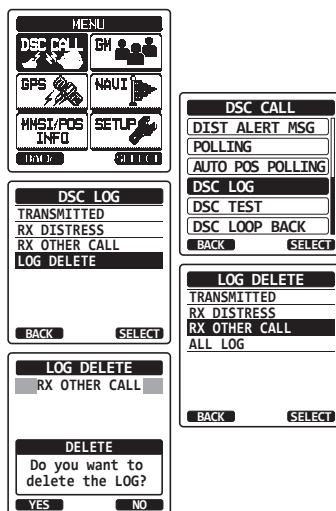

### NOTE

The procedure above will delete all logged calls of the selected category at one time.


To delete logged calls one by one, review the details of the call you want to delete, then press the **[DELETE]** soft key.

## 9.13 DSC LOOP BACK OPERATION

The **HX870E** has a self-test feature for DSC call.

1. Press the **MENU** key to display “MENU”, then select “DSC CALL” with the **CH▼/CH▲/◀/▶** key.
2. Press the **[SELECT]** soft key, then press the **CH▼/CH▲** key to select “DSC LOOP BACK”.
3. Press the **[SELECT]** soft key, then press the **[YES]** soft key to start a test. (To cancel, press the **[NO]** soft key.)

The display will show “Passed!” if the DSC feature properly operates, then return to the “DSC CALL” menu.

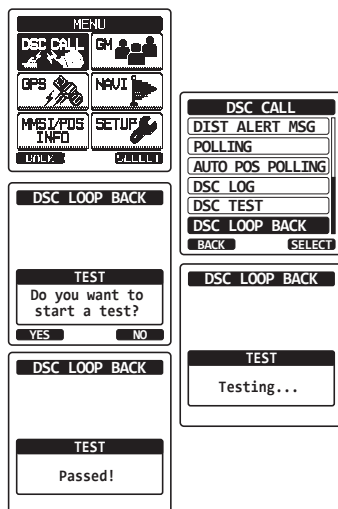

4. Press the **CLR** key to return to radio operation.

## 10 NAVIGATION

The **HX870E** is capable of storing up to 200 waypoints for navigation using the compass page.






You can also navigation to DSC distress calls with position or a position received from another DSC radio using DSC polling.

### 10.1 WAYPOINT OPERATION

#### 10.1.1 Starting and Stopping Navigation








##### *Navigation by Using the Waypoint Directory*

1. Press the **MENU** key to display "MENU".
2. Select "NAVI" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "WAYPOINT" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select the desired category ("HISTORY" or "MEMORY") with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select a waypoint, then press the **[SELECT]** soft key. The navigation screen will appear. The screen includes the distance and direction to the destination, and the waypoint is indicated by a dot (●) inside the compass.
6. Press **◀/▶** key, then press the **[STOP]** soft key to stop the navigation.

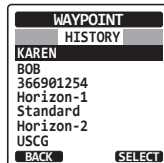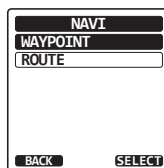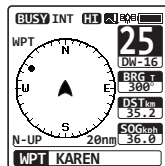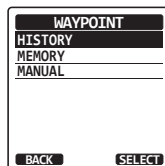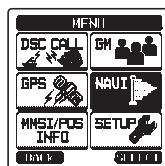

## Navigation by Manually Entering a Waypoint

1. Press the **MENU** key to display "MENU".
2. Select "NAVI" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "WAYPOINT" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "MANUAL" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. If you want to give the waypoint an easy-to-find name, select "NAME" with the **CH▼/CH▲** key, press the **[SELECT]** soft key, then enter the name. For details, refer to "9.5.1 Setting up the Individual / Position Call Directory".
6. Select "POSITION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
7. Press the **CH▼/CH▲/◀/▶** key to select the first number of latitude, then press the **[SELECT]** soft key to step to the next number.
8. Repeat step 7 to set the position.  
If a mistake was made, press the **CH▼/CH▲/◀/▶** key to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform step 7.
9. When finished programming the position, press the **[FINISH]** soft key. The display will return to the previous screen.
10. Select "SAVE & GO" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key. The navigation screen will appear.  
The screen includes the distance and direction to the destination, and the waypoint is indicated by a dot (●) inside the compass.
11. Press **◀/▶** key, then press the **[STOP]** soft key to stop the navigation.

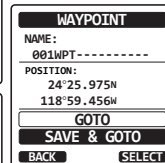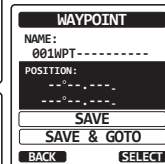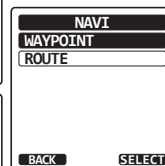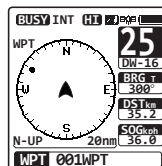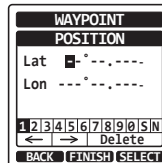
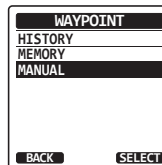
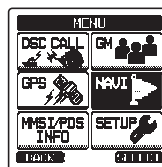


## 10.1.2 Setting Up Waypoint Directory

### Marking a Position







This feature allows the radio to mark the current position of the vessel.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Select “MARK POSITION” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Select “NAME” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Enter the waypoint name by pressing the **CH▼/CH▲** key and the **[SELECT]** soft key. When finished entering the name, press the **[FINISH]** soft key.
7. If you want to modify the position, select “POSITION” with the **CH▼/CH▲** key, press the **[SELECT]** soft key, then enter the new coordinates.  
When finished modifying the position, press the **[FINISH]** soft key.
8. Select “SAVE” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key to save the mark position into memory.
9. Press the **CLR** key to return to radio operation.

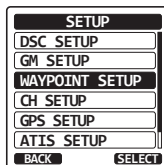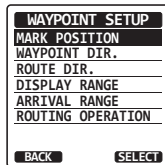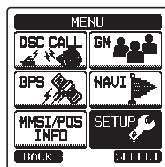

## Adding a Waypoint


1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select "WAYPOINT SETUP", then press the **[SELECT]** soft key.
4. Select "WAYPOINT DIR." with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Select "ADD" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Select "NAME" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
7. Enter the waypoint name by pressing the **CH▼/CH▲** key and the **[SELECT]** soft key. When finished entering the name, press the **[FINISH]** soft key.
8. Select "POSITION" with the **CH▼/CH▲** key, press the **[SELECT]** soft key, then enter the coordinates.  
When finished entering the position, press the **[FINISH]** soft key.
9. Select "SAVE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key to save the waypoint into memory.
10. Press the **CLR** key to return to radio operation.

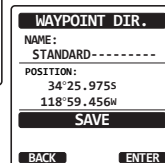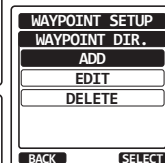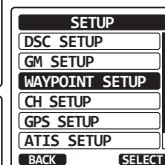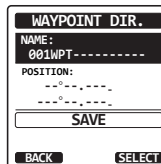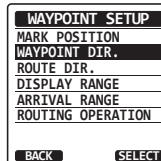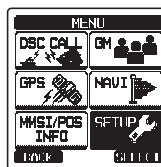

## Editing a Waypoint

This function allows a previously entered waypoint to be edited.






1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select “WAYPOINT DIR.”, then press the **[SELECT]** soft key.
5. Select “EDIT” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the waypoint to be edited, then press the **[SELECT]** soft key to show the waypoint input display.
7. Select “NAME” or “POSITION” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
8. Press the **CH▼/CH▲/◀/▶** key to select “←” or “→”, press the **[SELECT]** soft key until the character to be changed is selected, then enter a new character.
9. Repeat step 8 until the waypoint is updated.  
When finished editing, press the **[FINISH]** soft key.
10. Select “SAVE” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key to store the edited waypoint into memory.
11. Press the **CLR** key to return to radio operation.

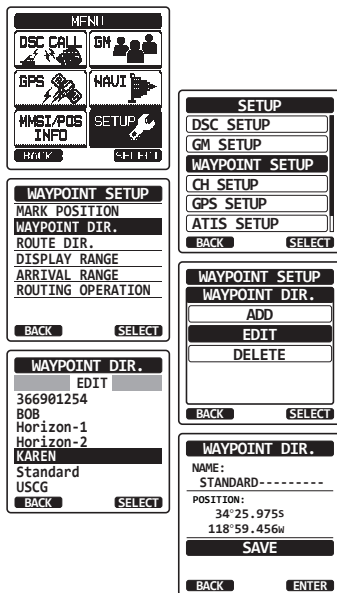



### Deleting a Waypoint

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select "WAYPOINT SETUP", then press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select "WAYPOINT DIR.", then press the **[SELECT]** soft key.
5. Select "DELETE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the waypoint to be deleted, then press the **[SELECT]** soft key.
7. Confirm the waypoint to be deleted, select "OK" with the **CH▼/CH▲** key, then press the **[ENTER]** soft key.

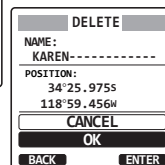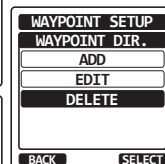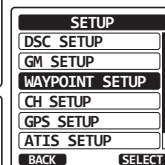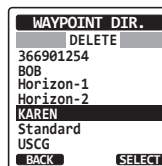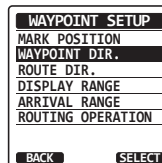

8. Press the **CLR** key to return to radio operation.

### Saving a DSC Position Call as a Waypoint


When a position is received from another DSC radio the **HX870E** allows the position to be saved as a waypoint.

Refer to section "9.8.4 Saving the Reported Position as a Waypoint" for details.

### 10.1.3 Selecting the Display Range

This menu item allows setting of the range on the compass display.


1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select "WAYPOINT SETUP", then press the **[SELECT]** soft key.
4. Select "DISPLAY RANGE" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select desired range. (Unit of measure depends on the settings in the GPS SETUP menu.)
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

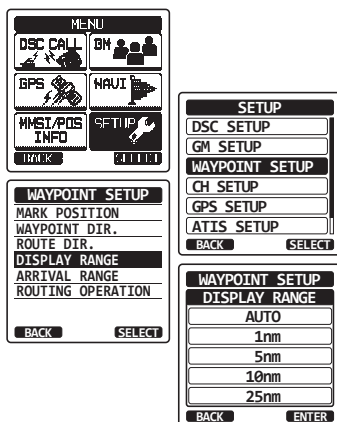

### 10.1.4 Selecting the Arrival Range


This menu item allows setting of the range within which the **HX870E** determines to be around the destination.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select "WAYPOINT SETUP", then press the **[SELECT]** soft key.
4. Select "ARRIVAL RANGE" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select desired range. (Unit of measure depends on the settings in the GPS SETUP menu.)
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

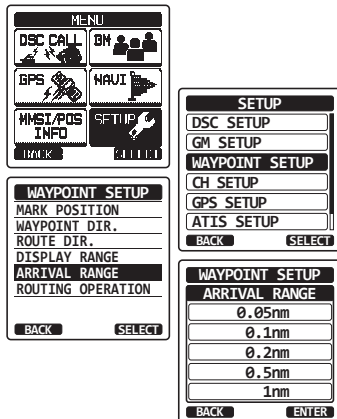

## 10.2 ROUTING OPERATION

The **HX870E** allows you to set 1 to 15 waypoints along the route.

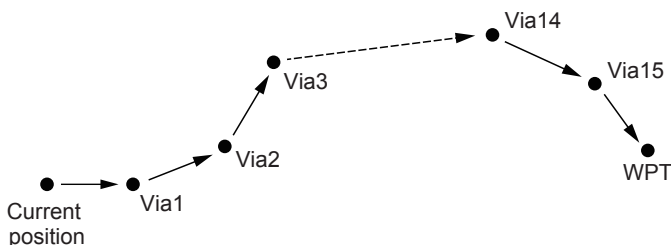

ROUTING TO A WAYPOINT


### 10.2.1 Setting Up Routing Directory

#### NOTE

All the destinations and via-points must be programmed as waypoints in the **HX870E** memory. Refer to section “**10.1.2 Setting Up Waypoint Directory**”.

#### Adding a Route

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select “WAYPOINT SETUP”, then press the **[SELECT]** soft key.
4. Select “ROUTE DIR.” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Select “ADD” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Select “NAME” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
7. Enter the route name by pressing the **CH▼/CH▲** key and the **[SELECT]** soft key. When finished entering the name, press the **[FINISH]** soft key.

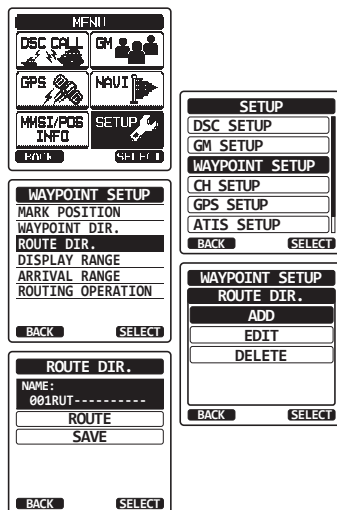

8. Select "ROUTE" with the **CH▼/CH▲** key, press the **[SELECT]** soft key.
9. Select "WPT" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
10. Press the **CH▼/CH▲** key to select a waypoint, then press the **[SELECT]** soft key.
11. Select "Via1" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
12. Press the **CH▼/CH▲** key to select a waypoint, then press the **[SELECT]** soft key.
13. Repeat steps 11 and 12 to add more via-points.
14. Press the **[BACK]** soft key.
15. Select "SAVE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key to store the route into memory.
16. Press the **CLR** key to return to radio operation.

ROUTE DIR.  
NAME: 001RUT-----  
ROUTE  
SAVE  
BACK SELECT

001RUT  
WPT:  
BACK SELECT

ROUTE DIR.  
YAESU  
366901254  
BOB  
Horizon-1  
Horizon-2  
KAREN  
Standard  
USCG  
BACK SELECT

001RUT  
WPT: KAREN  
Via1:  
BACK SELECT

ROUTE DIR.  
NAME: 001RUT-----  
ROUTE  
SAVE  
BACK SELECT

### Editing a Route

This function allows a previously entered route to be edited.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select "WAYPOINT SETUP", then press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select "ROUTE DIR.", then press the **[SELECT]** soft key.
5. Select "EDIT" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the route to be edited, then press the **[SELECT]** soft key to show the route input display.
7. Perform steps 6 to 14 of the previous page until the route is updated.
8. Select "SAVE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key to store the edited route into memory.
9. Press the **CLR** key to return to radio operation.

MENU  
DSC CALL GN  
BPS HAUT  
HWT/POS INFO SETUP  
BACK SELECT

WAYPOINT SETUP  
MARK POSITION  
WAYPOINT DIR.  
ROUTE DIR.  
DISPLAY RANGE  
ARRIVAL RANGE  
ROUTING OPERATION  
BACK SELECT

ROUTE DIR.  
EDIT  
366901254  
BOB  
Horizon-1  
Horizon-2  
KAREN  
Standard  
USCG  
BACK SELECT





SETUP  
DSC SETUP  
GM SETUP  
WAYPOINT SETUP  
CH SETUP  
GPS SETUP  
ATIS SETUP  
BACK SELECT

WAYPOINT SETUP  
ROUTE DIR.  
ADD  
EDIT  
DELETE  
BACK SELECT

ROUTE DIR.  
NAME: KAREN-----  
ROUTE  
SAVE  
BACK SELECT

## Deleting a Route






1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Press the **CH▼/CH▲** key to select "WAYPOINT SETUP", then press the **[SELECT]** soft key.
4. Press the **CH▼/CH▲** key to select "ROUTE DIR.", then press the **[SELECT]** soft key.
5. Select "DELETE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the route to be deleted, then press the **[SELECT]** soft key.
7. Confirm the route to be deleted, select "OK" with the **CH▼/CH▲** key, then press the **[ENTER]** soft key.

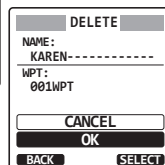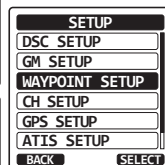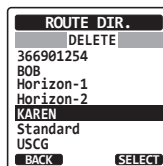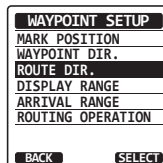

8. Press the **CLR** key to return to radio operation.



## 10.2.2 Starting and Stopping Route Navigation

1. Press the **MENU** key to display "MENU".
2. Select "NAVI" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "ROUTE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select the desired category ("HISTORY" or "MEMORY"), then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select a route, then press the **[SELECT]** soft key. The navigation screen with "RTE" indicator appears.
6. A message "ARRIVED" will appear when you have reached the first target point. To start navigation to the next target, press the **[YES]** soft key.
7. To stop the navigation, press **◀/▶** key, then press the **[STOP]** soft key.
8. Press the **CLR** key to return to radio operation.

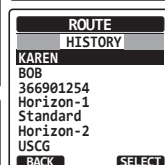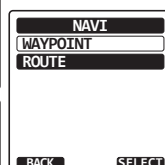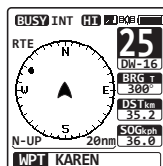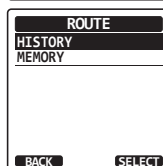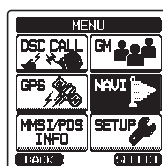

### 10.2.3 Changing the Destination





1. On the navigation screen, press ◀/▶ key, then press the [NEXT TG] soft key.
2. Press the CH▼/CH▲ key to select desired destination.
3. Press the [SELECT] soft key. The navigation screen with a new destination appears.

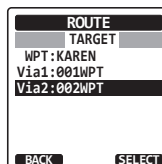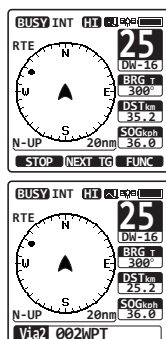

### 10.2.4 Selecting Automatic or Manual Routing

This selection allows you to start navigation to the next target automatically or manually when your vessel has arrived at a target point.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the CH▼/CH▲/◀/▶ key, then press the [SELECT] soft key.
3. Press the CH▼/CH▲ key to select "WAYPOINT SETUP", then press the [SELECT] soft key.
4. Press the CH▼/CH▲ key to select "ROUTE OPERATION", then press the [SELECT] soft key.
5. Select "AUTO" or "MANUAL" with the CH▼/CH▲ key, then press the [ENTER] soft key.
6. Press the **CLR** key to return to radio operation.

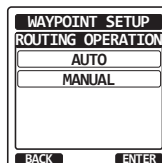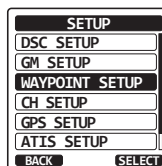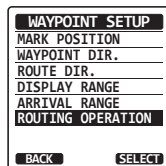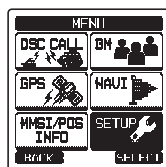

## 11 GM OPERATION

The GM (Group Monitor) feature of the **HX870E** utilizes the same system as the DSC Group call and Auto Position Polling, to display the group members' locations.

### 11.1 SETTING UP GM OPERATION





The **HX870E** is capable of storing up to 10 groups with 1 to 9 members each.

#### 11.1.1 Setting Up Group Directory

##### NOTE

- For this function to operate, the same group MMSI must be programmed into each transceiver of group members to be monitored. Refer to section “**9.6.1 Setting Up a Group Call**” for details.
- Group members for GM operation can only be selected from the Individual/Position Call directory, there for all members that you want to monitor have to be stored in the directory. Refer to section “**9.5.1 Setting Up the Individual / Position Call Directory**” for details.

1. Press the **MENU** key to display “MENU”.
2. Press the **CH▼/CH▲/◀/▶** key to select “SETUP”, then press the **[SELECT]** soft key.
3. Select “GM SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “GM GROUP DIR.” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Select “ADD” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Select “NAME” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
7. Enter the route name by pressing the **CH▼/CH▲** key and the **[SELECT]** soft key.  
When finished entering the name, press the **[FINISH]** soft key.
8. Select “GM ID” with the **CH▼/CH▲** key, press the **[SELECT]** soft key, then enter the group MMSI number.  
When finished entering the MMSI, press the **[FINISH]** soft key.

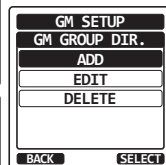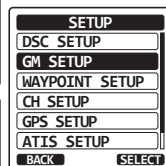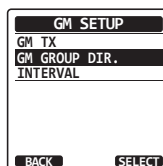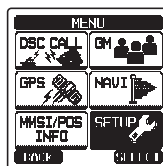

9. Select "MEMBER" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
10. Press the **CH▼/CH▲** key to select a list number, then press the **[SELECT]** soft key.
11. Press the **CH▼/CH▲** key to select a member from the Individual directory, then press the **[SELECT]** soft key.
12. Repeat steps 11 and 11 to add members to the group.
13. Press the **[BACK]** soft key to return to the "NAME" and "GM ID" screen.
14. To store the data, select "SAVE" with the **CH▼/CH▲** key, then press the **[ENTER]** soft key.
15. To enter another group directories, repeat steps 5 through 14.
16. Press the **CLR** key to return to radio operation.

GM GROUP DIR.

NAME:  
STANDARD-----

GM ID:  
087654321

MEMBER

SAVE

BACK SELECT

INDIVIDUAL DIR.

YAESU

KAREN

BOB

366901254

Horizon-1

Standard

Horizon-2

USCG

BACK SELECT

GM GROUP DIR.

NAME:  
STANDARD-----

GM ID:  
087654321

MEMBER

SAVE

BACK SELECT

GM GROUP DIR.

STANDARD

1:

2:

3:

4:

5:

6:

7:

BACK SELECT

GM GROUP DIR.

STANDARD

1:

2:

3: KAREN

4:

5:

6:

7:

BACK SELECT

### 11.1.2 Setting Up the Polling Time Interval

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "GM SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "INTERVAL" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired interval time, then press the **[ENTER]** soft key.
6. Press the **CLR** key to return to radio operation.

MENU

DSC CALL

GM

GPS

HAUT

HMST/POS INFO

SETUP

BACK SELECT

GM SETUP

GM TX

GM GROUP DIR.

INTERVAL

BACK SELECT

SETUP

DSC SETUP

GM SETUP

WAYPOINT SETUP

CH SETUP

GPS SETUP

ATIS SETUP

BACK SELECT

GM SETUP

INTERVAL

1min

3min

5min

10min

15min

BACK ENTER



### 11.1.3 Enabling/Disabling Transmission during GM Operation





1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "SETUP", then press the **[SELECT]** soft key.
3. Select "GM SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "GM TX" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired transmission type, then press the **[ENTER]** soft key.

OFF: Disables the transmission during GM operation.

ON GM: Enables the transmission during the GM target display.

ON ALL: Enables the transmission during the GM operation.

6. Press the **CLR** key to return to radio operation.

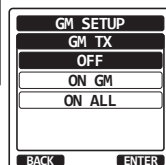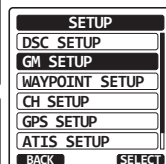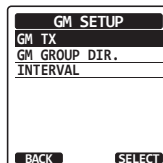
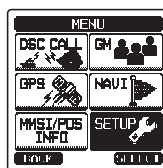


### 11.2 STARTING GM OPERATION

1. Press the **MENU** key to display "MENU".
2. Press the **CH▼/CH▲/◀/▶** key to select "GM", then press the **[SELECT]** soft key.
3. Select a group you want to monitor with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.



The GM operation starts and the GM target display appears.

4. Press the **CLR** key to return to radio operation.

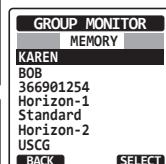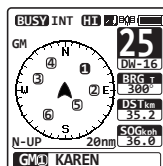


## 11.2.1 Transmitting a DSC Call to a Group Member

1. Press **◀/▶** key during the GM target display, then press the **[LIST]** soft key.
2. Press the **CH▼/CH▲** key to select a member you want to call.
3. Press the **[SELECT]** soft key.  
The list number of the selected member will be highlighted, and the name of the selected member will be displayed at the bottom of the screen.
4. Press **◀/▶** key, then press the **[CALL]** soft key to transmit a DSC Individual call to the selected member.

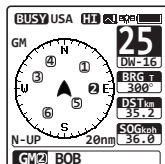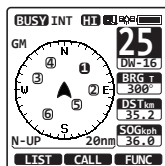


GM KARENS	
NAME	DST NM
1:KAREN	35.2
2:BOB	11.0
3:366901254	12.8
4:Horizon	34.9
5:Standard	30.0
6:Horizon-2	47.6
7:MIKE	38.4
BACK INFO SELECT	

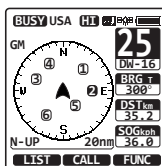

## 11.2.2 Starting Navigation to a Group Member

1. Press **◀/▶** key during the GM target display, then press the **[LIST]** soft key.
2. Press the **CH▼/CH▲** key to select a member you want to approach.
3. Press the **[INFO]** soft key to display the location, distance, and bearing of the selected member.
4. Press the **[TO WPT]** soft key to start navigation to the selected member. (Press the **[BACK]** soft key twice to cancel and return to the GM target display.)

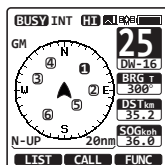

GM KARENS	
GM INFO	
987654321	
Horizon	
POS: 24°25.975N	
118°59.456W	
POS TM: 12:56AM LOC	
DST: 10 NM	
BRG: 006°T	
BACK CALL TO WPT	





GM KARENS	
NAME	DST NM
1:KAREN	35.2
2:BOB	11.0
3:366901254	12.8
4:Horizon	34.9
5:Standard	30.0
6:Horizon-2	47.6
7:MIKE	38.4
BACK INFO SELECT	

## 12 CONFIGURATION SETUP

### 12.1 DIMMER ADJUSTMENT

This menu selection adjusts the backlight intensity.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "DIMMER" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired level ("5" is default). When "OFF" is selected, the lamp is turned off.
6. Press the **[ENTER]** soft key to store the selected level.

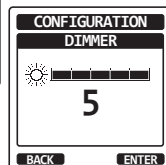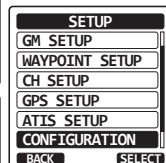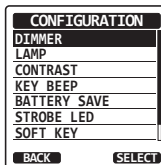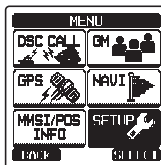

7. Press the **CLR** key to return to radio operation.

### 12.2 LAMP

This menu selection is used to setup the illumination time of the display and keypad.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "LAMP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired time.




OFF: Disables the display/keypad lamp illumination.

3/5/10/20/30 Sec:

Illuminates the display/keypad for the selected time when you press any key (except the **PTT** switch).

CONTINUOUS: Illuminates the display/keypad continuously.


6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

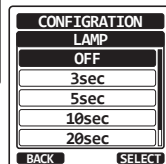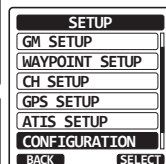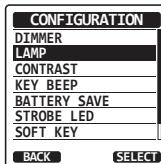

## 12.3 DISPLAY CONTRAST

The display contrast can be adjusted to suit your operation environment.


1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "CONTRAST" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired level. The contrast level can be set from "0" to "30" ("10" is default).
6. Press the **[ENTER]** soft key to store the selected level.
7. Press the **CLR** key to return to radio operation.

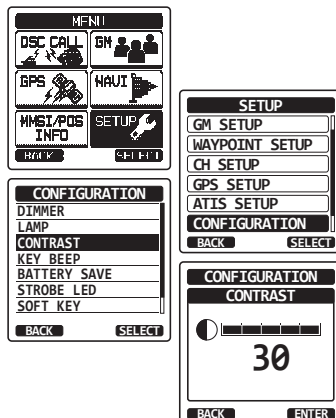

## 12.4 KEY BEEP

This selection is used to select the beep tone volume level when a key is pressed.


1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "KEY BEEP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired level. The beep level can be set from "LEVEL 1" to "LEVEL 5", or "OFF".
6. Press the **[ENTER]** soft key to store the selected level.
7. Press the **CLR** key to return to radio operation.

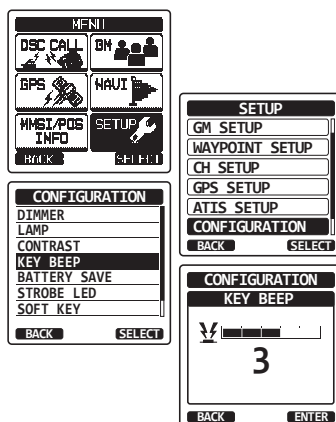

## 12.5 BATTERY SAVER

This function allows you to change the battery save mode setting.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "BATTERY SAVE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired setting. You can select one from "OFF", "50%", "70%", "80%", or "90%".
6. Press the **[ENTER]** soft key to store the selected setting.
7. Press the **CLR** key to return to radio operation.

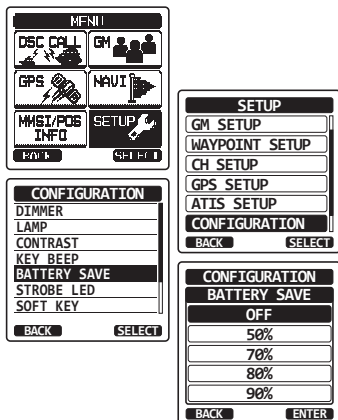


## 12.6 STROBE LED

This selection is used to switch and set the function of the strobe LED.






### 12.6.1 Emergency LED

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "STROBE LED" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select "EMERGENCY LED", then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the desired setting. You can select one from "CONTINUOUS", "SOS", "BLINK 1", "BLINK 2", or "BLINK 3".
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.

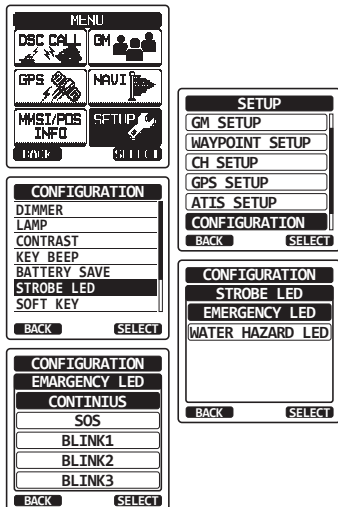

## 12.6.2 Water Hazard LED

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "STROBE LED" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select "WATER HAZARD LED", then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the desired setting. You can select one from "OFF", "ON", or "ON/PWR ON".  
OFF: The LED does not light up.  
ON: The LED lights up.  
ON/PWR ON: The LED lights up and the transceiver turns on even if the transceiver is off.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.


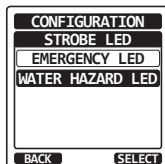
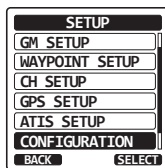
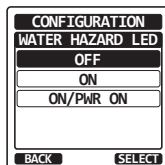
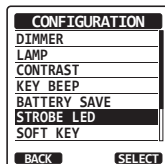
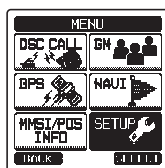


## 12.7 SOFT KEYS

This menu item allows soft key assignment and how long the display will show the soft key icon after a soft key is pressed.

### 12.7.1 Key Assignment


1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "SOFT KEY" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Select "KEY ASSIGNMENT" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the key number to be programmed, and press the **[SELECT]** soft key.
7. Press the **CH▼/CH▲** key to select a new function to be assigned, and press the **[ENTER]** soft key. Available functions are listed below. By selecting "NONE" the soft key assignment is removed.
8. Repeat steps 6 and 7 to program other soft keys. Up to 12 functions can be assigned.
9. Press the **CLR** key to return to radio operation.

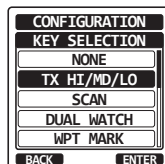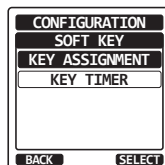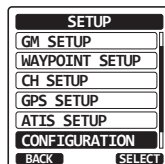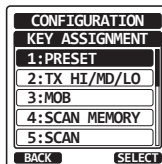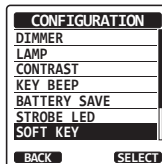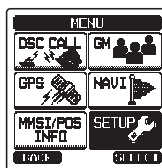

DISPLAY	FUNCTION
HI/MD/LO	Selects transmit power.
SCAN	Turns on or off scanning function.
DW/TW	Turns on or off dual or triple watch scan.
MOB	Marks the position where a person falls overboard.
COMP	Enables the "Compass" display.
NAVI	Enables the "Waypoint" or "Route" navigation display.
MARK	Marks the current position for a "Waypoint".
MEM	Add or remove channels from memory channel scan.
PRESET	Programs or deletes the preset memory channel.
NAME	Edit channel names.
STROBE	Turns on or off the strobe light LED.
LOGGER	Starts and stops logging position data.
NCR	Enables the noise canceling settings display.

## 12.7.2 Key Timer


1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "SOFT KEY" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Select "KEY TIMER" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select the desired time.
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.

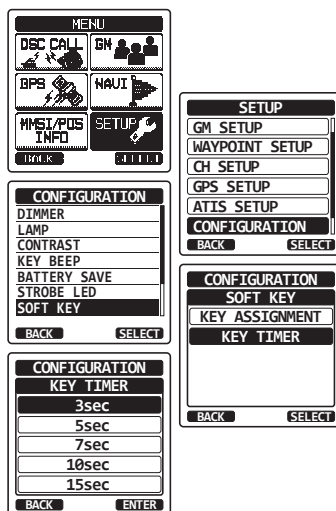

## 12.8 RESET

You may initialize the memories and settings of the setup categories independently or return the transceiver to the original factory setting.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CONFIGURATION" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "RESET" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired category. You can select one from "DSC", "CHANNEL", "WAYPOINT & GPS", "CONFIGURATION", or "FACTORY" (all settings except the MMSI will be initialized).
7. Press the **[ENTER]** soft key to store the selected setting.
8. Press the **CLR** key to return to radio operation.

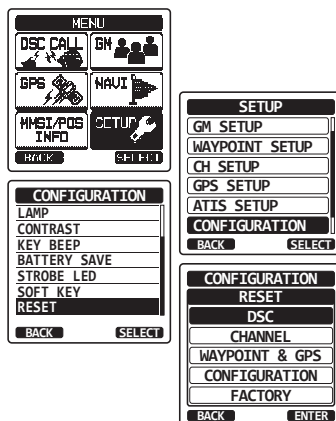



## 12.9 SUMMARY OF THE CONFIGURATION SETUP

Item	Description	Default Value
DIMMER	Adjusts the backlight level of the LCD and keypad	5
LAMP	Selects the illumination time of the LCD and keypad backlights.	3 sec
CONTRAST	Adjusts the contrast of the LCD	10
KEY BEEP	Adjusts the volume of beep tone when a key is pressed.	3
BATTERY SAVE	Selects the battery save mode.	50%
STROBE LED	Sets the operation of the EMERGENCY LED.	CONTINUOUS
	Sets the operation of the WATER HAZARD LED.	ON
SOFT KEY KEY TIMER	Sets the assignment and display time of the soft keys.	10 sec
RESET	Initializes the memories and settings.	—

## 13 CHANNEL FUNCTION SETUP

### 13.1 CHANNEL GROUP

This menu item allows you to select a channel group from USA, Canada, and International.

Refer to section “**7.6 INTERNATIONAL, USA, AND CANADA MODE**” for details.

### 13.2 SCAN MEMORY

To be able to scan channels the radio must be programmed. This section allows channels to be stored in scan memory.

Refer to section “**7.8.2 Programming Scan Memory**” for details.

### 13.3 SCAN TYPE


This selection is used to select the scan mode between “Memory Scan” and “Priority Scan”. The default setting is “Priority Scan”.

Refer to section “**7.8.1 Selecting the Scan Type**” for details.

## 13.4 SCAN RESUME

This selection is used to select the time the **HX870E** waits after a transmission ends before the radio starts to scan channels again. The default setting is 2 seconds.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “CH SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “SCAN RESUME” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired resume time, default is 2 seconds. The resume time can be set to “1sec” through “5sec”.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLR** key to return to radio operation.

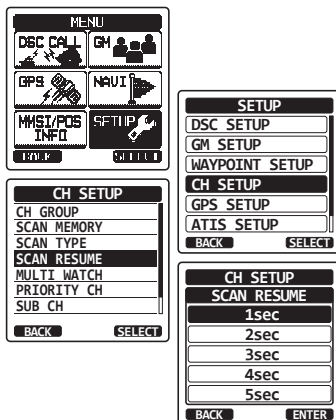

## 13.5 WATCH TYPE


This selection is used to select the watch type between “Dual Watch” and “Triple Watch”. The default setting is “Dual Watch”.

Refer to section “7.7 MULTI WATCH (TO PRIORITY CHANNEL)” for details.

## 13.6 PRIORITY CHANNEL

This procedure allows the radio to use a different priority channel used when priority scanning. By default the radio priority channel is set to Channel 16.


1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “CH SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “PRIORITY CH” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired channel to be a priority.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLR** key to return to radio operation.

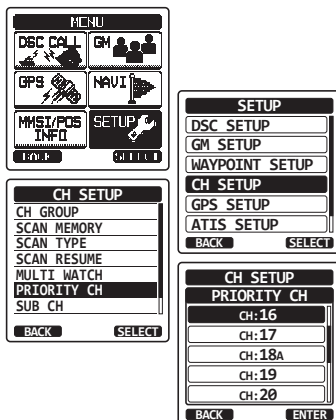

## 13.7 SUB CHANNEL

By default the sub channel is set to Channel 9. This procedure allows the radio to assign a different sub channel for instant access.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CH SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "SUB CH" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired channel to be a sub channel.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLR** key to return to radio operation.

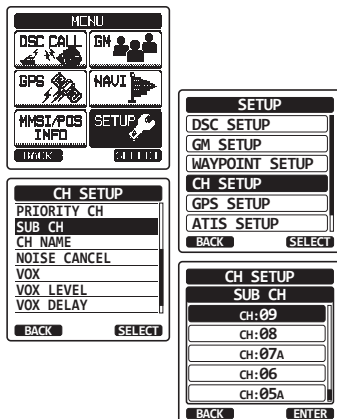


## 13.8 CHANNEL NAME

When the radio ("Normal") mode is selected, the display will show a name under the channel number. This name describes the use of the channel. The radio has the capability to customize the name by the procedure below.

**Example:** CH69 PLEASURE to HOOKUP

1. Press the **MENU** key to display "MENU".
  2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
  3. Select "CH SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
  4. Select "CH NAME" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
  5. Press the **CH▼/CH▲** key to select the channel to be named, then press the **[SELECT]** soft key.
  6. Press the **CH▼/CH▲** key to scroll through the first letter of the new channel name.
  7. Press the **[SELECT]** soft key to store the first letter in the name and step to the next letter to the right.
  8. Repeat step 6 and 7 until the name is complete. The name can consist of up to 16 characters, if you do not use all 16 characters, select "→" to move to the next space. This method can also be used to enter a blank space in the name.
- If a mistake was made entering in the channel name, press the **CH▼/CH▲/◀/▶** key to select "←" or "→", press the **[SELECT]** soft key until the wrong character is selected, then perform steps 6 and 7.
9. Press the **[FINISH]** soft key to save the name.
  10. If you want to enter the name of another channel, repeat the steps 5 through 9.
  11. Press the **CLR** key to return to radio operation.

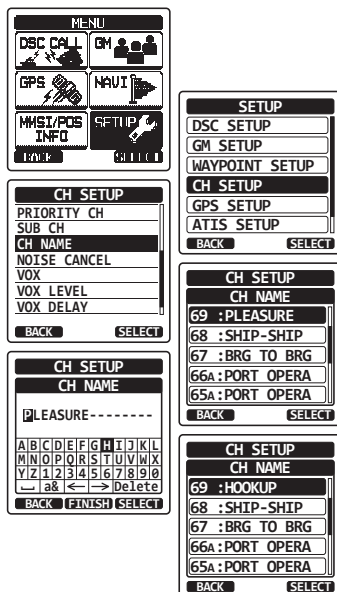


### NOTE

When "CHANNEL NAME" is assigned to the soft key, you can show the channel name input display directly by pressing the **[NAME]** soft key during radio operation.

## 13.9 NOISE CANCELLATION

Enables/disables the Noise-canceling function of the transmitter and receiver independently.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “CH SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “NOISE CANCEL” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Select “TX MODE” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select “ON” or “OFF”, then press the **[ENTER]** soft key.
7. Select “RX MODE” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
8. Select the noise level from “Level 1” through “Level 4” or “OFF” with the **CH▼/CH▲** key, then press the **[ENTER]** soft key.

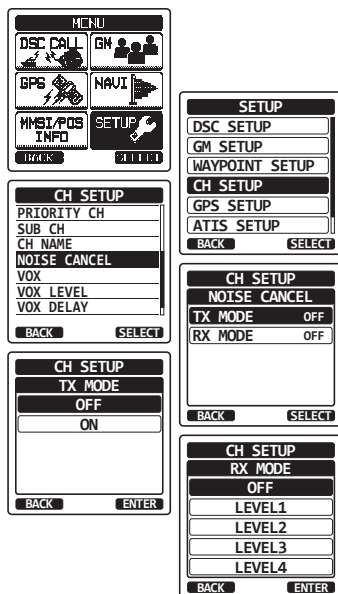


9. Press the **CLR** key to return to radio operation.

## 13.10 VOX OPERATION

The procedures below allow you to set up the VOX operation when utilizing an optional VOX headset purchased from a third party vendor.


### 13.10.1 Enabling the VOX Operation

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “CH SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “VOX” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “ON” or “OFF”, then press the **[ENTER]** soft key to store the new setting.
6. Press the **CLR** key to return to radio operation.

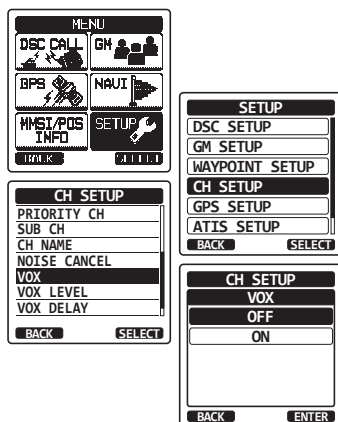

### 13.10.2 Setting the VOX Level

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CH SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "VOX LEVEL" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired active level. The level can be set from "0" to "4" ("2" is default).
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLR** key to return to radio operation.

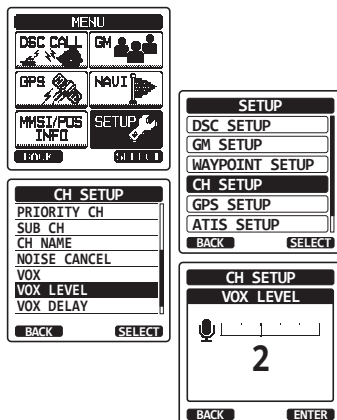


#### NOTE

During setup the VOX level can be seen directly by speaking into the microphone while the VOX operation is enabled.

### 13.10.3 Setting the VOX Delay Time


1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CH SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "VOX DELAY" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired delay time from "0.5sec", "1.0sec", "1.5sec", "2.0sec" or "3.0sec".
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLR** key to return to radio operation.

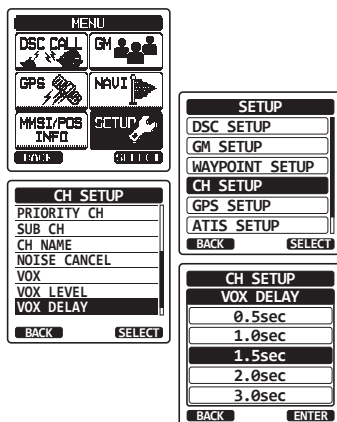

## 13.11 AUDIO FILTER OPERATION

This menu item allows you to select operation of the internal audio filter for your comfortable listening.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "CH SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "AF PITCH" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired filter operation.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLR** key to return to radio operation.

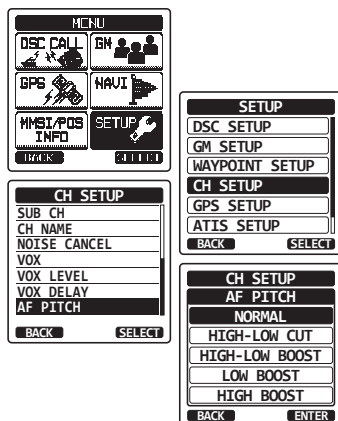



## 13.12 SUMMARY OF THE CANNEL FUNCTION SETUP

Item	Description	Default Value
CH GROUP	Selects the channel group	INTL
SCAN MEMORY	Add or remove a channel to Scan Memory	-
SCAN TYPE	Select priority scan or memory scan	PRIORITY
SCAN RESUME	Sets the resume time of scanning	2 sec
MULTI WATCH	Selects Dual Watch or Triple Watch	DUAL
PRIORITY CH	Selects a priority channel	CH16
SUB CH	Selects a Sub Channel	CH09
CH NAME	Edit the name of memory channels	-
NOISE CANCEL	Turns on or off of noise cancelling function (independently available for transmission and reception)	Off
VOX	Turn on or off the VOX function	Off
VOX LEVEL	Selects the VOX gain	2
VOX DELAY	Selects the VOX delay time	1.5 sec
AF PITCH	Selects the audio filter operation	Normal

## 14 DSC SETUP

### 14.1 INDIVIDUAL DIRECTORY

The **HX870E** has a DSC directory that allows you to store a vessel or person's name and the associated MMSI you wish to contact via individual calls, position requests and position report transmissions.

To transmit an individual call you must program this directory with information of the vessel you wish to contact, similar to a cellular phones telephone directory. Refer to section "**9.5.1 Setting up the Individual / Position Call Directory**" for details.

### 14.2 INDIVIDUAL REPLY

This menu item sets up the radio to automatically (default setting) or manually respond to a DSC Individual call requesting you to switch to a working channel for voice communications. When "MANUAL" is selected the MMSI of the calling vessel is shown allowing you to see who is calling. This function is similar to caller id on a cellular phone.

Refer to section "**9.5.2 Setting up the Individual Call Reply**" for details.

### 14.3 INDIVIDUAL ACKNOWLEDGMENT

The radio can be setup to transmit a reply automatically (default) or set so the radio will not reply to an individual call.

Refer to section "**9.5.3 Enabling the Individual Call Acknowledgment**" for details.

### 14.4 INDIVIDUAL RINGER

The radio can be setup to ring like a telephone to alert you the radio received a DSC individual call. The default setting is 2 minutes, however this can be changed to 5, 10 or 15 seconds with the procedure below.

Refer to section "**9.5.6 Setting up the Individual Call Ringer**" for details.

### 14.5 GROUP DIRECTORY

For this function to operate, the same group MMSI must be programmed into all the DSC VHF radios within the group of vessels that will be using this feature. Refer to section "**9.6.1 Setting up a Group Call**" for details.

## 14.6 AUTO POS POLLING

The **HX870E** has the capability to automatically track seven vessels programmed into the individual directory.

Refer to section “9.10 AUTO POS POLLING” for details.

## 14.7 AUTO POS INTERVAL

The **HX870E** has the capability to automatically track seven vessels programmed into the individual directory.

Selecting the auto position polling time interval between position request transmissions to be setup.





Refer to section “9.10.2 Setting up the Polling Time Interval” for details.

## 14.8 CHANNEL SWITCH TIMER


When a DSC distress or an all ships (urgency or safety) call is received, the **HX870E** will automatically switch to Channel 16.

This menu selection allows the automatic switch time to be changed. The default selection is 30 seconds.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “DSC SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “CH SWITCH TIMER” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired time, then press the **[ENTER]** soft key.
6. Press the **CLR** key to return to radio operation.

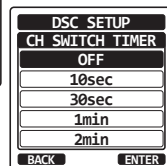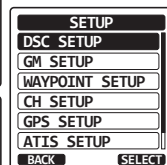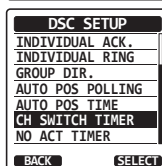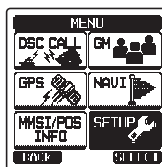

When the “OFF” is selected, “C” icon will light up on the screen.

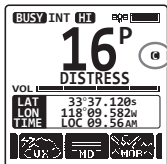


## 14.9 NO ACT (ACTION) TIMER

If no key is pressed during the “MENU” or “DSC CALL” screen, the **HX870E** will automatically return to radio operation.

The default selection is 15 minutes.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “DSC SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “NO ACT TIMER” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired time, then press the **[ENTER]** soft key.
6. Press the **CLR** key to return to radio operation.

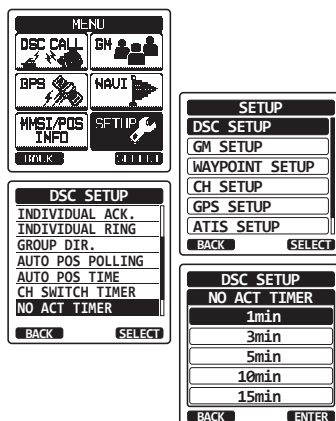


## 14.10 WAIT TIME FOR POSITION FIX

This menu allows you to select the maximum wait time till obtaining a position information when receiving a distress call, POS Report call, or acknowledgment to POS request call.

The default selection is 15 seconds.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “DSC SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “POS FIX WAIT” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired time, then press the **[ENTER]** soft key.
6. Press the **CLR** key to return to radio operation.

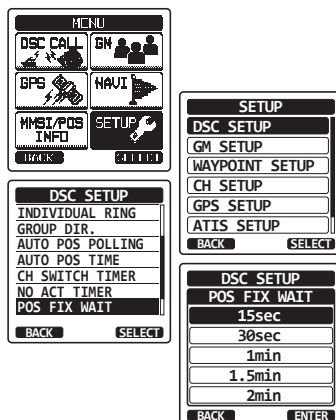

## 14.11 DSC BEEP

This feature allows the alarm beeps to be turned on or off when a DSC call is received. The DSC calls that can be customized are: individual, group, all ships, position request, and position report.

Refer to section “9.6.4 Setting up the Group Call Ringer” for details.

## 14.12 SUMMARY OF THE DSC SETUP MENU

Item	Description	Default Value
INDIVIDUAL DIR.	Enter or edit addresses used for individual call	–
INDIVIDUAL REPLY	Selects a reply to individual call	MANUAL
INDIVIDUAL ACK.	Selects the message to be sent automatically as an individual call acknowledgement	ENABLE
INDIVIDUAL RING	Selects the ringing time when an individual call or a position request is received	2 min
GROUP DIR.	Enter or edit addresses used for group call	–
AUTO POS POLLING	Selects the AUTO POS POLLING operation type	AUTO POS REQUEST
AUTO POS TIME	Selects the transmission interval of AUTO POS POLLING signal	30 sec
CH SWITCH TIMER	Selects the delay time to move to the requested channel automatically after receiving a distress call, All Ship call, or group call	30 sec
NO ACT (ACTION) TIMER	Selects the delay time to return to radio operation automatically after no key press	15 min
POS FIX WAIT	Sets the maximum wait time to obtain position information when receiving a distress call, POS Report call, or acknowledgement to POS request call	15 sec
DSC BEEP	Turns on or off the audible alarm when receiving a DSC call	Indivi.: On All Ship: On Group: On POS RQ.: Off POS RP.: On Geog.: On Polling: Off Test Call: Off


## 15 GPS SETUP

The “GPS Setup” mode allows the parameters for the **HX870E** internal GPS unit to be customized for your operating requirements.

### 15.1 GPS ON/OFF

This selection allows the internal GPS unit to be turned on or off to conserve battery power. The default setting is “ON”.


1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “GPS ON/OFF” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “OFF”, “ON”, or “INT and PWR OFF”.
6. Press the **[ENTER]** soft key to save the new setting.
7. Press the **CLR** key to return to radio operation.

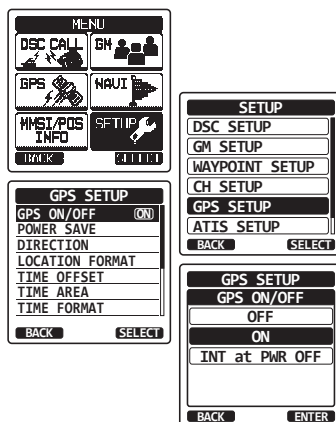

### 15.2 POWER SAVE

This menu item selects the Battery Save Mode for the internal GPS unit. The default setting for the Power Save Mode is “AUTO”.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “POWER SAVE” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.

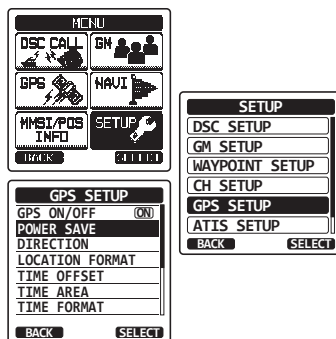

- Press the **CH▼/CH▲** key to select the desired level.

OFF: GPS Signals are always being received.


AUTO: Activates the GPS receiver automatically when GPS signals are received.

50%: Activates the GPS receiver for 3 seconds every 3 seconds.

75%: Activates the GPS receiver for 3 seconds every 9 seconds.

90%: Activates the GPS receiver for 3 seconds every 27 seconds.




- Press the **[ENTER]** soft key to store the selected setting.
- Press the **CLR** key to return to radio operation.

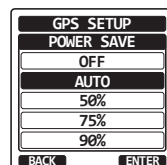

## 15.3 DISPLAY DIRECTION

This menu item selects the compass direction to be shown on the **HX870E** display. The default setting is “course up”.


- Press the **MENU** key to display “MENU”.
- Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
- Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
- Select “DIRECTION” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
- Press the **CH▼/CH▲** key to select the desired direction from “COURSE UP” and “NORTH UP”.
- Press the **[ENTER]** soft key to save the new setting.
- Press the **CLR** key to return to radio operation.

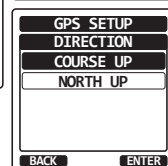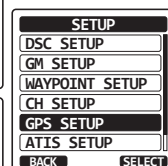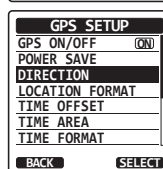

## 15.4 LOCATION FORMAT

This menu item selects the coordinate system to be shown on the **HX870E** display. The default setting is “ddd mm.mmm”.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “LOCATION FORMAT” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired coordinate system. The location format can be selected from “ddd°mm.mmm”, “ddd°mm.mm”, and “ddd°mm’ss”.
6. Press the **[ENTER]** soft key to save the new setting.
7. Press the **CLR** key to return to radio operation.

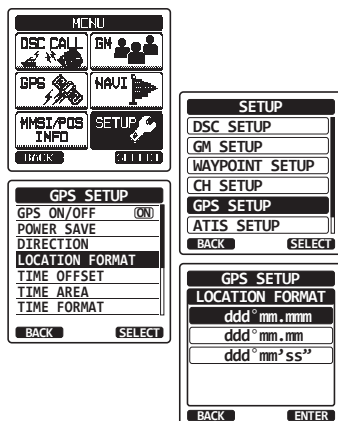

## 15.5 TIME OFFSET

Sets the local time offset between UTC (Universal Time Coordinated) and local time shown on the display. The offset is added or subtracted from the time received from the GPS.

Refer to section “**5.5 CHANGING THE GPS TIME**” for details.

## 15.6 TIME AREA

This menu selection allows the radio to show UTC time or local time with the offset.

Refer to section “**5.6 CHANGING THE TIME LOCATION**” for details.

## 15.7 TIME FORMAT

This menu selection allows the radio to show time in 12-hour or 24-hour format.


Refer to section “**5.7 CHANGING THE TIME FORMAT**” for details.



## 15.8 UNITS OF MEASURE

This section allows you to set the speed, distance and altitude units.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “UNITS OF MEASURE” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the item you want to set.
6. Press the **[SELECT]** soft key.
7. Press the **CH▼/CH▲** key to select the unit.
8. Press the **[ENTER]** soft key to store the new setting.
9. Press the **CLR** key to return to radio operation.

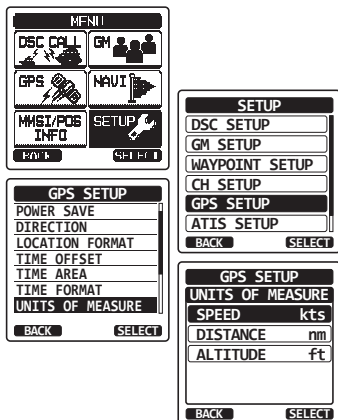

## 15.9 PINNING


This selection is used to enable or disable position updates when the vessel is not underway. The default setting is “OFF”.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “PINNING” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “ON” or “OFF”.

ON: When pinning is turned on, the **HX870E** will not update its position unless the vessel travels over 10Ft.

OFF: When the vessel is underway or stopped, the **HX870E** continuously updates its position. This improves accuracy of the position fix.


6. Press the **[ENTER]** soft key to save the new setting.
7. Press the **CLR** key to return to radio operation.

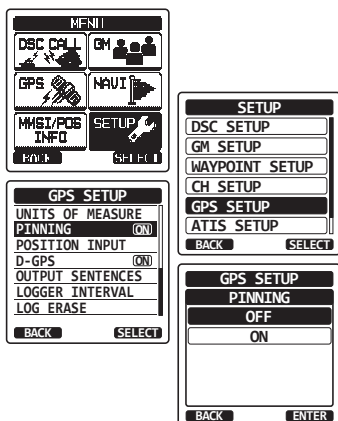

## 15.10 SBAS (Satellite Based Augmentation System)

This selection enables or disables SBAS such as WAAS, EGNOS and MSAS as some areas (Australia for example) can have problems with GPS reception with SBAS enabled. The default setting is “ON”.


1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “D-GPS” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select “ON” or “OFF”.
6. Press the **[ENTER]** soft key to store the new setting.
7. Press the **CLR** key to return to radio operation.

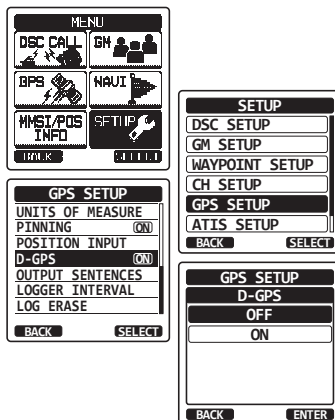

## 15.11 OUTPUT SENTENCES

This selection is used to setup the NMEA output sentences of the HX870E. By default, all the NMEA sentences are turned “OFF”.

1. Press the **MENU** key to display “MENU”.
2. Select “SETUP” with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select “GPS SETUP” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select “OUTPUT SENTENCES” with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired sentence type, then press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select “ON” or “OFF”.
7. Press the **[ENTER]** soft key to save the new setting.
8. Repeat steps 5 through 7 to set the other sentences.
9. Press the **CLR** key to return to radio operation.

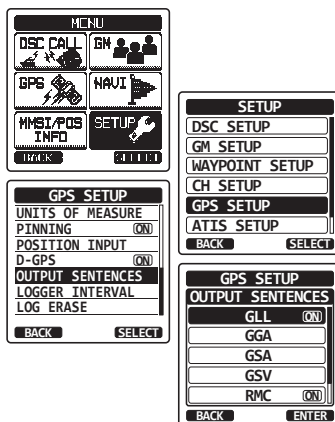

## 15.12 LOGGER INTERVAL

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "GPS SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "LOGGER INTERVAL" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the desired time and press the **[ENTER]** soft key.

**Note:** Log time for each logger interval setting

5 sec: Aprox. 8 hours





15 sec: Aprox. 25 hours

30 sec: Aprox. 50 hours

1 min: Aprox. 100 hours





5 min: Aprox. 500 hours

6. Press the **CLR** key to return to radio operation.

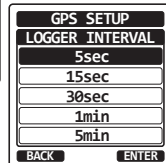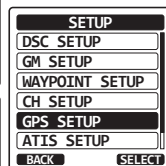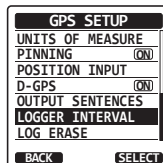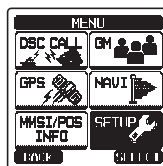

## 15.13 LOG ERASE

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "GPS SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "LOG ERASE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select "CANCEL" or "OK", then press the **[ENTER]** soft key.
6. Press the **CLR** key to return to radio operation.

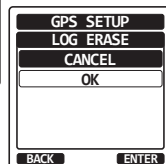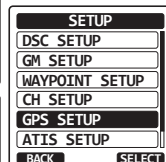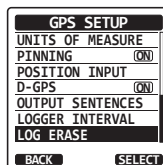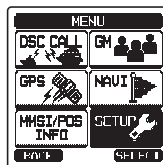

## 15.14 SUMMARY OF THE GPS SETUP

Item	Description	Default Value
GPS ON/OFF	Turns on or off the GPS receiver	ON
POWER SAVE	Selects the power save mode of the GPS unit	AUTO
DIRECTION	Selects the compass direction to be displayed	COURSE UP
LOCATION FORMAT	Selects the coordinate system to be displayed	ddd°mm.mmm
TIME OFFSET	Sets the offset time from the UTC (available only when "LOCAL" is selected in the item "TIME AREA")	00:00
TIME AREA	Selects the time location to be displayed, from UTC or local	UTC
TIME FORMAT	Selects the time format to be displayed, 12-hour or 24-hour (fixed to "24H" when "UTC" is selected in the item "TIME AREA")	24H
UNITS OF MEASURE	Selects the unit of measure when displaying speed, distance, and altitude	SPEED: kts DISTANCE: nm ALTITUDE: ft
PINNING	Turns on or off GPS position updates for vessel not underway	OFF
D-GPS	Turns on or off use of SBAS	ON
OUTPUT SENTENCES	Selects a sentence to be output to the USB terminal	OFF
LOGGER INTERVAL	Selects the interval time of logging	1 min
LOG ERASE	Erases the log data	—


## 16 ATIS SETUP

The **HX870E** supports the ATIS (Automatic Transmitter Identification System) used in Inland waterways in Europe. When enabled ATIS mode transmits a unique ATIS code each time the PTT switch is released at the end of a transmission.

Users should check with their local marine regulatory authority in their country for assistance in obtaining an ATIS code.

### 16.1 ATIS CODE PROGRAMMING








1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "ATIS SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "ATIS CODE" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **◀/▶** key to select the first number of your ATIS, then press the **[SELECT]** soft key to step to the next number.
6. Repeat step 5 to set your ATIS (ten digits).
7. If a mistake was made entering in the ATIS, press the **CH▼/CH▲/◀/▶** key to select "<-" or "->", press the **[SELECT]** soft key until the wrong number is selected, then perform step 5.
8. When finished programming the number, press the **[FINISH]** soft key. The Radio will ask you to input the ATIS number again. Perform steps 5 through 7 above.
9. After the second number has been input, press the **[FINISH]** soft key to store the ATIS number in memory.
10. Press the **[OK]** soft key to return to radio operation.

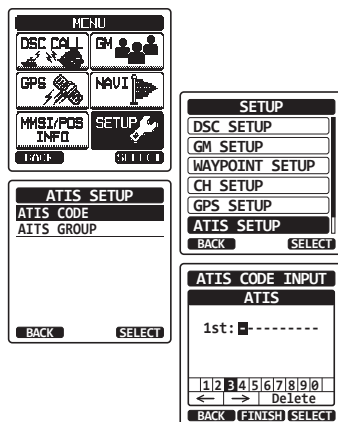

## 16.2 ATIS CH GROUP

The **HX870E** has the capability to turn on and off the ATIS feature for each channel group.

1. Press the **MENU** key to display "MENU".
2. Select "SETUP" with the **CH▼/CH▲/◀/▶** key, then press the **[SELECT]** soft key.
3. Select "ATIS SETUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
4. Select "ATIS GROUP" with the **CH▼/CH▲** key, then press the **[SELECT]** soft key.
5. Press the **CH▼/CH▲** key to select the channel group (International, Canadian, or USA) you wish to change the setting, and press the **[SELECT]** soft key.
6. Press the **CH▼/CH▲** key to select "ON" or "OFF".
7. Press the **[SELECT]** soft key to save the new setting.
8. If you want to set the ATIS feature to another channel group, repeat step 5 through 7.
9. Press the **CLR** key to return to radio operation.

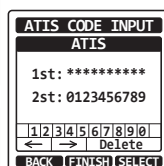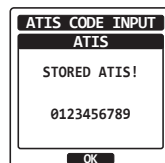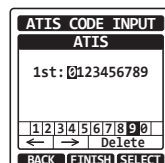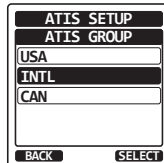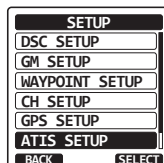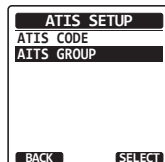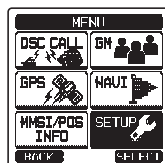

## 17 MAINTENANCE

The inherent quality of the solid-state components used in this transceiver will provide many years of continuous use. Taking the following precautions will prevent damage to the transceiver.



- Never key the microphone unless an antenna or suitable dummy load is connected to the transceiver.
- Use only STANDARD HORIZON approved accessories and replacement parts.

In the unlikely event of serious problems, please contact your Dealer or our repair facility.

### 17.1 REPLACEMENT PARTS

Commonly requested parts, and their part numbers are listed below.

- **SBH-12** Charger Cradle: CB6458001
- **CAT460** Antenna: AY139X001
- **Belt Clip** (CLIP-22): CP9672002
- **MIC/SP** Plastic Cap: RA108700B
- **MIC/SP** Cap O-Ring: RA046760A
- **MIC/SP** Rubber: RA1555900

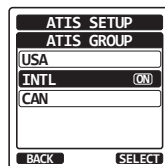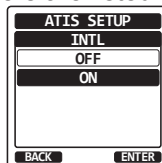

### 17.2 FACTORY SERVICE

In the unlikely event that the radio fails to perform or needs servicing, please contact your Dealer.

An "RA" (Return Authorization) number is not necessary to send a product in for service. Include a brief note describing the problem along with your name, return address, phone number, and proof of purchase.

## 17.3 TROUBLESHOOTING CHART

SYMPTOM	PROBABLE CAUSE	REMEDY
The INTL/USA/CAN modes do not function.	Proper operation not followed.	Specify the item number from "SETUP MENU" – "CH SETUP" – "CH GROUP".
Cannot output sound by pressing and holding the <b>SQL</b> key.	Low battery.	Charge battery. Refer to section 6 of this manual.
	Audio volume level is too low.	Press the <b>VOL+</b> key until background noise outputs.
Cannot transmit a DSC Call.	MMSI number is not programmed.	Program the MMSI number. Refer to section "9.2.2 Programming the MMSI".
Cannot fix the GPS satellites.	Internal GPS receiver is "off".	Internal GPS receiver is "on". Refer to "15.1 GPS ON/OFF".
	Poor location for GPS satellite reception.	Move to a less obstructed position.
Charge indicator does not appear on the display when charging a battery.	Defective battery <b>SBR-13LI</b> .	Contact Standard Horizon dealer.
	The transceiver is not set onto the <b>SBH-12</b> Charger Cradle properly.	Set the transceiver onto the <b>SBH-12</b> Charger Cradle properly.
	Power is not supplied to the <b>SBH-12</b> Charger Cradle.	Connect <b>SAD-11C/U</b> or <b>E-DC-19A</b> to the <b>SBH-12</b> Charger Cradle for AC/DC power supplies.



# 18 CHANNEL ASSIGNMENTS

CH	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	CHANNEL USE
01	156.050	160.650	DUPLEX	—	TELEPHONE
02	156.100	160.700	DUPLEX	—	TELEPHONE
03	156.150	160.750	DUPLEX	—	TELEPHONE
04	156.200	160.800	DUPLEX	—	INTL
05	156.250	160.850	DUPLEX	—	INTL
06	156.300	156.300	SIMPLEX	—	SAFETY
07	156.350	160.950	DUPLEX	—	INTL
08	156.400	156.400	SIMPLEX	—	COMMERCIAL
09	156.450	156.450	SIMPLEX	—	CALLING
10	156.500	156.500	SIMPLEX	—	COMMERCIAL
11	156.550	156.550	SIMPLEX	—	VTs
12	156.600	156.600	SIMPLEX	—	VTs
13	156.650	156.650	SIMPLEX	—	BRG/BRG
14	156.700	156.700	SIMPLEX	—	VTs
15	156.750	156.750	SIMPLEX	LOW	COMMERCIAL
16	156.800	156.800	SIMPLEX	—	DISTRESS
17	156.850	156.850	SIMPLEX	LOW	SAR
18	156.900	161.500	DUPLEX	—	INTL
19	156.950	161.550	DUPLEX	—	INTL
20	157.000	161.600	DUPLEX	—	PORT OPR
21	157.050	161.650	DUPLEX	—	INTL
22	157.100	161.700	DUPLEX	—	INTL
23	157.150	161.750	DUPLEX	—	INTL
24	157.200	161.800	DUPLEX	—	TELEPHONE
25	157.250	161.850	DUPLEX	—	TELEPHONE
26	157.300	161.900	DUPLEX	—	TELEPHONE
27	157.350	161.950	DUPLEX	—	TELEPHONE
28	157.400	162.000	DUPLEX	—	TELEPHONE
60	156.025	160.625	DUPLEX	—	TELEPHONE
61	156.075	160.675	DUPLEX	—	INTL
62	156.125	160.725	DUPLEX	—	INTL
63	156.175	160.775	DUPLEX	—	INTL
64	156.225	160.825	DUPLEX	—	TELEPHONE
65	156.275	160.875	DUPLEX	—	INTL
66	156.325	160.925	DUPLEX	—	INTL
67	156.375	156.375	SIMPLEX	—	BRG/BRG
68	156.425	156.425	SIMPLEX	—	SHIP-SHIP
69	156.475	156.475	SIMPLEX	—	PLEASURE
70	—	156.525	SIMPLEX	—	DSC
71	156.575	156.575	SIMPLEX	—	PLEASURE
72	156.625	156.625	SIMPLEX	—	SHIP-SHIP
73	156.675	156.675	SIMPLEX	—	PORT OPR
74	156.725	156.725	SIMPLEX	—	PORT OPR
75	156.775	156.775	SIMPLEX	LOW	PORT OPR
76	156.825	156.825	SIMPLEX	LOW	PORT OPR
77	156.875	156.875	SIMPLEX	—	PORT OPR
78	156.925	161.525	DUPLEX	—	INTL
79	156.975	161.575	DUPLEX	—	INTL
80	157.025	161.625	DUPLEX	—	INTL
81	157.075	161.675	DUPLEX	—	INTL

CH	TX (MHz)	RX (MHz)	SIMPLEX/DUPLEX	LOW PWR	CHANNEL USE
82	157.125	161.725	DUPLEX	–	INTL
83	157.175	161.775	DUPLEX	–	INTL
84	157.225	161.825	DUPLEX	–	TELEPHONE
85	157.275	161.875	DUPLEX	–	TELEPHONE
86	157.325	161.925	DUPLEX	–	TELEPHONE
87	157.375	157.375	SIMPLEX	–	PORT OPR
88	157.425	157.425	SIMPLEX	–	PORT OPR
M1	157.850	157.850	SIMPLEX	–	–
M2	161.425	161.425	SIMPLEX	–	–

**NOTE 1:** Channel M1 and M2 are assigned to only U.K. version.

**2:** Channel assignment is different depending on the transceiver version.

## 19 WARRANTY

### PLEASE NOTE

To receive warranty service in Europe, for European Sourced products, the purchaser must return the Product, shipment and insurance prepaid to the purchasing dealer or authorized Service Centre in Europe. Contact details for warranty in Europe are available from the dealer in your country or from [www.standardhorizon.co.uk](http://www.standardhorizon.co.uk) where details of warranty terms and contact details for Europe can be obtained.

### STANDARD HORIZON LIMITED WARRANTY

STANDARD HORIZON (the Marine Division of Yaesu Musen Co. Ltd) warrants, to the original purchaser only, each new Marine Product ("Product") manufactured and/or supplied by STANDARD HORIZON against defects in materials and workmanship under normal use and service for a period of 3 years from the date of purchase.

In the event of a defect, malfunction or failure of the Product during the warranty period, STANDARD HORIZON's liability for any breach of contract or any breach of express or implied warranties in connection with the sale of Products shall be limited solely to repair or replacement, at its option, of the Product or part(s) therein which, upon examination by STANDARD HORIZON, appear to be defective or not up to factory specifications. STANDARD HORIZON may, at its option, repair or replace parts or subassemblies with new or reconditioned parts and subassemblies.

STANDARD HORIZON will not warrant installation, maintenance or service of the Products. In all instances, STANDARD HORIZON's liability for damages shall not exceed the purchase price of the defective Product.

STANDARD HORIZON will pay all labor and replacement parts charges incurred in providing the warranty repair service except where purchaser abuse or other qualifying exceptions exist. The purchaser must pay any transportation expenses incurred in returning the Product to STANDARD HORIZON for service.

This limited warranty does not extend to any Product which has been subjected to misuse, neglect, accident, incorrect wiring by anyone other than STANDARD HORIZON, improper installation, or subjected to use in violation of instructions furnished by STANDARD HORIZON, nor does this warranty extend to Products on which the serial number has been removed, defaced, or changed. STANDARD HORIZON cannot be responsible in any way for ancillary equipment not furnished by STANDARD HORIZON which is attached to or used in connection

with Products, or for the operation of the Product with any ancillary equipment and all such equipment is expressly excluded from this warranty.

STANDARD HORIZON disclaims liability for range, coverage, or operation of the Product and ancillary equipment as a whole under this warranty.

STANDARD HORIZON reserves the right to make changes or improvements in Products, during subsequent production, without incurring the obligation to install such changes or improvements on previously manufactured Products. The implied warranties which the law imposes on the sale of this Product are expressly LIMITED, in duration, to the time period specified above. STANDARD HORIZON shall not be liable under any circumstances for consequential damages resulting from the use and operation of this Product, or from the breach of this LIMITED WARRANTY, any implied warranties, or any contract with STANDARD HORIZON. IN CONNECTION WITH THE SALE OF ITS PRODUCTS, STANDARD HORIZON MAKES NO WARRANTIES, EXPRESS OR IMPLIED AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXCEPT AS EXPRESSLY SET FORTH HEREIN.

Some Countries in Europe and States of the USA do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how an implied warranty lasts, so the above limitation or exclusions may not apply. This warranty provides specific rights, there may be other rights available which may vary between countries in Europe or from state to state within the USA.

## 20 CONNECTING A USB DATA TERMINAL TO THE PC

The **HX870E** outputs the following NMEA 0183 sentences 9600: GLL, GGA, GSA, GSV, RMC, DSC and DSE.


If you have further inquiries, please feel free to contact Product Support at:

Phone: (800) 767-2450

Email: [marinetech@yaesu.com](mailto:marinetech@yaesu.com)

You can also download the log data from the radio by using the PC Programming Software which may be downloaded from the Standard Horizon website. The PC Programming Software is compatible with Windows® Vista®, Windows 7, and Windows 8.

To connect a PC, use the supplied USB cable through the **DATA** jack of the **HX870E**.

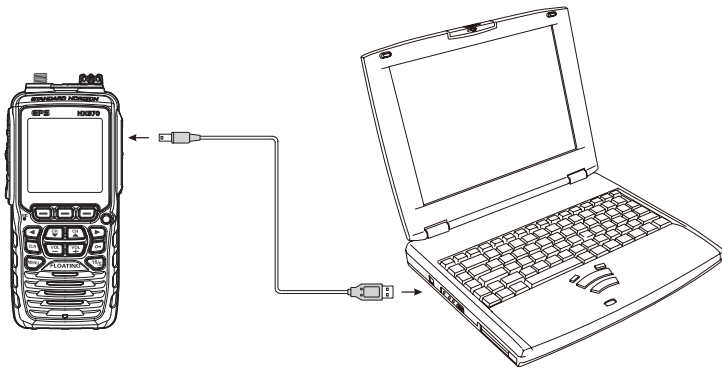

### CAUTION

The **DATA** jack is NOT designed to be waterproof when the cover is opened. Connect the radio and PC in a dry location.

## 21 SPECIFICATIONS

Performance specifications are nominal, unless otherwise indicated, and are subject to change without notice. Measured in accordance with TIA/EIA-603.

### 21.1 GENERAL

Frequency Range .....	TX: 156.025 MHz - 157.425 MHz RX: 156.050 MHz - 162.000 MHz
Channel Spacing .....	25 kHz
Frequency Stability .....	±3 ppm (-15 °C to +55 °C)
Emission Type .....	16K0G3E for Voice, 16K0G2B for DSC
Antenna Impedance .....	50 Ω
Supply Voltage.....	7.4V DC, Negative Ground (Battery Terminal)
Current Consumption .....	330 mA (Receive) 100 mA (Standby, GPS On) 60 mA (Standby, GPS Off) 1.6 A / 1.0 A / 0.7 A (TX: 6W / 2W / 1W)
Operating Temperature.....	-15 °C to +55 °C
DSC Individual Directory .....	Store up to 100
DSC Group Directory.....	Store up to 20
DSC Format.....	ITU-R M.493-13
NMEA Output.....	DSC, DSE, GLL, GGA, GSA, GSV, and RMC
Case Size (W x H x D).....	62 mm x 138 mm x 43 mm (w/o knob & antenna)
Weight .....	322 g w/ SBR-13LI, hand strap, belt clip & antenna

### 21.2 TRANSMITTER

RF Power Output.....	6 W (HI) / 2 W (MEDIUM) / 1 W (LOW) (@7.4 V)
Modulation Type .....	Variable Reactance
Maximum Deviation .....	±5 kHz
Spurious Emission.....	-75 dBc typical
Microphone Impedance .....	2 kΩ

## 21.3 RECEIVER (for Voice and DSC)

Circuit Type.....Double-Conversion Superheterodyne  
Intermediate Frequencies.....for Voice 1st: 38.85 MHz  
2nd: 450 kHz  
for DSC 1st: 30.4 MHz  
2nd: 450 kHz  
Sensitivity .....for Voice 0.25  $\mu$ V for 12 dB SINAD  
for DSC 0.5  $\mu$ V for 12 dB SINAD  
Adjacent Channel Selectivity ..... 70 dB typical  
Intermodulation ..... 70 dB typical  
Hum & Noise Ratio ..... 40 dB  
Selectivity ..... 12 kHz / 25 kHz (–6 dB / –60 dB)  
AF Output (Internal SP) ..... 700 mW @16  $\Omega$  for 10 % THD (@7.4 V)

## 21.4 GPS

Receiver Channels ..... 66 Channels  
Sensitivity ..... Less than –147 dBm  
Time to First Fix ..... 1 min typical (@Cold Start)  
5 sec typical (@Hot Start)  
Geodetic Datum ..... WGS84

## 21.5 NMEA OUTPUT

NMEA 0183 Output Sentence (9600 baud) ..... DSC, DSE, GGA, GLL,  
RMC, GSA & GSV

## SYMBOL PLACED ON THE EQUIPMENT

== Direct current  
I "ON" power  
○ "OFF" power

## Note



## Note

### Disposal of your Electronic and Electric Equipment

Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Electronic and Electric Equipment should be recycled at a facility capable of handling these items and their waste by products.

In EU countries, please contact your local equipment supplier representative or service center for information about the waste collection system in your country.



### Attention in case of use

This transceiver works on frequencies which are not generally permitted.

As for the actual usage, the user has to possess an amateur radio licence.

Usage is allowed only in the frequency bands which are allocated for amateur radios.

List of national codes

AT	BE	BG	CY	CZ	DE
DK	ES	EE	FI	FR	GB
GR	HR	HU	IE	IT	LT
LU	LV	MT	NL	PL	PT
RO	SK	SI	SE	CH	IS
LI	NO	—	—	—	—

# ***YAESU***

**Yaesu UK Ltd**  
Unit 12, Sun Valley Business Park  
Winnall Close  
Winchester SO23 0LB  
United Kingdom  
Tel: +44 (0)1962 866667  
Fax: +44 (0)1962 856801  
Email: sales@yaesu.co.uk

## **Declaration of Conformity**

**Nr. YUK-DOC-0401-15**

We, Yaesu UK Ltd. certify and declare under our sole responsibility that the following equipment complies with the essential requirements of the Directive 1999/5/EC and 2011/65/EU.

Type of Equipment	VHF Waterproof Marine Handheld Transceiver
Brand Name	Standard Horizon
Model Number	HX870E
Manufacturer	YAESU MUSEN CO. LTD.
Address of Manufacturer	Tennozu Parkside Building, 2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo, 140-0002 Japan

### **Applicable Standards:**

This equipment is tested to and conforms to the essential requirements of directive, as included in following standards:

Health 1999/5/EC Art. 3 (1) (a)	EN 50385:2002
Safety 1999/5/EC Art. 3 (1) (a)	EN 60950-1:2006 + A12:2011
EMC 1999/5/EC Art. 3 (1) (b)	EN 301 843-02 V1.2.1
Radio Spectrum 1999/5/EC Art. 3 (2)	EN 302 885-02 V1.2.2
	EN 300 338-05 V1.1.1
	EN 300 698-02 V1.2.1
Radio Spectrum 1999/5/EC Art 3 (3) (e)	EN 302 885-03 V1.2.2
	EN 300 698-03 V1.2.1.
ROHS2 2011/65/EU Art. 7 (b)	EN 50581:2012

The technical documentation as required by the Conformity Assessment procedures is kept at the following address:

Company  
Address  
Technical Construction file

Yaesu UK Ltd  
Unit 12, Sun Valley Business Park, Winnall Close

Winchester, Hampshire UK SO23 0LB  
Issued by: Yaesu Musen Co. Ltd, Tokyo Japan  
File No: YETA00383  
Drawn up in: Winchester, Hampshire UK  
Date: 01-April 2015

Signed for and on behalf of Yaesu UK Ltd



Name and position:

PCJ Bigwood  
Technical Sales Manager

## ***STANDARD HORIZON***

*Nothing takes to water like Standard Horizon*

**CE 0168** 

### **YAESU MUSEN CO., LTD.**

Tennozu Parkside Building  
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

### **YAESU USA**

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

### **YAESU UK**

Unit 12, Sun Valley Business Park, Winnall Close  
Winchester, Hampshire, SO23 0LB, U.K.

Copyright 2015  
YAESU MUSEN CO., LTD.  
All rights reserved.

No portion of this manual  
may be reproduced  
without the permission of  
YAESU MUSEN CO., LTD.

Printed in China

